

Salton ECO1819R

Salton Essentials Electric Can Opener

Model: ECO1819R User Manual

1. INTRODUCTION

Thank you for choosing the Salton Essentials Electric Can Opener. This appliance is designed for convenient and efficient opening of various can sizes, and also features an integrated bottle opener and knife sharpener. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- To protect against electrical hazards, do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

3. PARTS DESCRIPTION



This image displays the Salton Essentials Electric Can Opener in red, with a standard-sized can positioned for opening.

The can opener features a sleek, upright design, a cutting mechanism at the top, and a stable base. The 'Salton Essentials' logo is visible on the lower front of the unit.

1. **Cutting Mechanism:** Engages with the can lid for opening.
2. **Lid Retention Magnet:** Holds the lid after opening.
3. **Can Guide:** Helps position the can correctly.
4. **Power Cord:** For electrical connection.
5. **Integrated Bottle Opener:** Located on the side or back of the unit.
6. **Integrated Knife Sharpener:** Located on the side or back of the unit.

4. SETUP

1. **Unpack:** Carefully remove the can opener from its packaging. Retain packaging for future storage or disposal.
2. **Placement:** Place the can opener on a flat, stable surface, such as a kitchen counter, away from the edge.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. The unit features cord storage for neat organization.

5. OPERATING INSTRUCTIONS

5.1 Opening Cans

1. Lift the cutting mechanism lever.

2. Position the can so that the rim is under the cutting wheel and the can guide.
3. Press down the cutting mechanism lever firmly until the cutting wheel pierces the can lid. The motor will start automatically.
4. Hold the can gently until it completes a full rotation and the lid is fully cut. The can opener is designed to open tin cans of all sizes.
5. Once the can is open, the motor will stop. Lift the cutting mechanism lever to release the can. The lid will be held by the retention magnet.
6. Carefully remove the lid from the magnet and dispose of it.

5.2 Using the Bottle Opener

Locate the integrated bottle opener on the unit. Place the bottle cap under the opener and press down firmly to remove the cap.

5.3 Using the Knife Sharpener

Locate the integrated knife sharpener slot. Hold the knife with the blade facing away from you. Insert the knife blade into the sharpening slot at a slight angle and pull it towards you with light, even pressure. Repeat several times until desired sharpness is achieved. Always exercise caution when sharpening knives.

6. MAINTENANCE AND CLEANING

- **Always unplug the appliance before cleaning.**
- Wipe the exterior of the can opener with a damp cloth. Do not use abrasive cleaners or scourers.
- The cutting wheel and blade assembly can be wiped clean with a damp cloth. For stubborn food residue, a small brush may be used. Ensure the blade is dry before storage.
- Do not immerse the can opener in water or any other liquid.

7. TROUBLESHOOTING

- **Can opener does not operate:** Ensure the unit is properly plugged into a working electrical outlet. Check if the cutting mechanism lever is fully pressed down to engage the motor.
- **Can does not open or blade binds:** Ensure the can is positioned correctly with the rim under the cutting wheel and against the can guide. Some cans with thick rims or unusual shapes may be difficult to open. If the blade binds on labels, try to remove the label from the area where the blade will cut.
- **Lid falls into can:** Ensure the lid retention magnet is clean and free of debris. The magnet should hold the lid securely after cutting.

8. SPECIFICATIONS

Model Number	ECO1819R
Brand	Salton Essentials
Power	70 Watts

Material	Stainless Steel (Blade)
Operation Mode	Automatic
Item Weight	800 g
Dimensions (approx.)	24 x 11.8 x 11.8 cm
UPC	061283114433

9. WARRANTY AND SUPPORT

This Salton Essentials product is covered by a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official Salton website. You may also contact Salton customer service directly for assistance.

Salton Customer Service: Please refer to your product packaging or the official Salton website for current contact information.
