

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BOBLOV](#) /
- › [BOBLOV Universal Golf Rangefinder Case Instruction Manual](#)

BOBLOV Universal Rangefinder Case

BOBLOV Universal Golf Rangefinder Case Instruction Manual

Model: Universal Rangefinder Case

1. PRODUCT OVERVIEW

The BOBLOV Universal Rangefinder Case is designed to protect your golf rangefinder from minor impacts and environmental elements. This EVA hard cover case offers a secure and convenient way to carry your device on the golf course or during travel.

It features a durable construction, a secure zipper closure, and a carabiner clip for easy attachment to your golf bag.



Image 1.1: The BOBLOV Rangefinder Case shown partially open with a rangefinder inserted, highlighting its protective design.

2. KEY FEATURES

- **Protective Design:** EVA hard cover construction safeguards your rangefinder from bumps and falls.
- **Waterproof and Shockproof:** Provides enhanced protection against water and impacts.
- **Secure Closure:** Equipped with a durable zipper to keep your device safely enclosed.
- **Easy Portability:** Includes a carabiner clip for quick and easy attachment to golf bags, belts, or other gear.
- **Universal Compatibility:** Designed to fit most standard golf rangefinders.



Image 2.1: Detailed view of the case construction, showing the nylon material, fixed strap, and durable zipper for secure closure.

3. SETUP AND INSTALLATION

1. **Unpack the Case:** Remove the rangefinder case from its packaging.
2. **Attach Carabiner (Optional):** If not already attached, secure the carabiner clip to the designated loop on the case.
3. **Secure to Golf Bag:** Use the carabiner clip to attach the case to a loop or strap on your golf bag for convenient access during play.



Image 3.1: Illustration of the carabiner clip and its attachment mechanism on the case, allowing for easy hook-up.



Image 3.2: The rangefinder case securely attached to a golf bag via its carabiner clip, demonstrating its portability.

4. OPERATING INSTRUCTIONS

1. **Inserting the Rangefinder:** Unzip the case completely. Carefully place your rangefinder inside, ensuring it fits snugly without forcing.
2. **Securing the Rangefinder:** Zip the case closed. The durable zipper ensures your device remains protected.
3. **Accessing the Rangefinder:** When needed, simply unzip the case. The inclined zipper design allows for quick and easy retrieval of your device.



Image 4.1: The case with a rangefinder inside, illustrating the inclined zipper for easy access.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the exterior of the case with a damp cloth and mild soap if necessary. Avoid harsh chemicals.
- **Drying:** Allow the case to air dry completely before storing or re-using. Do not machine wash or tumble dry.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.
- **Inspection:** Periodically check the zipper and carabiner for any signs of wear or damage.

6. TROUBLESHOOTING

Issue: Rangefinder does not fit inside the case.

Solution: Verify the dimensions of your rangefinder against the case specifications. This case supports a maximum length of 12cm (4.72 in) and a maximum width of 7.5cm (2.95 in). If your rangefinder exceeds these dimensions, it may not fit. Contact customer support if you believe there is an issue with the case's sizing.

Issue: Zipper is stiff or difficult to operate.

Solution: Ensure no fabric or debris is caught in the zipper teeth. Apply a small amount of zipper lubricant or wax if needed.

Issue: Carabiner clip is damaged or broken.

Solution: The carabiner is designed for convenience. If it becomes damaged, it can be replaced with a standard carabiner of similar size. Ensure any replacement is securely attached.

7. SPECIFICATIONS

Product Dimensions	4.72 x 3.15 x 2.36 inches (12 x 8 x 6 cm)
Item Weight	4.4 ounces (125 grams)
Material	EVA Hard Cover, Nylon
Color	Red (as per product variant)
Special Feature	Heavy Duty Protection, Waterproof, Shockproof



Maximum support
length: 12CM / 4.72 in



Maximum support
width: 7.5CM / 2.95 in



Image 7.1: Visual representation of the internal dimensions, indicating maximum support for rangefinders up to 12cm (4.72 in) in length and 7.5cm (2.95 in) in width.

8. WARRANTY AND SUPPORT

BOBLOV stands behind the quality of its products. If you encounter any issues with your rangefinder case, particularly if your rangefinder does not fit as expected, please contact BOBLOV customer support directly for assistance. We are committed to ensuring customer satisfaction and will provide a refund or suitable solution without hassle.

For further inquiries or support, please refer to the contact information provided with your purchase or visit the official BOBLOV website.