

[Manuals.plus](#) /

› [DinoFire](#) /

› DinoFire Wireless Presenter User Manual

DinoFire FR02-01

DinoFire Wireless Presenter User Manual

Model: FR02-01

Brand: DinoFire

1. INTRODUCTION

The DinoFire Wireless Presenter is a versatile tool designed to enhance your presentations. Featuring dual Bluetooth and 2.4GHz modes, a bright red light pointer, and intuitive controls, it allows for seamless navigation through slides and media from a distance. This manual provides comprehensive instructions for setup, operation, and maintenance of your device.



Image: The DinoFire Wireless Presenter, a sleek black device with control buttons and a red laser pointer emitting from its tip.

Package Contents:

- 1 x Wireless Presenter Remote Control
- 1 x Wireless Receiver
- 1 x User Manual (this document)
- 1 x Portable Case

2. KEY FEATURES

- **Dual Mode Connectivity:** Supports both Bluetooth 4.2 and 2.4GHz RF wireless modes, allowing for flexible connection options. Easily switch between modes with a dedicated button.



Image: The presenter positioned between two laptops, illustrating its dual Bluetooth and 2.4GHz connectivity options.

- **Plug & Play Functionality:** No software installation required for 2.4GHz mode. Simply plug in the USB receiver and begin your presentation. (Mac users may require a simple initial setup for Bluetooth mode).

Plug & Play

Applicable to Windows, Mac OS, Android, Powerpoint, Google Slides, Prezi, iwork, MS Word, Excel, ACD See, Website, etc.



Image: A hand holding the presenter, with icons below indicating features like hyperlink, black/full screen, switch windows, page flip, and red light, emphasizing its plug-and-play nature.

- **Bright Red Light Pointer:** A highly visible red light pointer with a range of over 330 feet (100 meters) ensures your audience can easily follow your points on most backgrounds.

Bright Red Light

Red light is bright enough to see against most backgrounds; With a long control range for you to freely move around the rooms



Image: A close-up of the presenter's tip, showing a bright red laser beam extending from it, with text indicating Bluetooth, Clicker, and Red Light distances.

- **Long Control Range:** Offers a control range of up to 98 feet (30 meters) for both Bluetooth and 2.4GHz modes, providing freedom of movement during presentations.
- **Comprehensive Functionality:** Supports essential presentation functions including:
 - Hyperlink activation
 - Volume control for media
 - Switching between open windows
 - Full screen / Black screen toggle
 - Page Up / Page Down navigation
- **Wide Compatibility:** Compatible with various operating systems (Windows 2003/XP/Vista/7/8/10, Mac OS, Linux, Android) and presentation software (PowerPoint, Google Slides, iWork (Keynote & Numbers & Pages), Prezi, PDF, MS Word, Excel, ACD See, Website).
- **Energy Saving:** Features a 3-second auto-sleep function to conserve battery life. Press any button to wake the device.
- **Portable Design:** Lightweight (25g) and compact (139*18*20mm) with a convenient pen clip design for easy carrying.



Image: The presenter clipped onto a blue folder, demonstrating its pen clip design for portability.

3. SETUP INSTRUCTIONS

3.1. Battery Installation

The DinoFire Wireless Presenter requires one AAA battery (not included). To install the battery:

1. Locate the battery cover on the back of the presenter.
2. Slide the battery cover open.
3. Insert one AAA battery, ensuring the correct polarity (+/-) as indicated inside the battery compartment.
4. Close the battery cover securely.

3.2. Connecting via 2.4GHz Mode (Recommended for most users)

This mode offers plug-and-play convenience without requiring Bluetooth pairing.

1. Take out the USB wireless receiver from the bottom of the presenter.
2. Plug the USB receiver into an available USB port on your computer.

3. Slide the mode switch on the side of the presenter to the "RF" position.
4. The presenter should automatically connect to your computer. The indicator light on the presenter will turn blue when connected.
5. You can now use the presenter for navigation.

3.3. Connecting via Bluetooth Mode (For Mac and other Bluetooth-enabled devices)

This mode is ideal for devices without a USB port or when a direct Bluetooth connection is preferred. (Not recommended for iPad).

1. Ensure the USB wireless receiver is NOT plugged into your computer.
2. Slide the mode switch on the side of the presenter to the "BT" (Bluetooth) position.
3. On your computer or device, go to Bluetooth settings and turn Bluetooth on.
4. Search for new devices. The presenter should appear as "DinoFire Presenter" or similar.
5. Select the presenter to pair. The indicator light on the presenter will turn blue once successfully paired.
6. For Mac users, a simple setup might be required upon first connection. Follow on-screen prompts if any appear.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for effective presentation control.



Image: A detailed diagram of the presenter, labeling each button and component, including the pointer button, page up/down, volume controls, and the RF/BT switch.



Image: The presenter pointing towards a projection screen displaying a presentation slide with a hyperlink, illustrating the hyperlink function.

Manage Volume

Press the "+" or "-" to adjust the volume up or down on video or MP3

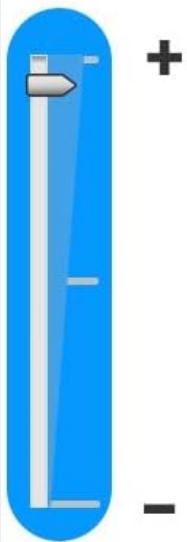


Image: A close-up of the presenter's side, showing the '+' and '-' buttons for volume control, with a volume icon indicating its function.

Switch windows

Long press the TAB button for switching different windows



Image: The presenter shown with multiple overlapping windows in the background, illustrating its ability to switch between different applications.

Button/Feature	Function
Pointer Button (Sun icon)	Activates the red light pointer. Press and hold to keep the laser on.
Page Up (Up arrow)	Moves to the previous slide/page.
Page Down (Down arrow)	Moves to the next slide/page.
Play/Full Screen (Rectangle icon)	Press and hold to toggle between full screen and normal view in presentation software. Single press may initiate play in some applications.
Black Screen (Rectangle icon)	Press and hold the Play/Full Screen button to toggle a black screen during a presentation.

Button/Feature	Function
Hyperlink (Rectangle icon)	Single press the Play/Full Screen button to select a hyperlink. Double press to open the selected hyperlink.
Volume Up (+)	Increases system volume.
Volume Down (-)	Decreases system volume.
Switch Windows (Long Press TAB Key)	Long press the designated button (often the Play/Full Screen button, or a specific TAB button if present) to switch between open application windows.
RF/BT Switch	Slides to select either 2.4GHz RF mode or Bluetooth mode.

Note: The specific button for "Switch Windows" might be integrated with another function (e.g., long press of the Play/Full Screen button) or be a dedicated button depending on the exact model revision. Refer to the button layout diagram for your specific unit.

5. SPECIFICATIONS

Feature	Detail
Technology	Radio Frequency
Frequency	Bluetooth & 2.4GHz
Max Output	Less than 5mW
Light Distance	>200m (330ft)
Control Range (Bluetooth/2.4G)	98FT (30m)
Battery Type	1 x AAA Battery (Not included)
Working Voltage	1.5V
Sleep Current	Less than 10uA
Dimensions (L*W*H)	139mm * 18mm * 20mm (5.47 * 0.71 * 0.79 inches)
Weight (Presenter)	25g (0.88 ounces)
Receiver Operation System	XP, Windows 7/8/10, Mac OS, Linux, Android
USB Version (Receiver)	USB 1.1, compatible with USB2.0, USB 3.0
Weight (Receiver)	1.6g (0.06 ounces)
Model Number	FR02-01

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace the AAA battery when the indicator light on the presenter becomes dim or unresponsive.

Always use a fresh, high-quality AAA battery.

- **Storage:** When not in use for extended periods, remove the battery to prevent leakage. Store the presenter and receiver in the provided portable case in a cool, dry place.
- **Handling:** Avoid dropping the presenter or exposing it to extreme temperatures or moisture.

7. TROUBLESHOOTING

Problem	Possible Cause & Solution
Presenter is unresponsive.	◦ Low Battery: Replace the AAA battery with a fresh one. ◦ Incorrect Mode: Ensure the RF/BT switch is set to the correct mode (RF for USB receiver, BT for Bluetooth pairing). ◦ Not Connected: For 2.4GHz mode, ensure the USB receiver is securely plugged into a working USB port. For Bluetooth mode, ensure it is paired correctly in your device's Bluetooth settings. ◦ Out of Range: Move closer to your computer/device. The effective range is 98ft (30m).
Red light pointer is dim or not working.	◦ Low Battery: Replace the AAA battery. ◦ Obstruction: Ensure there is no physical obstruction blocking the laser emitter.
Functions (e.g., hyperlink, volume) not working.	◦ Software Compatibility: Verify that your presentation software supports these functions with a remote presenter. ◦ Operating System Settings: For Mac users, ensure any initial setup prompts were completed. Some advanced functions might require specific OS permissions. ◦ Application Focus: Ensure the presentation application is the active window on your computer.
Presenter disconnects frequently.	◦ Interference: Move away from other wireless devices or sources of electromagnetic interference. ◦ Distance: Ensure you are within the optimal operating range. ◦ Low Battery: Replace the AAA battery.

8. WARRANTY AND SUPPORT

DinoFire products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your purchase or visit the official DinoFire website. If you encounter any issues not covered in this manual or require further assistance, please contact DinoFire customer support through their official channels. Keep your purchase receipt for warranty claims.

Online Support: For the latest FAQs, troubleshooting tips, and contact information, please visit the DinoFire official website or the product page on the retailer's website where you made your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question