

[Manuals.plus](#) /

> [PRITECH](#) /

> PRITECH Replacement Roller Heads for Electric Foot File Pedicure Tools User Manual

## PRITECH MT

# PRITECH Replacement Roller Heads for Electric Foot File Pedicure Tools User Manual

Model: MT

## INTRODUCTION

This manual provides essential information for the safe and effective use of your PRITECH Replacement Roller Heads. These rollers are designed to fit PRITECH Electric Pedicure Foot Files, offering various coarse levels for optimal foot care.



Image: PRITECH Replacement Roller Heads with device.

## PRODUCT FEATURES

The PRITECH Replacement Roller Heads come in three distinct coarse levels to address different foot care needs:

- **Extra Coarse:** Designed for effectively removing the toughest hard skin and stubborn calluses.
- **Regular Coarse:** Ideal for softening and smoothing regular hard skin and freshly formed dead skin.
- **Gentle Coarse:** Suitable for a perfect finishing touch and maintaining smooth feet daily, also for more delicate skin care.

These washable rollers feature a curved design for optimal contact with your feet, ensuring safe and effective removal of rough, dry, cracked, and callused skin.

# SELECTED QUARTZ GRINDING HEADS

> TO FURTHER CARE FOR FOOT SKIN



Image: Three types of PRITECH roller heads.

# THREE TYPES OF ROLLERS GIVE YOU MORE CHOICES

COARSE / FINE ROLLERS, SUITABLE FOR DIFFERENT CUTICLES



## GENTLE COARSE ROLLER

For Daily feet Maintenance



## REGULAR COARSE ROLLER

For Freshly formed  
dead skin on the feet



## EXTRA COARSE ROLLER

For Toughest & Hard Callus Extra



Image: Detailed view of roller head types and their applications.

## SETUP: INSTALLING REPLACEMENT ROLLER HEADS

Follow these steps to safely replace the roller head on your PRITECH Electric Pedicure Foot File:

1. **Turn Device Off:** Ensure your electric foot file is turned off before attempting to remove or install a roller head.
2. **Remove Old Roller:** Locate the eject button on the side of the unit. Press this button and gently pull the old roller head away from the device.



Image: Pressing the eject button to remove a roller.

3. **Insert New Roller Head:** Align the new roller head with the device. Press in the pins on either side of the roller head and insert the head into the device until it clicks securely into place.



Image: Steps for installing a new roller head.

4. **Verify Security:** Before use, gently tug on the new roller head to ensure it is securely attached to the

device.

## OPERATING INSTRUCTIONS

Once the roller head is securely installed, you can begin using your PRITECH Electric Pedicure Foot File. The different coarse levels allow for tailored treatment:

1. **Select Roller:** Choose the appropriate roller head based on the condition of your skin (Extra Coarse for severe calluses, Regular Coarse for general smoothing, Gentle Coarse for daily maintenance).
2. **Prepare Feet:** For best results, ensure your feet are clean and dry. The device is designed for use on dry skin for optimal exfoliation.
3. **Activate Device:** Turn on your PRITECH Electric Pedicure Foot File.
4. **Apply to Skin:** Gently glide the rotating roller head over the areas of hard, dry, or callused skin. Apply light to moderate pressure. Do not press too hard, as this can cause the device to stop or irritate the skin.
5. **Monitor Progress:** Continuously check your skin to avoid over-exfoliation. Stop when the skin feels smooth and soft.
6. **Post-Treatment Care:** After use, turn off the device. Wash your feet to remove any dead skin particles. Apply a moisturizing foot cream to keep your feet hydrated and smooth.



Image: Foot care routine steps.



Image: Before and after results of using the foot file.

## MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your PRITECH Replacement Roller Heads:

1. **Cleaning:** The roller heads are washable. After each use, remove the roller head from the device and rinse it under running water to remove dead skin debris. Allow it to air dry completely before reattaching or storing.
2. **Storage:** Store roller heads in a clean, dry place away from direct sunlight.
3. **Replacement:** Replace the roller head when it becomes less effective or shows signs of wear. The frequency of replacement depends on usage and the amount of hard skin being treated.

## TROUBLESHOOTING

If your PRITECH Electric Pedicure Foot File is not performing as expected with the replacement roller heads, consider the following:

- **Reduced Effectiveness:** If the roller head is no longer effectively removing hard skin, it may be worn out and require replacement. Refer to the "Maintenance" section for guidance.
- **Roller Not Spinning:** Ensure the roller head is correctly installed and securely clicked into place. If it is loose, it may not engage properly with the device's motor.
- **Device Stops During Use:** This may indicate excessive pressure is being applied. Reduce pressure and allow the roller to work gently on the skin. If the issue persists, check the main device's battery level or power source.

## SPECIFICATIONS

- **Brand:** PRITECH
- **Model Number:** MT
- **Item Form:** Roller
- **Material Type:** Velvet (referring to the texture/feel of the abrasive surface)
- **Number of Items:** 6 replacement rollers per pack
- **Coarse Levels:** Extra Coarse, Regular Coarse, Gentle Coarse
- **Compatibility:** Designed for PRITECH Electronic Pedicure Foot Files

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your PRITECH Replacement Roller Heads or Electric Pedicure Foot File, please refer to the documentation included with your main device or contact PRITECH customer service directly. Keep your purchase receipt for warranty claims.