

[Manuals.plus](#) /

> [Supabear](#) /

> Supabear Portable Handheld Fan, Dual-Head (Model V36) Instruction Manual

Supabear V36

Supabear Portable Handheld Fan (Model V36) Instruction Manual

Brand: Supabear | Model: V36

1. INTRODUCTION

Thank you for choosing the Supabear Portable Handheld Fan. This compact and versatile fan is designed to provide personal cooling wherever you go. Featuring a dual-head design, two-speed settings, and USB rechargeability, it offers convenience and effective airflow for various indoor and outdoor activities.

2. KEY FEATURES

- **Compact and Lightweight Design:** This fan can be folded for handheld use (180°) or positioned as a desktop fan (270°). Its small size (3.9 x 1.6 x 1.2 inches) and light weight (2.4 oz) make it highly portable.
- **Dual-Head for Enhanced Airflow:** Equipped with unique double blades and an upgraded brushless motor, it delivers quiet yet powerful wind.
- **Two Airflow Modes:** Easily switch between low and high wind speeds to suit your preference.
- **Durable Battery Life:** Provides approximately 7 hours of operation on low speed and 2-3 hours on high speed after a full charge.
- **USB Rechargeable:** Conveniently recharges via any USB power source (e.g., laptop, power bank). A full charge takes approximately one hour.
- **Safe Operation:** Features ultra-soft blades made from eco-friendly ABS+TPE material, designed to stop if accidentally touched, ensuring safety.



Image: The Supabear fan being used in different settings, including outdoors, for makeup, and at a desk.

Only 68g / 2.4oz Lightweight

No stress for long time carries



Image: A visual comparison showing the fan's lightweight design (68g) next to a smartphone (208g).

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Supabear Portable Handheld Fan (Model V36)
- 1 x USB Charging Cable



Image: The Supabear fan shown with its included USB charging cable.

4. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please read and follow these instructions:

- Do not insert fingers or any foreign objects into the fan blades while it is operating. The blades are soft and designed to stop upon contact, but caution is advised.
- Keep the fan away from water and other liquids. Do not use in wet environments.
- Do not disassemble, repair, or modify the fan yourself. Contact customer support if service is required.
- Keep out of reach of small children without adult supervision.
- Use only the provided USB cable or a certified equivalent for charging.
- Avoid exposing the fan to extreme temperatures or direct sunlight for prolonged periods.



Image: A hand demonstrating the soft, safe blades of the fan.

5. SETUP

5.1 Charging the Fan

1. Locate the Micro USB charging port on the side of the fan.
2. Connect the provided USB charging cable to the fan's port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, power bank, wall adapter).
4. The fan will indicate charging status (e.g., an indicator light). A full charge takes approximately one hour.

5.2 Folding and Unfolding

The fan features a foldable design for versatile use:

- **Handheld Mode (180°):** Unfold the fan completely until it forms a straight handle.
- **Desktop Mode (270°):** Fold the fan at a 270-degree angle to create a stable base for tabletop use.

- **Storage Mode:** Fold the fan completely to its compact form for easy storage in a pocket or purse.


 Two stall wind


 Quiet and cool


 Double wind


 Lightness


 Desk fan



Image: The fan demonstrating its folded, handheld, and desktop configurations, with a close-up of the USB charging port.



Image: The fan folded into its compact, portable size.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Adjustment

The fan is controlled by a single button:

1. **First Press:** Turns the fan on to Low speed.
2. **Second Press:** Increases the fan speed to High.
3. **Third Press:** Turns the fan off.



Image: A diagram illustrating the single-button control for two speed settings and power off.

7. MAINTENANCE

7.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the fan in water.

7.2 Storage

When not in use, fold the fan into its compact form and store it in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on	Low battery or no charge.	Charge the fan using the provided USB cable.
Weak airflow	Fan is on low speed.	Press the power button again to switch to high speed.
Short battery life	Battery not fully charged or battery degradation over time.	Ensure the fan is fully charged. Battery performance may decrease over extended use.
Fan stops unexpectedly	Blades were touched or an object obstructed them.	Remove any obstruction and restart the fan.

9. SPECIFICATIONS

Brand: Supabear

Model: V36

Dimensions (D x W x H): 1.2" x 1.6" x 3.9"

Weight: 2.4 ounces

Power Source: Battery Powered

Battery Capacity: 500 mAh

Charging Port: Micro USB

Input Voltage: 5V

Number of Speeds: 2

Noise Level: 38 Decibels

Material: Plastic (ABS+TPE)

Motor Type: Brushless

Usage: Indoor/Outdoor

Mini Size & Foldable

Compact Pocket Fan, take it anywhere



Image: The fan displaying its physical dimensions.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Supabear customer service directly.
Keep your purchase receipt for any warranty claims.

© 2024 Supabear. All rights reserved.