

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ASHATA](#) /

› [ASHATA Mini 1080P 4K Full HD Digital Media Player Instruction Manual](#)

ASHATA ASHATAq1zgi5ct4-02

ASHATA Mini 1080P 4K Full HD Digital Media Player Instruction Manual

Model: ASHATAq1zgi5ct4-02

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your ASHATA Mini 1080P 4K Full HD Digital Media Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- ASHATA Mini Digital Media Player
- Remote Control
- Power Adapter (5.0V/1.5A)
- AV Cable (Yellow, Red, White)
- VGA Cable



Image: Contents of the ASHATA Digital Media Player package, including the player, remote control, AV cables, VGA cable, and power adapter.

PRODUCT OVERVIEW

The ASHATA Mini Digital Media Player is a compact device designed for playing various media files from USB drives and SD cards on your television or monitor. It features multiple connectivity options for broad compatibility.



Image: ASHATA Digital Media Player showing front and rear ports including SD card slot, USB, DC power, AV, VGA, Optical, and HDMI.

Device Ports and Controls:

- **SD Card Slot:** For inserting SD memory cards.
- **USB Port:** For connecting USB flash drives or external hard drives.
- **DC IN:** Power input port.
- **AV Output:** For connecting to older TVs using the included AV cable.
- **VGA Output:** For connecting to monitors or projectors.
- **Optical Output:** For digital audio output.
- **HDMI Output:** For connecting to modern TVs and monitors for high-definition video and audio.
- **On-device Controls:** Basic playback and navigation buttons.

SETUP

1. Connecting Power

1. Connect the provided power adapter to the DC IN port on the media player.
2. Plug the power adapter into a wall outlet.

2. Connecting to a Display Device

Choose one of the following connection methods based on your display device:

- **HDMI Connection (Recommended for HD):** Connect an HDMI cable (not included) from the player's HDMI output to an HDMI input on your TV or monitor.
- **VGA Connection:** Connect the included VGA cable from the player's VGA output to the VGA input on your monitor or projector.
- **AV Connection (for older TVs):** Connect the included AV cable (yellow, red, white) from the player's AV output to the corresponding AV input ports on your TV.

3. Inserting Storage Devices

- **USB Drive:** Insert your USB flash drive or external hard drive into the USB port on the player.

- **SD Card:** Insert your SD memory card into the SD card slot.

Image: Diagram illustrating various connection methods for the ASHATA Digital Media Player, including HDMI, VGA, and AV to different display types and audio systems.

OPERATION

1. Powering On/Off

Press the 'POWER' button on the remote control or the power button on the device to turn the player on or off.

2. Using the Remote Control

The remote control provides full functionality for navigating menus and controlling media playback.



Image: A hand holding the remote control pointing at the ASHATA Digital Media Player, illustrating remote operation.

3. Media Playback (Video, Music, Photo)

1. Navigate the main menu using the arrow keys and 'ENTER' button on the remote.
2. Select the desired media type (Movie, Music, Photo, Text).

3. Browse to your storage device (USB or SD card) and select the file you wish to play.
4. Use the playback controls (Play, Pause, Stop, Fast Forward, Rewind) on the remote for media control.

4. Automatic Playback and Loop Function

The player can be configured to power on, boot, and automatically start playing media in a continuous loop. This function supports video, music, and pictures and can operate for 24 hours.

1. Access the system settings menu.
2. Locate the 'Auto-start' or 'Loop Playback' option.
3. Enable the function and select the desired media type for automatic playback.

Image: The ASHATA Digital Media Player with a TV displaying a media selection screen, highlighting the 'Boot Automatic Play Function'.

5. Breakpoint Memory Playback

The device features a breakpoint memory function, allowing you to resume playback from where you left off. During playback, you can also use fast-forward options (2x, 4x, 8x, 16x, 32x).

Breakpoint memory selection time playback: with breakpoint memory function; during playback process, you can fast forward 2/4/8/16/32 times; you can choose which one you want to watch.



Image: Top view of the ASHATA Digital Media Player, illustrating the breakpoint memory playback feature.

6. Background Music for Photos

When viewing images, you can enable background music. Ensure that the music files are in the same folder as the images.

1. While viewing photos, press the 'OSD' button on the remote control.
2. Select the option to insert background music.



Image: The ASHATA Digital Media Player with musical notes, illustrating the background music feature for photo playback.

MAINTENANCE

1. Cleaning

- Use a soft, dry cloth to clean the exterior of the media player.
- Do not use liquid cleaners or abrasive materials, as they may damage the device.

2. Storage

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Disconnect the power adapter when the device is not in use for extended periods.

TROUBLESHOOTING

If you encounter issues with your media player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power adapter not connected; power outlet not working.	Ensure power adapter is securely connected to the player and a working power outlet.
No Video Output	Incorrect cable connection; wrong input selected on TV/monitor.	Check HDMI, VGA, or AV cable connections. Select the correct input source on your TV/monitor.
No Audio Output	Volume too low; incorrect audio settings; faulty cable.	Increase volume on player and TV. Check audio settings. Ensure AV or HDMI cable is functioning correctly.

Problem	Possible Cause	Solution
Remote Control Not Responding	Low battery; obstruction; out of range.	Replace remote control batteries. Ensure no obstructions between remote and player. Operate remote within close proximity to the player.
Certain Files Do Not Play or Player Shuts Off	Unsupported file format; corrupted file; device overheating.	Ensure files are in supported formats (e.g., MKV, RM-MMC, MP4, AVI). Try playing other files. Ensure adequate ventilation around the player.

SPECIFICATIONS

Below are the technical specifications for the ASHATA Mini 1080P 4K Full HD Digital Media Player:

- **Brand:** ASHATA
- **Model Number:** ASHATAqa1zgi5ct4-02
- **Product Type:** TV Decoder / Media Streamer
- **Connectivity Technology:** HDMI, VGA
- **Supported Input Resolution:** Up to 4K
- **Video Output Resolution:** Up to 1920x1080 (1080p)
- **Compatible Devices:** Smart Televisions, Personal Computers
- **Controller Type:** Remote Control
- **Power Adapter:** 5.0V/1.5A
- **Supported Internet Services:** Browser (Basic functionality)
- **Mainstream Decoding Chip:** Quan Zhi F10



Image: Bottom view of the ASHATA Digital Media Player, showing product label with model number and power adapter specifications.



Full HD
1080

The mainstream format is easy to decode: the current 1080P mainstream format, respectively MKV, TS, Blu-ray, are easily decoded.



Image: The ASHATA Digital Media Player with a 'Full HD 1080' logo, illustrating its decoding capabilities.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.

Related Documents - ASHATAqa1zgi5ct4-02

	<p><u>ASHATA 5 Keys Programmable Keypad: User Manual for USB-C and Bluetooth Dual Mode Operation</u></p> <p>Comprehensive user manual for the ASHATA 5 Keys Programmable Keypad, covering setup, custom key configuration via software, Bluetooth pairing, and operational features for USB-C and wireless dual-mode use.</p>
---	---

 USER MANUAL M36	<h2>Fanvace M36 User Manual</h2> <p>Comprehensive user manual for the Fanvace M36 digital music player, detailing its features, specifications, connectivity options, camera usage, and troubleshooting guide.</p>
	<h2>HMF Transport Case Combination Lock Instructions</h2> <p>Instructions for changing the combination lock on HMF transport cases, including models 14401-02 through 14651-02. Provides clear steps in English.</p>
	<h2>Rombica Smart Box D1 VPTS-02 User Manual and Specifications</h2> <p>Comprehensive user manual and technical specifications for the Rombica Smart Box D1 (VPTS-02) media player, covering setup, connections, features, and warranty information.</p>
	<h2>S-cubism ADV-02 DVD Player User Manual</h2> <p>Comprehensive user manual for the S-cubism ADV-02 DVD Player, covering setup, operation, media compatibility, troubleshooting, and specifications.</p>
	<h2>MATRIX ULTRA V2 Service Manual: Troubleshooting and Parts Replacement</h2> <p>Comprehensive service manual for MATRIX ULTRA V2 fitness equipment, covering troubleshooting common issues, maintenance procedures, and detailed parts replacement guides for various models.</p>