

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jocca](#) /

› [Jocca 1500W Vertical Garment Steamer User Manual](#)

**Jocca 5926G**

# Jocca 1500W Vertical Garment Steamer User Manual

Model: 5926G

<a href="#">Warnings</a>	<a href="#">Components</a>	<a href="#">Setup</a>	<a href="#">Operation</a>	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty</a>
<a href="#">Introduction</a> <a href="#">Safety</a> <a href="#">&amp; Support</a>							

## 1. INTRODUCTION

Thank you for choosing the Jocca 1500W Vertical Garment Steamer. This portable and efficient appliance is designed to quickly remove wrinkles, disinfect, and deodorize your garments without the need for an ironing board. Its ergonomic design and rapid heating capabilities make garment care simple and convenient. Please read this manual thoroughly before first use to ensure safe and optimal performance.

## 2. IMPORTANT SAFETY WARNINGS

**WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:**

- Always ensure the appliance is connected to a grounded electrical outlet with the correct voltage (220-240V ~ 50/60Hz).
- Do not immerse the steamer, power cord, or plug in water or other liquids.
- Never touch the hot steam nozzle or the heated parts of the steamer during operation or immediately after use. Steam is extremely hot and can cause severe burns.
- Keep the steamer out of reach of children and pets.
- Do not leave the steamer unattended while it is plugged in or operating.
- Always unplug the steamer from the electrical outlet before filling or emptying the water tank, cleaning, or when not in use.
- Use only clean tap water in the water tank. Do not add perfumes, vinegar, or other chemicals, as this can damage the appliance or cause hazardous conditions.
- Do not strike or pierce the water container.
- Keep the water container away from direct natural light.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.

- Always hold the steamer upright during use to prevent water leakage.
- Ensure garments are suitable for steaming. Test on an inconspicuous area first.

### 3. PRODUCT COMPONENTS

The Jocca Vertical Garment Steamer comes with several components designed for versatile garment care:

- Main Steamer Unit with Water Tank
- Fabric Brush Attachment: Ideal for delicate fabrics and removing dust.
- Lint Brush Attachment: Helps remove lint and pet hair from garments.
- Water Filling Cup: For easy and precise filling of the water tank.



Image 3.1: Main steamer unit with all included accessories.

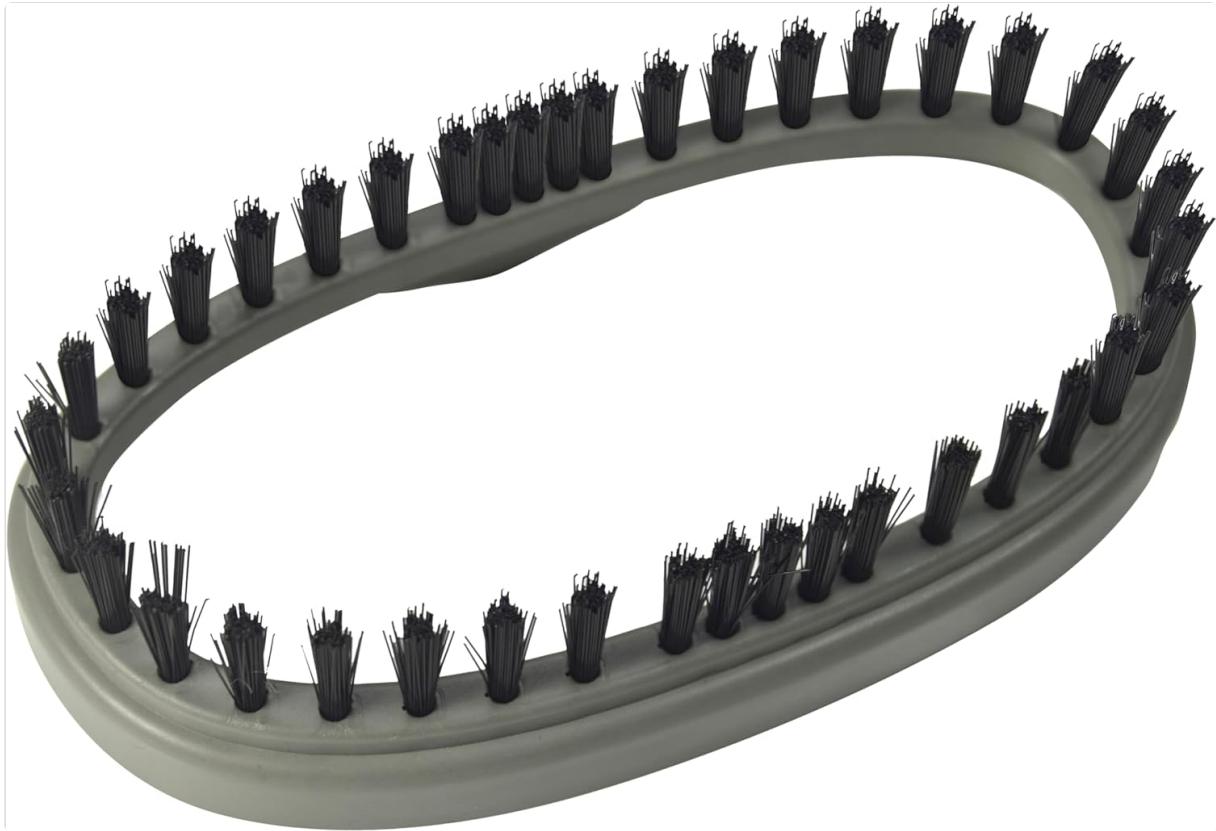


Image 3.2: Fabric brush attachment.



Image 3.3: Lint brush attachment.



Image 3.4: Water filling cup.

## 4. SETUP GUIDE

---

- 1. Unpack the Steamer:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Fill the Water Tank:**
  - Ensure the steamer is unplugged.
  - Open the water tank cap.
  - Use the provided filling cup to pour clean tap water into the tank. Do not exceed the 'MAX' fill line (280ml capacity).
  - Close the water tank cap securely.
- 3. Attach Accessories (Optional):** If desired, attach the fabric brush or lint brush to the steamer head by aligning it and pressing firmly until it clicks into place.
- 4. Position Garment:** Hang the garment you wish to steam on a hanger. Ensure it is freely suspended

and not touching any surfaces that could be damaged by steam.

5. **Plug In:** Insert the power plug into a suitable electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps for effective and safe steaming:

1. **Power On and Heat Up:** Once plugged in, the steamer will begin to heat up. The indicator light will illuminate. The steamer is ready for use in approximately 45 seconds when the light changes or steam begins to emit.
2. **Begin Steaming:** Hold the steamer upright, keeping the steam nozzle a few inches away from the fabric. Press the steam trigger to release a continuous flow of steam (25 g/min).
3. **Steaming Technique:**
  - Gently pull the fabric taut with your free hand.
  - Move the steamer nozzle slowly over the wrinkled areas in a vertical motion, from top to bottom.
  - For stubborn wrinkles, pass the steamer over the area multiple times.
  - When using the fabric brush, gently brush against the fabric grain to lift fibers and allow steam to penetrate deeper.
4. **Steaming Curtains and Upholstery:** The steamer can also be used to refresh curtains and upholstery. Hold the steamer upright and move it slowly over the fabric surface.
5. **Monitor Water Level:** The transparent water tank allows you to monitor the water level. Refill as needed, ensuring the steamer is unplugged before refilling.
6. **Finish Steaming:** Once you have finished steaming, release the steam trigger.
7. **Power Off:** Unplug the steamer from the electrical outlet.



Image 5.1: Steamer head releasing hot steam.



Image 5.2: Steaming curtains with the Jocca steamer.



Image 5.3: Before and after steaming a shirt.

## 6. MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your steamer.

- 1. Empty Water Tank:** After each use, ensure the steamer is unplugged and cooled down. Open the water tank cap and carefully empty any remaining water. This prevents mineral buildup and odors.
- 2. Cleaning:**
  - Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
  - The steamer features an anti-calc system. For best results and to prevent mineral buildup, periodically rinse the water tank with clean water. If hard water is used frequently, a descaling solution designed for steamers can be used following the solution's instructions.
  - Clean the steam nozzle with a cotton swab if any mineral residue is visible.
- 3. Storage:** Ensure the steamer is completely cool and dry before storing. Store it in a cool, dry place, away from direct sunlight and out of reach of children.

## 7. TROUBLESHOOTING

---

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or very little steam	Water tank is empty Steamer not heated sufficiently Mineral buildup in nozzle	Refill water tank Allow 45 seconds for heating Clean nozzle as per maintenance section
Water leaking from nozzle	Steamer not held upright Overfilled water tank Steamer not hot enough	Always hold steamer upright Do not exceed MAX fill line Allow steamer to fully heat up
Steamer not turning on	Not plugged in correctly No power from outlet	Check power connection Test outlet with another appliance

If the problem persists after trying these solutions, please contact Jocca customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	5926G
Power	1500 Watts
Voltage	220-240 V ~ 50/60 Hz
Water Tank Capacity	280 Milliliters
Continuous Steam Output	25 g/min
Heat-up Time	Approximately 45 seconds
Product Dimensions (L x W x H)	16 x 11.3 x 27.6 cm
Item Weight	1.1 Kilograms
Materials	ABS, PC, PBT, Aluminum



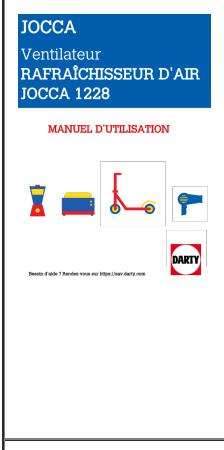
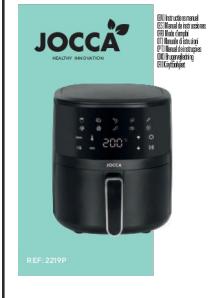
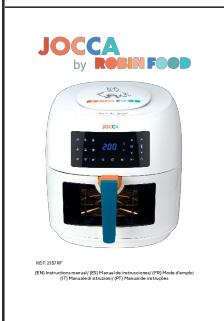
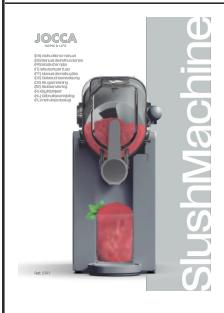
Image 8.1: Product dimensions.

## 9. WARRANTY AND SUPPORT

This Jocca product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or replacement parts, please contact Jocca customer service through their official website or the retailer from whom you purchased the product. Do not attempt to repair the appliance yourself.

## Related Documents - 5926G

	<p><a href="#"><b>JOCCA Kitchen Scale Instruction Manual</b></a></p> <p>This manual provides instructions and safety warnings for the JOCCA Kitchen Scale, model ref: 1588. Learn how to use, clean, and maintain your scale for accurate measurements.</p>
	<p><a href="#"><b>JOCCA Sport Mini Exercise Bike - User Manual and Instructions</b></a></p> <p>Comprehensive user manual for the JOCCA Sport Mini Exercise Bike, covering setup, operation, safety guidelines, and maintenance. Learn how to use your pedaler for effective home workouts.</p>
	<p><a href="#"><b>JOCCA 1228 Air Cooler User Manual and Instructions</b></a></p> <p>User manual for the JOCCA 1228 personal air cooler. Find instructions on operation, safety, cleaning, technical specifications, and environmental recycling information. Keep your space cool and comfortable with JOCCA.</p>
	<p><a href="#"><b>JOCCA 2219P Air Fryer: User Manual &amp; Operating Guide</b></a></p> <p>Discover the JOCCA 2219P Air Fryer. This comprehensive guide provides essential safety information, operating instructions, preset cooking programs, and maintenance tips for healthier, convenient home cooking.</p>
	<p><a href="#"><b>JOCCA 2157RF Air Fryer: User Manual, Instructions, and Safety Guide</b></a></p> <p>Comprehensive user manual for the JOCCA 2157RF Air Fryer by ROBIN FOOD. Includes safety warnings, product description, operating instructions, cooking programs, cleaning guide, and technical specifications.</p>
	<p><a href="#"><b>JOCCA Slush Machine - User Manual and Recipes</b></a></p> <p>Comprehensive user manual and recipe guide for the JOCCA Slush Machine, detailing operation, safety, cleaning, and program settings for making slushies, ice cream, and more.</p>



### [\[pdf\] User Manual Instructions Accessories](#)

Manual Plancha de vapor vertical JOCCA 5926 1500W Ferreterías cerca ti Cadena88

202305111136005688620 cadena88 sites default files content products 574y80 |||

Ref: 5926 **5926G** EN Instructions manual ES Manual de instrucciones FR Mode d'emploi IT Istruzioni per l'uso PT Manual de instruções DESCRIPTION A Water Tank B Water tank release button C Steam release button D Continuous steam release button E Steam release nozzle F Flashing power in...

lang:en score:33 filesize: 1.26 M page\_count: 24 document date: 2022-08-12