

[Manuals.plus](#) /

› [Home Zone Living](#) /

› Home Zone Living 13 Gallon Slim Dual Compartment Kitchen Trash Can Instruction Manual

Home Zone Living VA41833A (Gen 1 Silver V1)

Home Zone Living 13 Gallon Slim Dual Compartment Kitchen Trash Can

Model: VA41833A (Gen 1 Silver V1)

Brand: Home Zone Living

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Home Zone Living 13 Gallon Slim Dual Compartment Kitchen Trash Can. This unit is designed for efficient waste and recycling management in kitchens and offices, featuring a space-saving slim design and durable stainless steel construction.



Image: The trash can positioned in a kitchen, demonstrating its slim profile and aesthetic integration.

SETUP

Unpacking and Placement

Carefully remove the trash can from its packaging. Place the unit in your desired location. Its slim design allows it to fit between cabinets or in tight corners. The base includes rubber feet to protect your flooring.



Kitchen



Office

Image: The base of the trash can with protective rubber feet.

Inserting Trash Bags

1. Open the lid using the foot pedal.
2. Remove the inner bins by lifting them out. The bins are designed to be easily removable for bag changes and cleaning.
3. Place a trash bag into each compartment. The unit is compatible with Home Zone Living liner codes 20R and 30R for a precise fit.
4. Utilize the integrated bag tuck bands to secure the trash bags neatly in place and out of sight. This prevents slipping and simplifies bag changes.
5. Carefully lower the bins back into the trash can.



Quick & Easy Bag Swaps

Easy 3 step bag change



Step 1

Take out a single trash bag



Step 2

Lift the lid-free rings and place the bag on it beginning with the top



Step 3

Place bin back in place to secure the bag

Image: A user inserting a trash bag into one of the inner bins, highlighting the bag tuck band system.

Your browser does not support the video tag.

Video: This video demonstrates the precise fit of Code 20R trash bags for 5-6 gallon liners, which are compatible with this trash can's compartments.

OPERATING INSTRUCTIONS

Using the Foot Pedal

To open the lid, gently press down on the foot pedal located at the base of the trash can. The lid will open smoothly.

fall-throughs, or overflow.

Dual Compartment Bins

Take the pain out of recycling by sorting your waste and recycling materials in one location with separate bins for you to comfortably manage at home.

Protects Your Flooring

The rubber feet pads on the bottom of the trash can will help prevent scuffs and scratches to your floor.



Image: A close-up of the foot pedal, illustrating its function.

Soft-Close Lid Feature

The lid is equipped with a soft-close mechanism. After releasing the foot pedal, the lid will shut slowly and quietly, preventing slamming and reducing noise.

Stay Open Lid

For longer jobs there is the option to keep the lid open with a gentle press back after releasing pressure from the pedal. This will also allow for easier bag swaps.

Slow Close Lid

No longer do you have to endure your kitchen trash can lid slamming shut. The hinge and piston mechanism on this dual trash can creates a slow closing lid process that you will notice, but hardly hear. Not only is it a slow closing lid, but a quiet one as well.

No More Messy Trash Bags

Make securing your bags in place easier simply by tucking the excess slack underneath the rubber band included on each bin. No more tying down bags,



Image: The lid in various stages of closing, highlighting the soft-close function.

Stay-Open Lid Feature

For longer tasks, the lid can be manually lifted past a certain point to remain open. This is useful when changing bags or during extended use.

Add Convenience with the **Stay-Open Lid** Feature

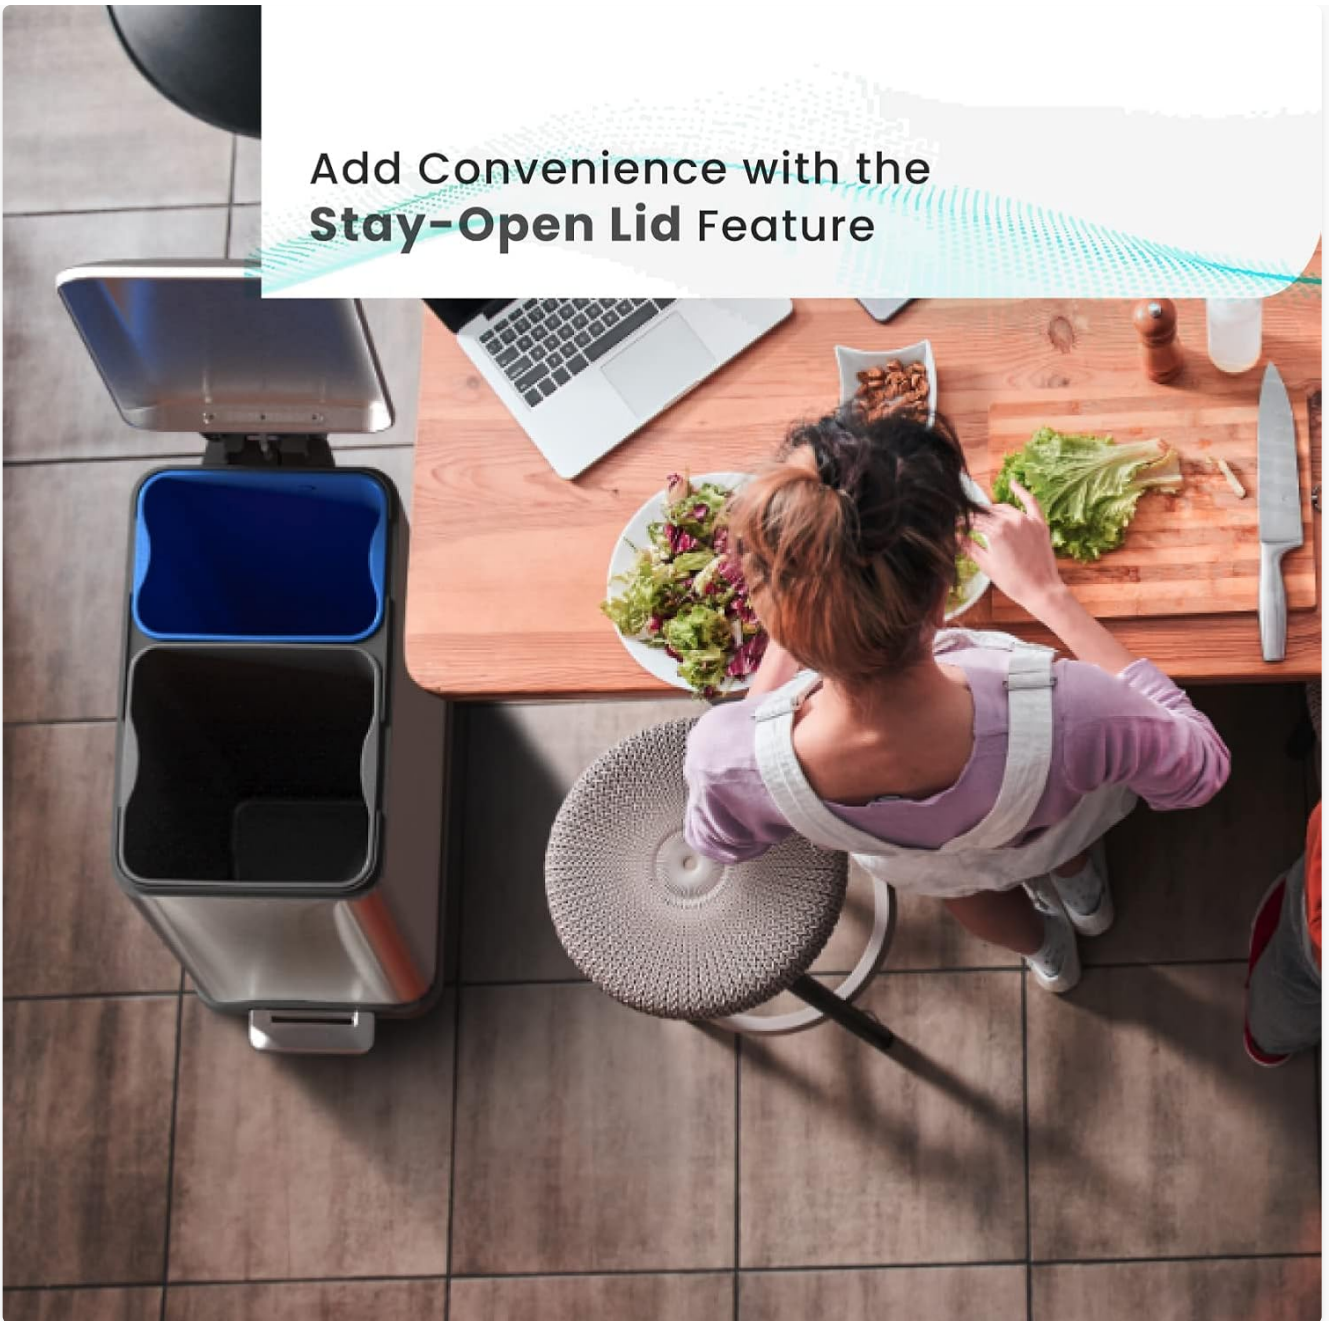


Image: The trash can lid held open, illustrating the stay-open feature for convenience.

Dual Compartment Use

The trash can features two interior bins, allowing for easy separation of trash and recycling. Designate one compartment for general waste and the other for recyclables.

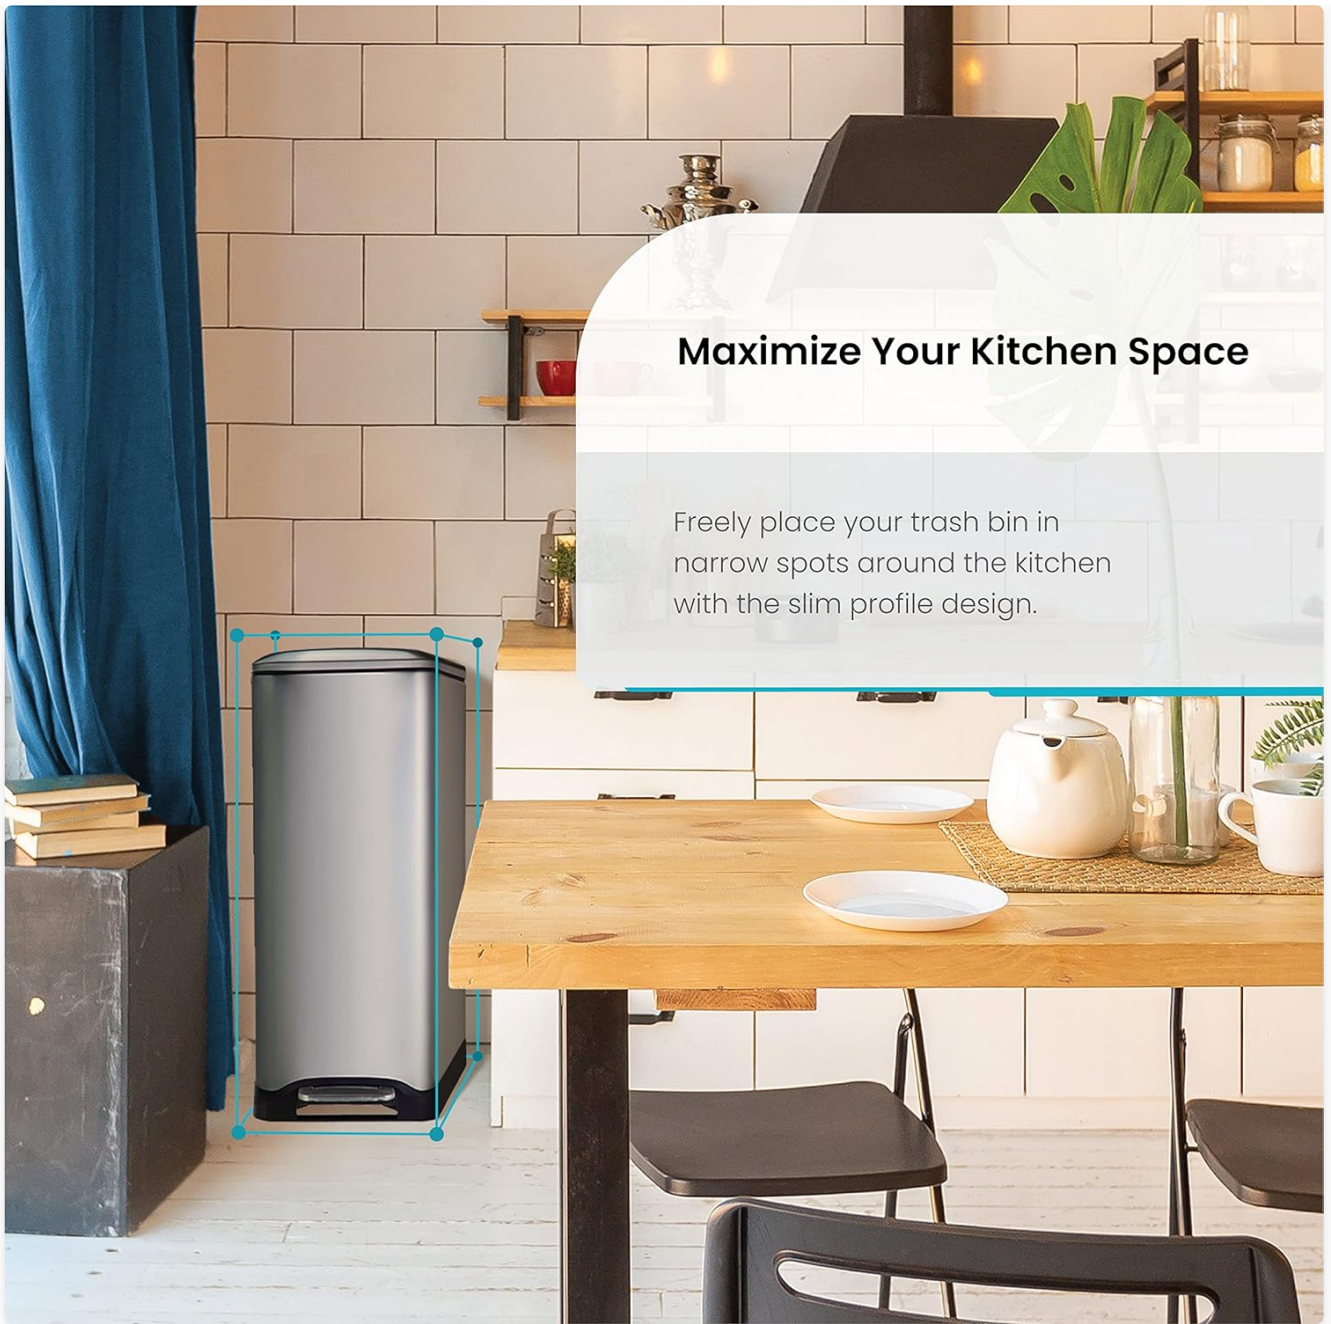


Image: The dual compartments, clearly showing the separation for trash and recycling.

MAINTENANCE

Cleaning the Exterior

The brushed stainless steel exterior is designed to resist fingerprints and can be easily wiped clean with a soft, damp cloth. Avoid abrasive cleaners or scouring pads, as these may damage the finish.

Cleaning the Inner Bins

The inner bins are removable for thorough cleaning. Lift them out of the main unit and wash with mild soap and water. Rinse thoroughly and dry completely before returning them to the trash can.



Image: A user removing an inner bin, showing how easily it detaches for cleaning.

TROUBLESHOOTING

Lid Not Closing Softly

Ensure no obstructions are preventing the lid from closing properly. Check the soft-close mechanism for any visible damage or debris. If the issue persists, contact customer support.

Trash Bags Slipping

Verify that the trash bags are correctly secured under the integrated bag tuck bands. Ensure the bag size is appropriate for the compartment to prevent excess slack that could lead to slipping.

SPECIFICATIONS

Feature	Detail
Brand	Home Zone Living
Model	VA41833A (Gen 1 Silver V1)
Capacity	13 Gallons (50 Liters)
Color	Silver V1
Opening Mechanism	Step-On
Material	Stainless Steel
Dimensions (L x W x H)	23.25"L x 13.75"W x 28.75"H
Special Features	Dual Compartment Interior, Slim Space-Saving Design, Soft-Close Lid, Step Pedal Operation, Bag Tuck Band System
Included Components	Kitchen Trash Can, 8 Gallon Liner, 5 Gallon Liner

Dimensions

50L



Liner Dimensions

BLACK



BLUE



Image: Technical drawing with precise measurements of the trash can and its internal bins.

WARRANTY & SUPPORT

For any questions, feedback, or support needs regarding your Home Zone Living product, please refer to the official Home Zone Living website or contact their dedicated US-based support team. Contact information can typically be found on the product packaging or the brand's official website.