

Princess 01.127003.01.001

Princess 127003 DeLuxe Sandwich Maker User Manual

Model: 01.127003.01.001

1. INTRODUCTION

Thank you for choosing the Princess 127003 DeLuxe Sandwich Maker. This appliance is designed to quickly and easily prepare delicious sandwiches with its non-stick grill plates. Please read this manual carefully before first use to ensure safe and optimal operation, and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Princess DeLuxe Sandwich Maker.



Figure 3.1: The Princess DeLuxe Sandwich Maker shown open with a prepared sandwich on the lower grill plate.



Figure 3.2: The sandwich maker opened, revealing the non-stick grill plates designed for two sandwiches.



Figure 3.3: Close-up view of the power (red) and ready (green) indicator lights on the top surface of the appliance.

- A. Housing:** Durable grey exterior.
- B. Handle:** For opening and closing the lid.
- C. Safety Lock:** Secures the lid during cooking and for compact storage.
- D. Non-stick Grill Plates:** Two cavities for sandwiches, designed for easy food release and cleaning.
- E. Power Indicator Light (Red):** Illuminates when the appliance is plugged in and heating.
- F. Ready Indicator Light (Green):** Illuminates when the appliance has reached the optimal cooking temperature.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the sandwich maker from its packaging. Remove all packing materials, stickers, and labels.
2. **Initial Cleaning:** Wipe the grill plates with a damp cloth or sponge. Do not immerse the appliance in water. Dry thoroughly.

3. **Positioning:** Place the appliance on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the unit.
4. **Pre-heating:** Close the lid and plug the appliance into a grounded wall outlet. The red power indicator light will illuminate, indicating the appliance is heating up. The green ready indicator light will illuminate when the appliance has reached the correct temperature. This may take a few minutes.
5. **First Use Odor:** During the first use, a slight odor or smoke may be emitted. This is normal and harmless, caused by the initial heating of the internal components. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare your sandwiches:

1. Ensure the sandwich maker is pre-heated (green light illuminated).
2. Carefully open the lid using the handle.
3. Place your prepared sandwiches onto the lower grill plates. For best results, use standard sandwich bread and avoid overfilling.
4. Gently close the lid and engage the safety lock. Do not force the lid shut if the sandwiches are too thick.
5. Allow the sandwiches to cook for approximately 3-5 minutes, or until golden brown and the filling is heated through. Cooking time may vary depending on ingredients and desired crispness. The green light may cycle on and off during cooking as the thermostat maintains temperature.
6. Once cooked, carefully open the lid and remove the sandwiches using a heat-resistant plastic or wooden spatula. Do not use metal utensils, as they can damage the non-stick coating.
7. If preparing more sandwiches, close the lid and allow the appliance to reheat until the green light illuminates again.
8. When finished, unplug the appliance from the wall outlet and allow it to cool completely before cleaning.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your sandwich maker.

1. **Always unplug** the appliance and allow it to cool completely before cleaning.
2. **Cleaning Grill Plates:** Wipe the non-stick grill plates with a soft, damp cloth or sponge. For stubborn residue, dampen a cloth with a small amount of cooking oil and wipe the plates, then wipe clean with a damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these will damage the non-stick coating.
3. **Cleaning Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Do Not Immerse:** Never immerse the appliance, cord, or plug in water or any other liquid.
5. **Storage:** Once clean and dry, the sandwich maker can be stored vertically to save space. Wrap the power cord around the designated cord storage area (if available). Ensure the safety lock is engaged for secure storage.





Figure 6.1: The sandwich maker in its vertical storage position, highlighting the compact design and potential cord storage area.

7. TROUBLESHOOTING

If you encounter issues with your sandwich maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in or power outlet is faulty.	Ensure the plug is securely inserted into a working power outlet. Check circuit breaker.
Green "Ready" light does not illuminate.	Appliance has not reached operating temperature yet.	Allow more time for pre-heating. The green light will illuminate when ready.
Sandwiches are not cooking evenly or are sticking.	Insufficient pre-heating; plates are not clean; too much filling.	Ensure the green light is on before adding sandwiches. Clean plates thoroughly. Do not overfill sandwiches.
Smoke or unusual odor during use (after first use).	Food residue on plates; internal malfunction.	Unplug and allow to cool. Clean plates thoroughly. If problem persists, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	01.127003.01.001
Brand	Princess
Wattage	750 watts
Product Dimensions (D x W x H)	7.87" x 7.87" x 3.94"
Item Weight	1260 Grams (2.78 pounds)
Material	Stainless Steel
Special Feature	Automatic temperature control
Color	Grey

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Princess website. If you require technical support or have questions not covered in this manual, please contact Princess customer service.

Online Support: www.princesshome.eu/en-gb/service-support

Please have your model number (01.127003.01.001) and purchase details ready when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question