



[Manuals.plus](#) /

› [Baby Trend](#) /

› Baby Trend Sit N' Stand Double Stroller User Manual

Baby Trend Sit N' Stand Double Stroller

Baby Trend Sit N' Stand Double Stroller User Manual

Model: Sit N' Stand Double Stroller | Brand: Baby Trend

INTRODUCTION

This manual provides essential information for the safe and proper use, assembly, operation, maintenance, and troubleshooting of your Baby Trend Sit N' Stand Double Stroller. Please read all instructions carefully before assembly and use, and retain this manual for future reference.



Image: The Baby Trend Sit N' Stand Double Stroller, showcasing its tandem design with two seats and canopies. This stroller is designed for two children, offering both seating and standing options.

SAFETY INFORMATION

Your child's safety is paramount. Always follow these safety guidelines:

- Always use the 5-point safety harness for each child. Ensure it is properly adjusted and securely fastened.
- Do not exceed the maximum weight recommendation of 40 pounds per seat.
- Never leave children unattended in the stroller.
- Engage the foot-activated rear brake when the stroller is stationary.
- Ensure the stroller is fully open and locked before placing children in it.
- Keep hands and fingers clear of moving parts when folding or unfolding the stroller.
- Do not hang bags or other items on the handle, as this can cause the stroller to tip over.

SETUP

Assembly of your Baby Trend Sit N' Stand Double Stroller is designed to be straightforward. Follow these steps:

1. Remove all components from the packaging.
2. Unfold the stroller frame until it locks into place. Ensure all locking mechanisms are engaged.
3. Attach the front wheels by pushing them into the designated slots until they click securely.
4. Attach the rear wheels by pushing them into the designated slots until they click securely.
5. Install the child trays onto the front and rear seats.
6. Attach the canopies to their respective seats. The front seat features a removable 2-panel canopy, while the rear seat has a fixed canopy with visors.
7. Ensure the parent console is securely attached to the handlebar.



Image: A side view of the assembled Baby Trend Sit N' Stand Double Stroller, showing both the front and rear seats with their canopies and child trays in place. This view highlights the stroller's full configuration.

OPERATING INSTRUCTIONS

Folding and Unfolding

The stroller features a convenient one-hand fold mechanism for easy transport and storage.

- **To Fold:** Ensure both canopies are retracted and child trays are in place. Locate the one-hand fold release mechanism (usually on the handlebar or side frame). Activate the release and push the stroller forward to collapse it. The stroller is designed to stand upright when folded.
- **To Unfold:** Release the storage latch. Hold the handlebar and lift upwards until the frame fully extends and locks into place. Listen for a click to confirm it is securely locked.

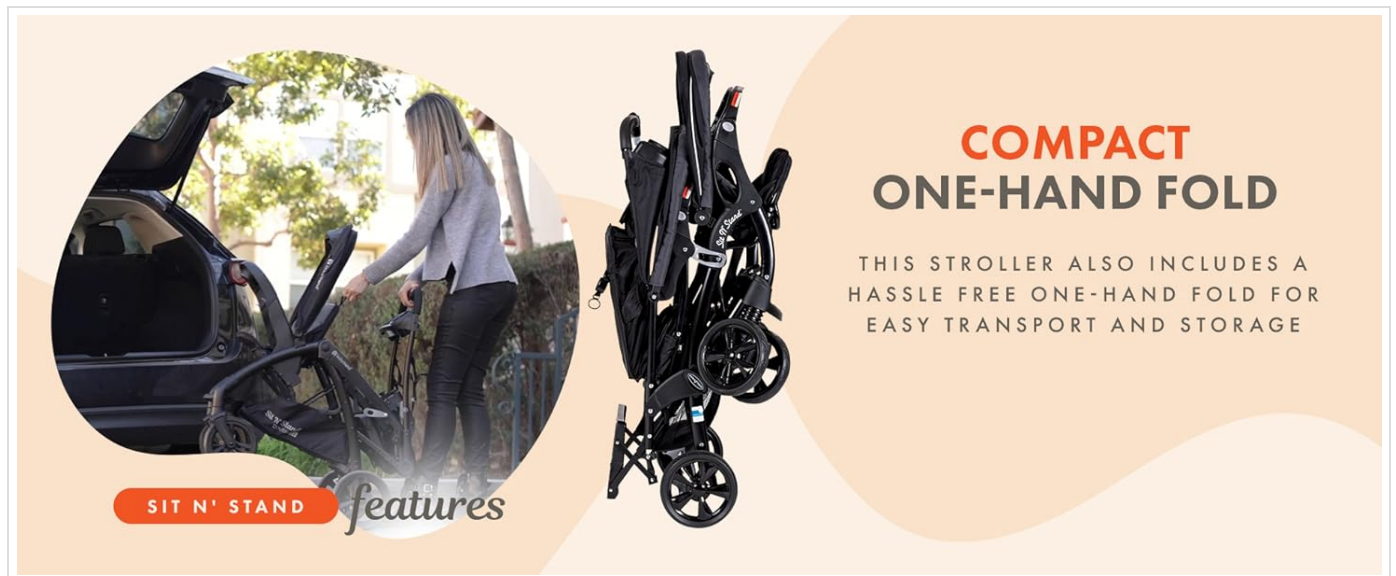


Image: This illustration demonstrates the compact one-hand fold feature of the stroller, showing how it collapses for easy storage and transport, such as fitting into a car trunk.

Stroller Configurations

The Sit N' Stand Double Stroller offers multiple configurations to adapt to your children's needs:

- **Double Mode:** Both front and rear seats are used for two children.
- **Travel System:** Compatible with Baby Trend infant car seats (sold separately). Car seats can be installed in either the front or rear position.
- **Sit and Sit:** Both children are seated in the front and rear seats.
- **Sit and Stand:** The front seat is used for a younger child, while an older child can stand on the rear platform.
- **Travel and Sit:** An infant car seat is in one position, and a child is seated in the other.
- **Travel and Stand:** An infant car seat is in one position, and an older child stands on the rear platform.



Image: A visual guide illustrating the six different configurations of the Sit N' Stand Double Stroller, including options for two seated children, one seated and one standing, and combinations with infant car seats.

Using the Safety Harness

Each seat is equipped with a 5-point safety harness. To secure your child:

1. Place the child in the seat.
2. Bring the shoulder straps over the child's shoulders and the waist straps around their hips.
3. Insert the buckle tongues into the buckle housing until they click.
4. Adjust the straps to ensure a snug fit, leaving no more than one finger's width of slack. The harness can be adjusted with one hand for convenience.

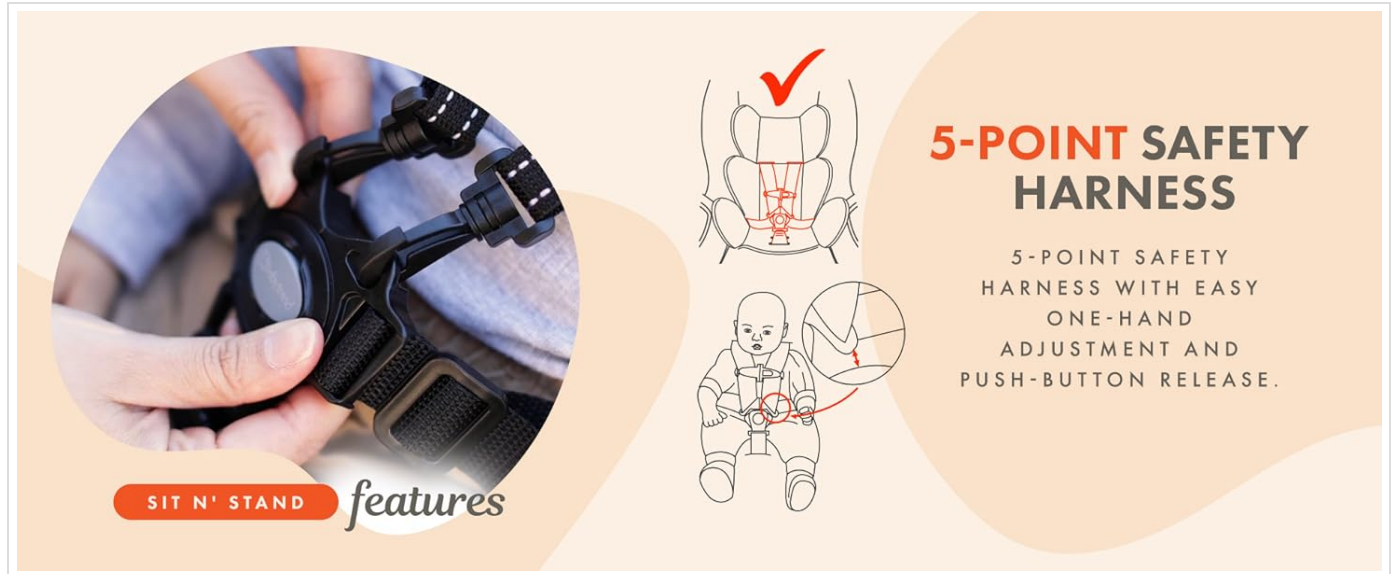


Image: A detailed illustration highlighting the 5-point safety harness system, showing how it secures a child in the stroller seat with easy one-hand adjustment and a push-button release for quick unbuckling.

Canopy Adjustment

The front seat has a removable, fully ratcheting 2-panel canopy. The rear seat has a fixed canopy with visors. Adjust the canopies as needed to provide maximum sun protection for your children.



Image: This graphic illustrates the adjustable 2-panel canopy, demonstrating its ability to provide shade and protection for the child in the front seat, with a fixed canopy for the rear seat.

Storage and Parent Tray

The stroller includes a covered parent tray with two cup holders and a covered compartment for personal belongings. An extra-large storage basket is located beneath the seats for additional items.



Image: A close-up view of the parent tray, showing its two cup holders and covered compartment, alongside a depiction of the spacious under-seat storage basket, designed for convenience and extra capacity.

MAINTENANCE

Regular maintenance ensures the longevity and safety of your stroller.

- **Cleaning:** Fabric parts can be spot cleaned with mild soap and warm water. Do not use bleach. The frame can be wiped clean with a damp cloth.
- **Wheels:** Periodically check the wheels for wear and tear. Keep them free of dirt and debris. Lubricate moving parts with a silicone-based lubricant if they become stiff.
- **Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Stroller is difficult to fold.	Wheels are not aligned correctly; folding mechanism is stiff.	Ensure front wheels are turned backwards before folding. Apply silicone lubricant to the folding mechanism.
Stroller pulls to one side.	Uneven tire pressure; debris in wheels; bent axle.	Check tire pressure (if applicable). Clean wheels. Inspect axles for damage.
Brake is not engaging properly.	Debris in brake mechanism; worn brake pads.	Clear any debris from the brake mechanism. If issues persist, contact customer support.
Child's legs are cramped in the rear seat.	Child is too tall for the rear seat.	Consider using the sit-and-stand configuration for older, taller children.

SPECIFICATIONS

- **Brand:** Baby Trend
- **Model:** Sit N' Stand Double Stroller
- **Color:** Magnolia
- **Material:** Polyester (Fabric), Carbon Steel (Frame), Rubber (Tires)
- **Unfolded Dimensions (L x W x H):** 49" x 21.5" x 43"
- **Folded Dimensions (L x W x H):** 23.75" x 40" x 18"

- **Maximum Weight Recommendation (per seat):** 40 Pounds
- **Seating Capacity:** 2
- **Harness Type:** 5 Point
- **Wheel Diameter:** 8 Inches (Front and Rear)
- **Included Components:** Removable/Swing away child trays with cup holders and snack areas, Large Basket with Front and Rear Access, Parent console with cell phone holder and 2 cup holders, 5-point safety harness, Removable rear seat, Front and rear canopies, One-hand fold feature, Extra-large basket.



Image: A diagram illustrating the key dimensions of the Baby Trend Sit N' Stand Double Stroller, including its height, length, and width, along with the maximum weight capacity for each seat.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Baby Trend website or contact their customer service directly. Keep your purchase receipt for warranty claims.

