

Heiniger SB-HE0001

Heiniger Saphir Cord Trimmer User Manual

Model: SB-HE0001 | Brand: Heiniger

1. IMPORTANT SAFETY INFORMATION

Always unplug the trimmer before cleaning or replacing parts. Keep the trimmer away from water sources. Avoid using the trimmer on infants or near sensitive areas. Always keep the trimmer within sight while in use. In case of contact with eyes or skin, rinse immediately with plenty of water and seek medical advice if necessary. Always follow the manufacturer's instructions for cleaning and maintenance.

2. PRODUCT OVERVIEW

The Heiniger Saphir Cord Trimmer is a professional-grade grooming tool designed for precision and durability. It features a robust design and comes with a Knife 10 blade.

Key Features:

- Heiniger Sapphire Cord + Knife 10
- Durable material construction
- Compact and lightweight design (Package weight: 100.0 g)

Product Components:



Figure 1: Side view of the Heiniger Saphir Cord Trimmer, showcasing its ergonomic design and cord connection.



Figure 2: The Saphir Cord Trimmer, highlighting its operational speed of 3,200 double strokes per minute, indicating efficient performance.



Figure 3: A detailed view of the trimmer's blade and body, emphasizing the precision cutting edge and durable construction.



Figure 4: The Saphir Cord Trimmer neatly packed within its protective carrying case, alongside included accessories such as oil and a brush.

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all items listed in the product overview are present.
2. **Blade Inspection:** Before first use, inspect the blade for any damage or misalignment. Ensure the blade is securely attached.
3. **Power Connection:** Connect the power cord to the trimmer and then plug it into a suitable electrical outlet. Ensure the voltage matches the trimmer's requirements.
4. **Initial Lubrication:** Apply a small amount of the provided lubricating oil to the blade teeth before first use. This ensures smooth operation and extends blade life.

4. OPERATING INSTRUCTIONS

1. **Preparation:** Ensure the area to be trimmed is clean and dry. For animal grooming, ensure the coat is free of tangles and debris.
2. **Power On:** Locate the power switch, typically on the side or bottom of the trimmer, and switch it to the "ON" position.
3. **Trimming Technique:** Hold the trimmer firmly. For best results, move the trimmer against the direction of hair growth, using smooth, even strokes. Do not apply excessive pressure.

4. **Blade Temperature:** During extended use, the blade may become warm. If it becomes too hot to touch, turn off the trimmer and allow the blade to cool down or replace it with a cool blade if available.
5. **Power Off:** After use, switch the trimmer to the "OFF" position and unplug it from the electrical outlet.

5. MAINTENANCE

- **Cleaning the Blade:** After each use, use the provided cleaning brush to remove hair and debris from the blade. For thorough cleaning, the blade can be detached (refer to blade removal instructions in a separate guide if applicable) and cleaned with a suitable blade cleaner.
- **Lubrication:** Regularly apply a few drops of lubricating oil to the blade teeth. This reduces friction, prevents rust, and maintains cutting efficiency. Lubricate before and after each significant use.
- **Storage:** Store the trimmer in its original carrying case or a clean, dry place away from direct sunlight and extreme temperatures. Ensure the cord is not tightly wrapped or kinked.
- **Cord Care:** Inspect the power cord regularly for any signs of damage, fraying, or cuts. Do not use the trimmer if the cord is damaged.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Not plugged in; power outlet faulty; damaged cord.	Ensure plug is fully inserted. Test outlet with another device. Inspect cord for damage; if damaged, do not use and seek professional repair.
Blade pulls hair or cuts poorly.	Blade is dull, dirty, or not lubricated; hair is tangled.	Clean and lubricate the blade. Ensure hair is clean and detangled. Replace blade if dull.
Trimmer gets hot quickly.	Lack of lubrication; excessive use; dirty blade.	Apply more lubricant to the blade. Allow the trimmer to cool down between uses. Clean the blade thoroughly.

7. SPECIFICATIONS

Brand: Heiniger

Model Number: SB-HE0001

Item Weight: 1.1 Grams

Color: Black

Recommended Uses: Beard, Eyebrows, Mustache, Hair, Face, Under Arm, Back, Head, Chest, Body

Package Dimensions: 16.02 x 10.63 x 3.39 inches

Manufacturer: HEINIGER

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Heiniger website. Keep your proof of purchase for any warranty claims.

Protection plans may be available for extended coverage. Please check with your retailer for details on available plans.



