

manuals.plus /

- › [Acme](#) /
- › [Acme Cargo Full Over Full Bunk Bed \(Model AC-37905\) Instruction Manual](#)

Acme AC-37905

Acme Cargo Full Over Full Bunk Bed Instruction Manual

MODEL: AC-37905

Brand: Acme

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Acme Cargo Full Over Full Bunk Bed, Model AC-37905. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Acme Cargo Full Over Full Bunk Bed in blue metal, showcasing its unique shipping container design and sturdy construction.

SAFETY INFORMATION

Your safety is paramount. Adhere to the following guidelines:

- **Guardrails:** The top bunk is equipped with safety guardrails. Ensure they are always securely in place to prevent falls.
- **Ladder:** Use the built-in ladder for accessing the top bunk. Do not use chairs or other unstable objects.
- **Weight Capacity:** Do not exceed the recommended weight capacity for each bunk. (Specific weight limits are not provided in product data; refer to packaging or manufacturer's website for details).
- **Mattress Thickness:** Ensure the mattress on the top bunk is not too thick, as this could reduce the effectiveness of the guardrails.
- **Assembly:** Assemble the bunk bed strictly according to the instructions. Improper assembly can lead to instability and injury.
- **Children:** The top bunk is not suitable for children under 6 years of age.

SETUP AND ASSEMBLY

Assembly of the Acme Cargo Bunk Bed requires two adults. Please ensure all parts are present before beginning. Tools required (not included): Phillips head screwdriver, Allen wrench (often included with

hardware).

Parts List (Typical Components)

- Headboard and Footboard panels
- Side rails for both bunks
- Slat system components
- Built-in ladder
- Guardrails
- Assembly hardware (bolts, nuts, washers, etc.)

Assembly Steps (General Guide)

1. **Unpack and Identify:** Carefully unpack all components and compare them against the provided parts list.
2. **Assemble Lower Bunk:** Attach the side rails to the headboard and footboard panels for the lower bunk. Secure all connections with the provided hardware.
3. **Install Lower Bunk Slats:** Place and secure the slat system onto the lower bunk frame.
4. **Assemble Upper Bunk:** Repeat the process for the upper bunk, attaching side rails to its headboard and footboard panels.
5. **Attach Upper Bunk to Lower Bunk:** Carefully lift and secure the upper bunk frame onto the lower bunk frame using the designated connectors.
6. **Install Upper Bunk Slats:** Place and secure the slat system onto the upper bunk frame.
7. **Attach Guardrails and Ladder:** Securely attach the guardrails to the upper bunk and install the built-in right-facing front ladder.
8. **Final Check:** Ensure all bolts and fasteners are tightened. Do not overtighten.



Image: A side view of the bunk bed, highlighting the integrated ladder for safe access to the top bunk.



Image: A detailed view of the full-length container lock design element, adding to the bed's unique aesthetic.

OPERATING INSTRUCTIONS

Once assembled, your Acme Cargo Bunk Bed is ready for use. Please observe the following:

- **Mattress Requirements:** This Full Over Full bunk bed requires two full-size mattresses for both the upper and lower bunks. Ensure mattresses fit snugly within the frame.
- **Ladder Use:** Always use the built-in ladder to climb to and descend from the top bunk. Face the ladder when climbing.
- **Guardrail Integrity:** Regularly check that the guardrails are secure and free from damage.
- **No Jumping:** Do not jump on either bunk. This can damage the bed structure and lead to injury.
- **Ventilation:** Ensure adequate airflow around the mattresses.



Image: The Acme Cargo Bunk Bed shown with mattresses and bedding, illustrating its functional use. Please note: The trundle shown in some product images is not included with this model.

MAINTENANCE

Regular maintenance will prolong the life of your bunk bed and ensure continued safety.

- **Cleaning:** Wipe down the metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Hardware Check:** Periodically inspect all bolts, screws, and fasteners to ensure they are tight. Retighten if necessary, but do not overtighten.
- **Slat System:** Check the slat system for any signs of damage or weakness. Replace damaged slats immediately.
- **Moving the Bed:** If you need to move the bed, lift it rather than dragging it to prevent damage to the frame and flooring.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Squeaking Noises:** Squeaking often indicates loose hardware. Check and tighten all bolts and connections.
- **Instability/Wobbling:** Ensure the bed is on a level surface. Recheck all assembly connections for

tightness.

- **Damaged Parts:** If any part is damaged or missing, do not attempt to use the bed. Contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	AC-37905
Brand	Acme
Size	Full Over Full
Product Dimensions	78"L x 56"W x 65"H
Color	Blue
Finish Type	Metal
Item Weight	182 pounds
Assembly Required	Yes
UPC	840412205323



Image: A diagram illustrating the key dimensions of the Acme Cargo Full Over Full Bunk Bed: 78 inches long, 56 inches wide, and 65 inches high.

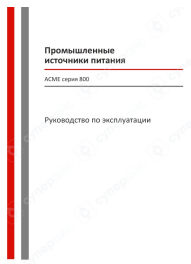
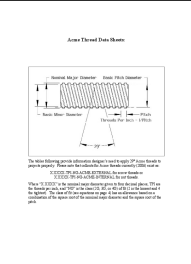

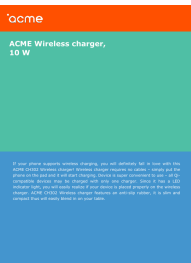
WARRANTY INFORMATION

For detailed warranty information, please refer to the documentation included with your purchase or visit the official Acme Furniture website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need replacement parts, please contact Acme Furniture customer support. Contact details can typically be found on the product packaging or the manufacturer's official website.

Related Documents - AC-37905

	<p>Руководство по эксплуатации промышленных источников питания АСМЕ серии 800</p> <p>Подробное руководство по эксплуатации промышленных источников питания АСМЕ серии 800. Информация по установке, настройке, управлению, протоколам связи и техническому обслуживанию.</p>
	<p>Acme Thread Data Sheets and Specifications</p> <p>Comprehensive data sheets for Acme screw threads, including dimensions, tolerances, and formulas for external and internal threads, with a focus on 29° Acme threads.</p>
	<p>ACME BH203 Bluetooth Earphones User Manual and Specifications</p> <p>Comprehensive user manual for ACME BH203 Bluetooth earphones, detailing features, technical specifications, setup, troubleshooting, and maintenance. Supports multiple languages.</p>
	<p>Acme ACME CH302 Wireless Charger 10W - Qi Fast Charging Pad</p> <p>Discover the Acme CH302 Wireless Charger, a 10W Qi-compatible charging pad. Features include a slim, compact design, anti-slip rubber, and an LED indicator for easy status checks. Includes USB Type-C cable and user manual. Ideal for convenient, cable-free charging.</p>

<div data-bbox="119 98 204 118" data-label="Text"> <p>/// PARKSIDE</p> </div> <div data-bbox="119 120 309 264" data-label="Image"> </div> <div data-bbox="119 264 309 360" data-label="Text"> <p>BOHR- UND MEISSELHAMMER PBR 1326 A1 IAN 330584_2110</p> </div>	<div data-bbox="341 248 1018 280" data-label="Section-Header"> <p>Acme Smart Home Hub: Centralized Control & Connectivity</p> </div> <div data-bbox="341 288 1455 398" data-label="Text"> <p>Learn about the Acme Smart Home Hub, your central point for managing smart devices. Features include voice assistant integration, app connectivity, and easy setup. Includes troubleshooting tips and warranty information.</p> </div>
<div data-bbox="119 593 309 857" data-label="Image"> </div>	<div data-bbox="341 656 1206 687" data-label="Section-Header"> <p>Manuale di Riparazione Motori ACME ALN 215W/290W/330W AT 330-OHV</p> </div> <div data-bbox="341 696 1466 806" data-label="Text"> <p>Manuale di riparazione completo per i motori a scoppio ACME delle serie ALN 215W, 290W, 330W e AT 330-OHV. Include specifiche tecniche, procedure di smontaggio, montaggio, revisione, diagnostica e manutenzione.</p> </div>