

[Manuals.plus](#) /

> [GoodsFederation](#) /

> GoodsFederation ATM Piggy Bank Instruction Manual (Model: ATM, Silver/Black Standard Version)

GoodsFederation ATM

GoodsFederation ATM Piggy Bank Instruction Manual

Brand: GoodsFederation | **Model:** ATM (Silver/Black Standard Version)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your GoodsFederation ATM Piggy Bank. Designed to help users, especially children, develop financial literacy and saving habits, this electronic money safe offers realistic ATM functionalities.



Image 1.1: The GoodsFederation ATM Piggy Bank, Silver/Black Standard Version, showcasing its realistic design and digital display.

2. SETUP

2.1 Battery Installation

The ATM Piggy Bank requires 3 AA batteries (not included). To install:

1. Locate the battery compartment on the back of the ATM.
2. Use a screwdriver to open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.



Image 2.1: Rear view of the ATM Piggy Bank, highlighting the battery compartment and the reset button.

2.2 Initial Time and Date Setting

Upon first use or after battery replacement, you may need to set the time and date:

1. Insert the provided ATM card into the card slot.
2. The display will show the current time/date settings.
3. Press the 'SET' button. Use the number keys (up/down arrows on 5 and 0) to adjust the year, month, day, hour, and minute.
4. Press 'ENTER' after each setting to confirm and move to the next.

2.3 Default PIN Code

The default PIN code for your ATM Piggy Bank is **0000**. You will need this to access the bank initially. It is recommended to change this code for security (see Section 3.6).

3. OPERATING INSTRUCTIONS

3.1 Accessing the ATM (Card & PIN)

To activate the ATM functions:

1. Insert your personal ATM card into the card slot on the right side of the machine.
2. The display will prompt you to 'ENTER PIN'.
3. Enter your 4-digit PIN code (default is 0000, or your custom code).
4. Press 'ENTER'. The display will show your current balance.



Image 3.1: Close-up of the ATM card slot where the personal ATM card is inserted.

3.2 Depositing Coins (Automatic Recognition)

The ATM Piggy Bank automatically recognizes and counts coins:

1. With the ATM active (card inserted, PIN entered), drop coins one by one into the coin slot.

2. The ATM will make a sound and display the value of each coin as it's deposited, adding it to your balance.

3.3 Depositing Bills (Automatic Rolling)

To deposit paper money:

1. With the ATM active, press the corresponding bill denomination button on the keypad (\$1, \$5, \$10, \$20).
2. Insert the bill into the 'Insert Bills Here' slot. The ATM will automatically roll the bill in.
3. The amount will be added to your balance.



Image 3.2: Close-up view of the coin slot and the bill feeder mechanism.

3.4 Checking Balance

To view your current savings balance:

1. Access the ATM using your card and PIN.
2. Press the 'BALANCE' button.
3. The display will show your total accumulated savings.



Image 3.3: The LCD screen displaying the current savings balance.

3.5 Setting a Savings Goal

You can set a target amount to save:

1. Access the ATM using your card and PIN.
2. Press the 'TARGET' button.
3. Enter your desired savings goal (up to 9999.99).
4. Press 'ENTER'. The ATM will track your progress towards this goal.



Image 3.4: The LCD screen displaying the interface for setting a savings target.

3.6 Withdrawing Money

To withdraw money from your savings:

1. Access the ATM using your card and PIN.
2. Press the 'WITHDRAW' button.
3. Enter the amount you wish to withdraw using the number keys.
4. Press 'ENTER'. The money drawer will open, allowing you to retrieve your funds. The amount will be deducted from your balance.



Image 3.5: A hand pressing the button to open the money drawer for withdrawal.

3.7 Changing PIN Code

To change your personal PIN code:

1. Access the ATM using your card and current PIN.
2. Press the 'ALARM CODE' button.
3. The display will show 'NEW CODE'. Enter your desired new 4-digit PIN.
4. Press 'ENTER' to confirm. Your PIN is now updated.

3.8 Sound On/Off

To toggle the sound effects:

1. Access the ATM using your card and PIN.
2. Press the 'SOUND' button to switch between sound on and sound off.

3.9 Alarm Clock Function

The ATM Piggy Bank also functions as an alarm clock:

1. Ensure the ATM card is removed from the slot.
2. Press the 'ALARM CODE' button.

3. Use the 'SET' button and number keys to set your desired alarm time.
4. Press 'ENTER' to activate the alarm.

4. MAINTENANCE

4.1 General Care

To ensure the longevity of your ATM Piggy Bank:

- Wipe the surface with a soft, dry cloth.
- Avoid exposure to water or excessive moisture.
- Do not use abrasive cleaners.

4.2 Battery Replacement

Replace batteries when the display dims or functions become erratic. Follow the steps in Section 2.1 for battery installation.

5. TROUBLESHOOTING

- **Forgotten PIN:** If you forget your PIN, locate the 'RESET' button on the back of the ATM (near the battery compartment). Pressing this button will reset the PIN to the default **0000**. Note that this may also reset other settings.
- **Money Not Feeding:** Ensure bills are flat and not crumpled. Check for any obstructions in the bill feeder slot.
- **Incorrect Coin Count:** Ensure coins are dropped one at a time and are standard currency.
- **Display Issues:** Check battery levels and replace if necessary. Ensure batteries are installed correctly.

6. SPECIFICATIONS

- **Product Dimensions:** 7.36 x 5.83 x 9.45 inches
- **Item Weight:** 2 pounds
- **Item Model Number:** ATM
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries:** 3 AA batteries required (not included)
- **Material:** 90% ABS Plastic, 10% Metal Electronic Components



Image 6.1: The ATM Piggy Bank with its physical dimensions indicated.

7. SAFETY INFORMATION

Warning: Not for children under 3 years.

8. OFFICIAL PRODUCT VIDEOS

8.1 GoodsFederation ATM Piggy Bank Overview

Your browser does not support the video tag.

Video 8.1: An official video from GoodsFederation demonstrating the key features and basic operation of the ATM Piggy Bank, including card insertion, coin and bill deposits, and balance checking.

8.2 Step-by-Step Setup and Operation

Your browser does not support the video tag.

Video 8.2: An official GoodsFederation video providing a detailed, step-by-step guide on how to set up and use the ATM Piggy Bank, covering initial configuration and various functions.

9. WARRANTY AND SUPPORT

Warranty and support information for this product is not provided in the available product data. Please refer to the product packaging or manufacturer's website for further details.