

[Manuals.plus](#) /

› [Golden Security](#) /

› Golden Security Mini Arcade Machine RHAC06 User Manual

Golden Security RHAC06

Golden Security Mini Arcade Machine User Manual

Model: RHAC06

Brand: Golden Security

INTRODUCTION

The Golden Security Mini Arcade Machine (Model RHAC06) is a compact, handheld gaming console designed for entertainment. It features a built-in library of 156 classic 16-bit video games across various genres, including action, puzzle, and racing. The device is equipped with a 2.8-inch TFT color display and offers flexible power options, including a built-in rechargeable lithium battery and support for 3 AA batteries. For an enhanced gaming experience, the console can also be connected to a television.



Figure 1: The Mini Arcade Machine showcasing different game categories.

SETUP

Powering the Device

1. **Rechargeable Battery:** The device includes a built-in 700mAh rechargeable lithium-ion battery. To charge, connect the provided USB cable to the device's USB port and a compatible power source. A full charge ensures several hours of gameplay.
2. **AA Batteries:** For alternative power, the device supports 3 AA batteries (not included). Open the battery compartment on the back of the unit and insert the batteries, ensuring correct polarity.

Two Battery Modes

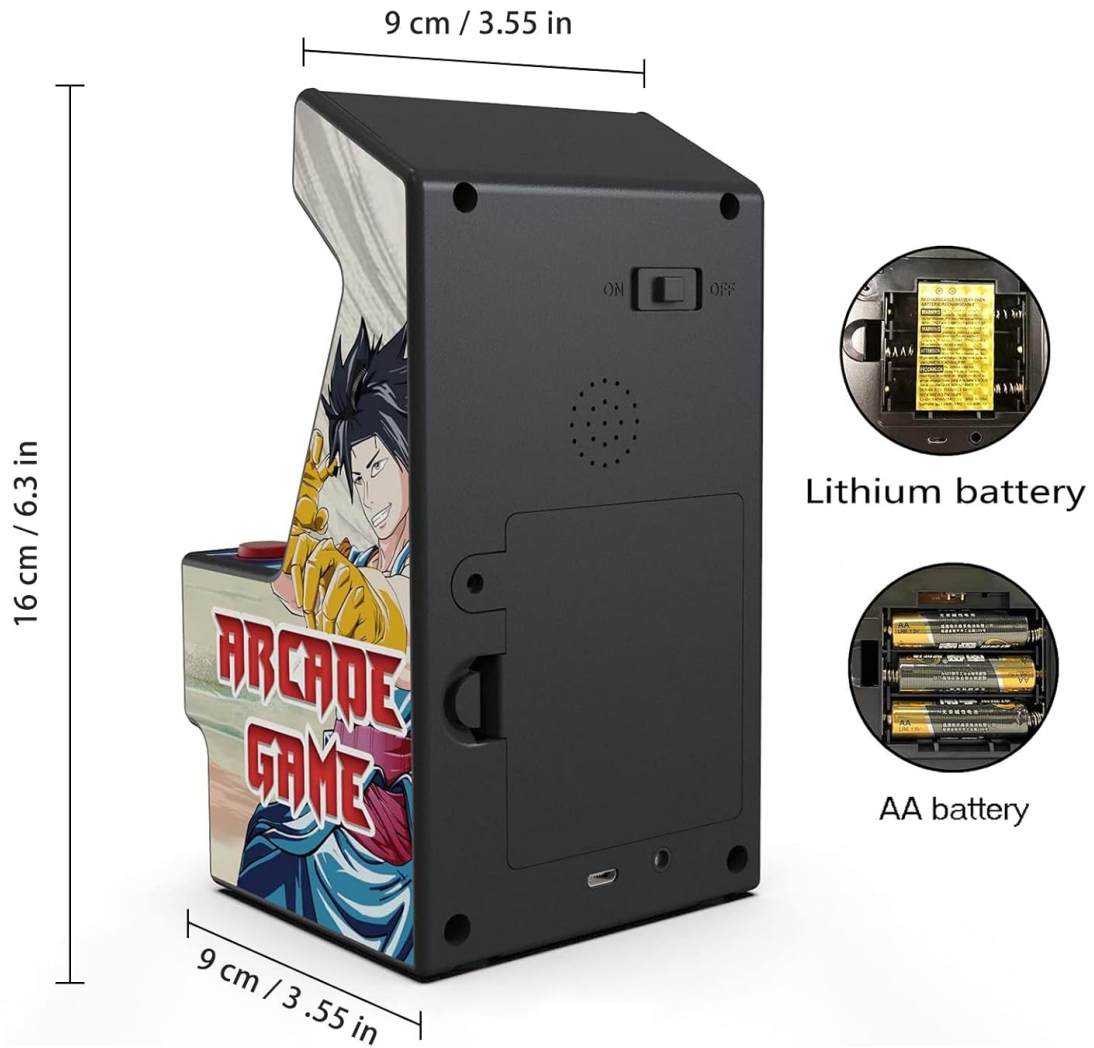


Figure 2: Rear view of the console, illustrating battery options and dimensions.

TV Connection

To enjoy games on a larger screen, connect the Mini Arcade Machine to a television using an AV cable (not included). The device features an AV output port. Connect the yellow plug for video and the white plug for audio to the corresponding input ports on your TV.

TV Connection Available. Enjoy **FULL-SCREEN** Gaming



Figure 3: The Mini Arcade Machine connected to a TV for full-screen gaming.

OPERATING INSTRUCTIONS

Controls

- **Joystick:** Provides directional control for gameplay.
- **A & B Buttons:** Used for various in-game actions such as attack, dodge, pick, throw, climb, jump, and hop.
- **START Button:** Initiates or pauses the game.
- **RESET Button:** Resets the current game or returns to the main game selection menu.
- **VOLUME Control:** Adjusts the audio level (typically 4 levels).



Figure 4: Detailed view of the console's control layout.

Game Selection and Play

1. Turn on the device using the power switch located on the back.
2. Use the joystick to navigate through the list of 156 built-in games.
3. Press the START button to select a game and begin playing.
4. During gameplay, use the joystick for movement and the A/B buttons for actions.
5. To pause the game, press the START button. Press it again to resume.
6. To return to the main menu or restart a game, press the RESET button.



Figure 5: The game selection interface with a preview of available games.

MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the battery is charged regularly to maintain its lifespan, even if not in frequent use.
- If using AA batteries, remove them if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged or fresh AA batteries are inserted correctly. Check that the power switch is in the 'ON' position.
- **No display on TV:** Verify that the AV cable is securely connected to both the arcade machine and the TV, and that the TV input source is correctly selected.
- **No sound or low sound:** Adjust the volume control on the side of the device. Ensure the TV volume is also up if connected to a TV.

- **Game progress not saving:** This device does not support saving game progress. Games must be completed in a single session or paused if you need to step away.
- **Controls unresponsive:** Ensure the device is powered on and the game is not paused. If issues persist, try resetting the device.

SPECIFICATIONS

Feature	Detail
Model Number	RHAC06
Product Dimensions	6.2"L x 3.5"W x 3.5"H
Item Weight	0.34 Kilograms (12 ounces)
Screen Size	2.8 Inches
Display Type	LCD
Number of Games	156 Classic 16-Bit Video Games
Power Source	Battery Powered (1 Lithium Ion battery included, also supports 3 AA batteries - not included)
Hardware Interface	USB (for charging)
Controller Type	Button Control (Joystick and Action Buttons)
Material	Plastic
Recommended Age	4 years and up

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: An official overview of the Retro Mini Arcade Machine by Golden Security, demonstrating its features and gameplay.

WARRANTY AND SUPPORT

For any issues or questions regarding your Golden Security Mini Arcade Machine, please contact customer service. We are committed to providing the best support to resolve any problems you may encounter.