

NERF E7921

NERF Ultra Two Motorized Blaster: Official Instruction Manual

Model: E7921

INTRODUCTION

Thank you for purchasing the NERF Ultra Two Motorized Blaster. This manual provides essential information for the safe and effective use of your new blaster. Please read all instructions carefully before operation.

Package Contents:

- 1x NERF Ultra Two Motorized Blaster
- 6x NERF Ultra Darts

Important: This blaster is designed to function exclusively with official NERF Ultra Darts. Use of other darts may impair performance or cause damage.

SAFETY INFORMATION

Always prioritize safety during use. Failure to follow these guidelines may result in injury.

- **WARNING:** Do not aim at eyes or face.
- Use only official NERF Ultra darts. Do not modify darts or blaster.
- Always wear eye protection when using this product.
- Adult supervision is recommended for younger users.



Figure 1: User demonstrating proper handling and eye protection with the NERF Ultra Two blaster.

SETUP

1. Battery Installation

The NERF Ultra Two blaster requires 6x AA alkaline batteries (not included) for its motorized firing mechanism. Follow these steps:

1. Locate the battery compartment on the blaster, typically on the side or bottom.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 6x AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

2. Loading Darts

The Ultra Two features a fast-back reloading system. To load darts:

1. Hold the blaster with the back-loading cylinder facing you.
2. Insert one NERF Ultra Dart into each of the six chambers in the cylinder. Ensure darts are fully seated.

3. The cylinder is designed for quick access, allowing for rapid reloading during play.



Figure 2: The NERF Ultra Two blaster and its compatible Ultra Darts, ready for loading.

OPERATING INSTRUCTIONS

To operate your NERF Ultra Two Motorized Blaster:

1. **Power On:** Press and hold the acceleration button (usually located below the main trigger) to power up the motor. You will hear the motor whirring.
2. **Aim:** Point the blaster safely away from eyes and face, towards your intended target.
3. **Fire:** While holding the acceleration button, pull the main trigger to launch a dart. Release the main trigger to fire single darts, or hold it down for rapid-fire action (if applicable).
4. **Reload:** When the cylinder is empty, quickly reload darts into the back-loading chambers as described in the "Loading Darts" section.



Figure 3: Product packaging illustrating key features such as the 120-foot dart range and motorized firing capability.

MAINTENANCE

Proper care will extend the life of your blaster:

- **Cleaning:** Wipe the blaster with a dry or slightly damp cloth. Do not immerse in water.
- **Storage:** Store the blaster and darts in a cool, dry place away from direct sunlight.
- **Darts:** Inspect darts regularly for damage. Discard bent or torn darts as they may affect performance or jam the blaster.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster does not fire.	Batteries are dead or incorrectly installed.	Check and replace batteries; ensure correct polarity.
	Acceleration button not held down.	Ensure the acceleration button is pressed and held to spin up the motor.
	Dart not fully loaded or jammed.	Clear any jammed darts and ensure darts are fully inserted.
Darts do not fly far or accurately.	Darts are damaged or not official Ultra Darts.	Use only new, official NERF Ultra Darts.
	Low battery power.	Replace batteries.

SPECIFICATIONS

- **Model Number:** E7921







- **Material:** Plastic
- **Recommended Age:** 8 years and up
- **Dart Compatibility:** NERF Ultra Darts ONLY
- **Batteries Required:** 6x AA (not included)
- **Product Dimensions:** Approximately 7.95 x 36.83 x 24.13 cm (3.13 x 14.5 x 9.5 inches)

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official NERF website. Keep your purchase receipt as proof of purchase.

© 2023 NERF. All rights reserved. NERF and all related properties are trademarks of Hasbro.

Related Documents - E7921

	<p>NERF ULTRA DORADO Blaster: Instructions and Safety Guide</p> <p>Official instructions for the NERF ULTRA DORADO blaster, including loading, firing, safety warnings, and troubleshooting. Learn how to use your NERF ULTRA DORADO safely and effectively.</p>
	<p>Nerf Roblox Arsenal Pulse Laser Blaster Instructions</p> <p>Comprehensive guide on how to operate, load, fire, and clear jams for the Nerf Roblox Arsenal Pulse Laser motorized dart blaster. Includes safety warnings and battery information.</p>
	<p>Nerf Ultra One Blaster: Assembly, Loading, and Firing Instructions</p> <p>A comprehensive guide to assembling, loading, and operating the Nerf Ultra One Motorized Blaster, including important safety information and troubleshooting tips.</p>
	<p>Nerf Hyper MACH-100 Blaster: Operating and Safety Instructions</p> <p>Comprehensive guide for the Nerf Hyper MACH-100 blaster, detailing how to load, fire, clear jams, store the blaster, and important safety precautions. Includes battery information and product compatibility.</p>
	<p>Nerf Pro Stryfe X Dart Blaster: User Manual and Safety Instructions</p> <p>Comprehensive guide to operating the Nerf Pro Stryfe X Dart Blaster, including charging, loading, firing, safety warnings, and storage. Features detailed instructions for safe play and regulatory information.</p>
	<p>Nerf N-Strike Elite Strongarm Blaster: User Guide</p> <p>Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.</p>