

ALLIMITY GA586WJSA

ALLIMITY GA586WJSA Replacement Remote Control User Manual

For Sharp AQUOS LCD TVs

1. INTRODUCTION

This manual provides instructions for the ALLIMITY GA586WJSA replacement remote control. This remote is designed to function as a direct replacement for various Sharp AQUOS LCD TV models, offering immediate usability without the need for complex programming.

The ALLIMITY GA586WJSA remote control is compatible with the following Sharp AQUOS LCD TV models:

- LC-32D653E, LC-32D65E, LC-32DH66E, LC-32DH77E, LC-32LE700E, LC-32LE705E, LC-32LX705E, LC-32X20E
- LC-37D653E, LC-37D65E, LC-37DH65E, LC-37DH65S, LC-37DH66E, LC-37G20E, LC-37X20E, LC-37XL8E
- LC-40DH77E, LC-40LE600E, LC-40LE700E, LC-40LE705E, LC-40LU700E, LC-40LU705E, LC-40LX700E, LC-40LX705E
- LC-42DH77E, LC-42DH77S, LC-42X20E
- LC-46D653E, LC-46D65E, LC-46DH65E, LC-46DH65S, LC-46DH66E, LC-46DH77E, LC-46DH77S, LC-46LE600E, LC-46LE700E, LC-46LE705E, LC-46LU700E, LC-46LU705E, LC-46LX700E, LC-46LX705E

2. SETUP

The ALLIMITY GA586WJSA remote control is designed for immediate use. No programming or pairing is required. Simply install the batteries, and the remote will be ready to operate your compatible Sharp AQUOS LCD TV.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

The ALLIMITY GA586WJSA remote control features 40 buttons designed to replicate the functions of your original Sharp AQUOS LCD TV remote. Point the remote control directly towards the infrared sensor on your television for proper operation.

3.1 Key Functions Overview



Image: Front view of the ALLIMITY GA586WJSA remote control, displaying its button layout.

While specific button labels may vary slightly depending on your TV model, the general functions are as follows:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute:** Silences the TV audio.
- **Input/Source:** Selects the input source (HDMI, AV, etc.).
- **Menu:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Exit/Return:** Exits the current menu or returns to the previous screen.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary by TV model and on-screen prompts.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For media playback functions.

Refer to your Sharp AQUOS LCD TV's original user manual for detailed information on specific button functionalities and advanced features.

4. MAINTENANCE

Proper care and maintenance will extend the lifespan of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, alcohol, or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your ALLIMITY GA586WJSA remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity (+/-).
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Remote not pointed at TV sensor.	Replace batteries. Remove any objects blocking the line of sight to the TV's IR sensor. Ensure the remote is pointed directly at the TV.
Certain buttons do not respond.	Dirty contacts under the button; Button stuck.	Gently press the button multiple times. If the issue persists, the remote may require cleaning or replacement.
Remote does not control TV functions.	TV model not compatible; TV's IR sensor is faulty.	Verify your TV model is listed in the compatible models section. Test with another known-working remote if available to check the TV's IR sensor.

If these steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

- **Model Name:** GA586WJSA
- **Brand:** ALLIMITY
- **Connectivity Technology:** Infrared (IR)
- **Number of Buttons:** 40
- **Maximum Range:** 10 meters (approximately 33 feet)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Sharp AQUOS LCD TVs (refer to Introduction for full list)
- **Manufacturer:** changchunshi jutongwangluokeji youxiangongsi

- **Country of Origin:** China

7. WARRANTY AND SUPPORT

Warranty: This product comes with a 90-day warranty, ensuring excellent return service.

Customer Support: If you require any assistance, have questions, or encounter issues not covered in this manual, please feel free to contact our customer support team. Refer to your purchase documentation for contact details.
