

Artika Enchanted 29W LED Chandelier User Manual

Model: Enchanted

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Artika Enchanted 29W LED Chandelier. Please read this manual thoroughly before beginning installation and retain it for future reference.

The Artika Enchanted Chandelier features a modern design with a chrome finish and glass crystals, providing 1300 lumens of 3000 Kelvin LED light. It is designed for indoor use and offers adjustable height for versatile placement.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local and National Electrical Code (NEC) standards. If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Do not install this fixture in wet locations.
- Ensure the mounting surface can support the weight of the fixture.
- Handle glass components with care to prevent breakage and injury.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create a safety hazard.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning installation. If any parts are missing or damaged, contact Artika customer service.

- LED Chandelier Fixture (with integrated LED module)
- Mounting Bracket
- Mounting Hardware (screws, wire nuts, anchors)
- Glass Crystal Elements
- Instruction Manual

4. SETUP AND INSTALLATION

Follow these steps carefully to install your Artika Enchanted Chandelier. Professional installation is recommended.

1. **Turn off Power:** Before starting, ensure the power supply to the installation area is completely disconnected at the main circuit breaker.
2. **Prepare Mounting Bracket:** Attach the mounting bracket to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Adjust Height:** The chandelier features an adjustable suspension cable. Determine the desired hanging height and adjust the cable length accordingly. Secure the cable in place.
4. **Electrical Connections:** Connect the fixture's wires to the household electrical wires. Connect the black wire (Live) from the fixture to the black wire from the junction box. Connect the white wire (Neutral) from the fixture to the white wire from the junction box. Connect the ground wire from the fixture to the ground wire from the junction box. Secure all connections with wire nuts.
5. **Mount Fixture:** Carefully lift the chandelier and attach it to the mounting bracket, securing it with the provided screws or nuts. Ensure the fixture is stable and flush with the ceiling.
6. **Install Glass Crystals:** Carefully attach the individual glass crystal elements to the fixture as per the design. Refer to the product image for guidance.



Figure 1: Chandelier dimensions and components for installation reference.



Figure 2: Example of the Artika Enchanted Chandelier installed in a dining room setting.

5. OPERATING INSTRUCTIONS

Once installed, restore power to the circuit breaker. The Artika Enchanted Chandelier is ready for use.

- **Power On/Off:** Operate the chandelier using a standard wall switch connected to the fixture's circuit.
- **Dimming Function:** This fixture is dimmable and compatible with most standard LED dimmers. For optimal performance, use an LED-compatible dimmer switch. Follow the dimmer manufacturer's instructions for installation and operation.
- **Integrated LED:** The chandelier uses an integrated LED module, meaning no traditional bulbs are required or replaceable by the user.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your chandelier.

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the chrome finish. For glass crystals, use a soft, lint-free cloth and a mild glass cleaner. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and crystals.
- **Inspection:** Periodically check all electrical connections and mounting hardware for tightness.



Figure 3: Detail of the glass crystals and chrome finish, illustrating areas to clean carefully.

7. TROUBLESHOOTING

If you encounter issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture; Loose wiring; Faulty switch	Check circuit breaker; Verify all wire connections are secure; Test the wall switch.
Light flickers or dims improperly	Incompatible dimmer switch; Loose wiring	Ensure an LED-compatible dimmer is used; Check wire connections.
Fixture is unstable	Mounting hardware not secure	Tighten all mounting screws and ensure the bracket is firmly attached to the junction box.

If these solutions do not resolve the issue, contact Artika customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Artika
Model	Enchanted
Light Source	Integrated LED
Wattage	29W
Lumen Output	1300 Lumens
Color Temperature	3000 Kelvin
Finish	Chrome
Material	Alloy Steel, Glass Crystal
Style	Modern Chandelier
Dimmable	Yes (compatible with most LED dimmers)
Adjustable Height	Yes

9. WARRANTY

Artika products are manufactured to the highest quality standards and are covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Artika website for detailed warranty information and terms.

10. SUPPORT

For technical assistance, missing parts, or any questions regarding your Artika Enchanted Chandelier, please contact Artika customer service. Contact information can typically be found on the product packaging or the official Artika website.

Online Resources: For additional support and product information, visit the [Artika Store on Amazon](#).