

Easytry123 RCA LED30B30RQ

Easytry123 Replacement Remote Control Instruction Manual

For RCA LED30B30RQ, 40LA45RQ, 37LA45RQ, LED42C45, 32LA30RQD, LED32B30RQ,
LED46A55R120Q, 42PA30RQ LCD LED HDTVs

INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for various RCA LCD LED HDTV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.

Important Note:

- This is a replacement remote control. While it is designed to be compatible with the listed models, some advanced or specific functions of your original remote may not be fully supported.
- Ensure your television model number is listed in the compatibility section to confirm this remote is suitable for your device.
- Batteries are not included with this remote control.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries for operation. Follow these steps to install the batteries:

1. **Locate the Battery Compartment:** Turn the remote control over to find the battery compartment cover on the back.
2. **Open the Cover:** Gently slide the battery compartment cover downwards or in the direction indicated by an arrow (if present) to open it.
3. **Insert Batteries:** Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.

4. **Close the Cover:** Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the Easytry123 remote control, illustrating the location of the battery compartment. The compartment cover is visible at the bottom, designed for easy access to insert or replace AAA batteries.

OPERATING INSTRUCTIONS

This section outlines the basic functions of your Easytry123 replacement remote control. Point the remote directly at your television's infrared sensor for optimal performance.



Image: Front view of the Easytry123 remote control, displaying all buttons and their respective labels. Key buttons include Power, Mute, Number Pad, Channel Up/Down, Volume Up/Down, Input, Menu, and Navigation controls.

- **Power ():** Turns the television on or off.
- **Mute ():** Mutes or unmutes the television audio.
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **CH+/CH-:** Changes the television channel up or down.
- **VOL+/VOL-:** Adjusts the television volume up or down.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **MENU:** Accesses the television's main menu.
- **Navigation Buttons (▲ ▼ ◀▶):** Used to navigate through menus and options.
- **OK:** Confirms selections within menus.
- **EXIT:** Exits the current menu or on-screen display.
- **EPG:** Accesses the Electronic Program Guide (if supported by your TV and broadcast).
- **FREEZE:** Pauses the current image (functionality may vary by TV model).
- **CC:** Activates or deactivates Closed Captions.
- **ASPECT:** Changes the screen aspect ratio.
- **FAV+/FAV-:** Navigates through favorite channels.

- **AUTO:** Automatic picture adjustment (for analog inputs).
- **P.MODE:** Cycles through picture modes (e.g., Standard, Dynamic, Movie).
- **S.MODE:** Cycles through sound modes (e.g., Standard, Music, Movie).
- **SLEEP:** Sets a sleep timer for the television.
- **HDMI1, HDMI2, USB, TV:** Direct input selection buttons.

For specific advanced functions or TV settings, please refer to your television's original instruction manual.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** Protect the remote from physical shock, as internal components can be damaged.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
 - Ensure there is a clear line of sight between the remote control and the television's infrared sensor. Obstructions can block the signal.
 - Confirm you are within the effective range of the remote control (typically 15-20 feet).
- **Some Functions Do Not Work:**
 - As a replacement remote, it may not support all functions of your original television remote. This is normal for universal or replacement remotes.
 - Verify that your television model is explicitly listed as compatible with this remote control.
- **Buttons Are Sticky or Unresponsive:**
 - This may indicate dirt or debris under the buttons. Try cleaning the remote as described in the Maintenance section.
 - If cleaning does not resolve the issue, the remote may be damaged and require replacement.

SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number	RCA LED30B30RQ (Primary compatible model)
Compatible Devices	RCA LCD LED HDTVs (LED30B30RQ, 40LA45RQ, 37LA45RQ, LED42C45, 32LA30RQD, LED32B30RQ, LED46A55R120Q, 42PA30RQ)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Batteries Required	2 x AAA batteries (not included)

SUPPORT AND WARRANTY INFORMATION

This product is a replacement remote control manufactured by Easytry123.

For any questions regarding compatibility, functionality, or troubleshooting beyond the scope of this manual, please contact the seller or manufacturer directly. Specific warranty details, if any, would be provided at the point of purchase or by the seller.

Please note that as a replacement item, its functionality may vary slightly from the original remote control that came with your television.