

[Manuals.plus](#) /

› [InnoGear](#) /

› InnoGear Essential Oil Diffuser User Manual

InnoGear AD291D

InnoGear Essential Oil Diffuser User Manual

MODEL: AD291D

1. PRODUCT OVERVIEW

The InnoGear Essential Oil Diffuser is a compact and efficient aromatherapy device designed to disperse essential oils and act as a cool mist humidifier. It features a stylish dark wood grain finish and comes with a set of six pure essential oils. This manual provides detailed instructions for safe and effective use.



Image 1.1: InnoGear Essential Oil Diffuser with included 6 essential oils (Tea Tree, Lavender, Eucalyptus, Lemongrass, Peppermint, Sweet Orange).

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before using the diffuser to prevent injury or damage.

- Avoid direct skin contact with undiluted essential oils.
- Keep out of reach of children and pets.
- Ensure proper ventilation during use.
- Do not exceed the maximum water fill line to prevent overflow.
- Use only clean tap water or distilled water.
- Do not immerse the unit in water or any other liquid.
- Unplug the diffuser from the power outlet when not in use or before cleaning.

3. SETUP AND INITIAL USE

Follow these steps for the first-time setup of your InnoGear Essential Oil Diffuser:

1. Remove the diffuser from its packaging.
2. Place the diffuser on a flat, stable surface.
3. Gently remove the top cover by lifting it upwards.
4. Fill the water tank up to the max line with clean water. (Capacity: 100ml)
5. Add 2-3 drops of your preferred essential oil into the water tank. Adjust the number of drops based on desired scent intensity.
6. Replace the top cover, ensuring it is securely seated.
7. Plug the power adapter into the diffuser's power input, then plug the adapter into a wall outlet.



Image 3.1: The diffuser in operation, showing mist output and indicating continuous (3-4 hours) and intermittent (6-8 hours) mist modes.

4. OPERATING INSTRUCTIONS

The diffuser features two control buttons: "LIGHT" and "MIST".

4.1 Mist Control

- Press the **"MIST"** button once for continuous mist mode (lasts 3-4 hours).
- Press the **"MIST"** button a second time for intermittent mist mode (lasts 6-8 hours, misting on and off at intervals).
- Press the **"MIST"** button a third time to turn off the mist function.
- The diffuser will automatically shut off when the water runs out, regardless of the mist mode selected.

4.2 Light Control

- Press the **"LIGHT"** button once to turn on the LED light, which will cycle through 7 different colors.
- Press the **"LIGHT"** button again to fix the light to a specific color. Continue pressing to cycle through the available colors (Red, Green, Blue, Yellow, Purple, Cyan, White).
- Press and hold the **"LIGHT"** button for 2 seconds to turn off the light function.

8 Colors Mood Light

Add atmosphere and boost inspiration

Create your style



Adjustable
brightness



Fixed
color



Rotating
color



Light
off

Image 4.1: The diffuser showcasing its 8 color mood light options, including adjustable brightness, fixed color, rotating color, and light off modes.

5. MAINTENANCE AND CARE

Regular cleaning helps maintain the diffuser's performance and extends its lifespan.

1. Unplug the diffuser and remove the top cover.
2. Empty any remaining water from the tank.
3. Wipe the inside of the water tank with a soft cloth. For stubborn residue, use a cotton swab dipped in white vinegar to gently clean the ultrasonic disc located at the bottom of the tank.
4. Rinse the tank with clean water, being careful not to get water into the air outlet.

- 5. Wipe the exterior of the diffuser with a soft, dry cloth.
- 6. Allow all parts to air dry completely before reassembling or storing.
- 7. Clean the diffuser after every 5-6 uses or every 3-5 days to prevent mineral buildup.

6. TROUBLESHOOTING

If you encounter any issues with your diffuser, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No mist or low mist output	Insufficient water; water level too high; ultrasonic disc dirty; cover not properly aligned.	Add water (do not exceed MAX line); empty excess water; clean the ultrasonic disc; ensure the cover is correctly placed.
Light not working	Power not connected; light function turned off.	Check power connection; press the "LIGHT" button to turn on or cycle colors.
Unusual noise	Insufficient water; diffuser not on a flat surface.	Add water; place the diffuser on a stable, flat surface.

If the problem persists, please contact InnoGear customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.17 x 4.17 x 5.79 inches; 1.28 Pounds
Item Model Number	AD291D
Manufacturer	InnoGear
Color	Dark Wood Grain
Scent (Included Oils)	Tea tree, lavender, eucalyptus, lemongrass, peppermint, sweet orange
Recommended Uses	Office, Home
Material	Polypropylene (PP)
Water Tank Capacity	100ml
Mist Modes	Continuous (3-4 hours), Intermittent (6-8 hours)
Light Features	7 Colors, Cycle/Fixed Color, Adjustable Brightness
Auto Shut-off	Yes, when water runs out



Image 7.1: Product dimensions of the InnoGear Essential Oil Diffuser.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your InnoGear Essential Oil Diffuser, please contact InnoGear customer service directly.

You can also visit the official InnoGear store for more products and information: [InnoGear Store](#)

