

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [ALLIMITY GA586WJSA Replacement Remote Control for Sharp LCD AQUOS TV](#)

ALLIMITY GA586WJSA

ALLIMITY GA586WJSA Replacement Remote Control Instruction Manual

Model: GA586WJSA | Brand: ALLIMITY

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ALLIMITY GA586WJSA replacement remote control. This remote is designed to function as a direct replacement for various Sharp LCD AQUOS TV models. Please read this manual thoroughly before use to ensure optimal performance.

PRODUCT OVERVIEW

The ALLIMITY GA586WJSA remote control features a standard layout for easy navigation and control of your Sharp LCD AQUOS TV. Below is an image of the remote with a description of its key buttons and functions.





Image: The ALLIMITY GA586WJSA remote control, showing its full button layout and the open battery compartment at the bottom. The remote is black with grey and colored buttons.

Button Functions:

- **Power Button (Top Right):** Turns the TV on or off.
- **Number Pad (0-9):** Directly selects channels or enters numerical inputs.
- **S / ATV / DTV:** Switches between different signal sources or TV modes (e.g., Satellite, Analog TV, Digital TV).
- **EPG (Electronic Program Guide):** Displays the TV program guide.
- **RADIO:** Switches to radio mode if supported by the TV.
- **P.INFO (Program Information):** Displays information about the current program.
- **Channel Up/Down (P+/P-):** Changes the TV channel.
- **Volume Up/Down (V+/V-):** Adjusts the TV volume.
- **AV MODE:** Cycles through available audio/video input modes.

- **SLEEP:** Sets the sleep timer for the TV.
- **MENU:** Accesses the TV's main menu.
- **END:** Exits the current menu or function.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button (Center):** Confirms selections in menus.
- **Color Buttons (R, G, Y, B):** Red, Green, Yellow, Blue buttons for specific functions within menus or interactive services.
- **OPTION:** Accesses additional options or settings.
- **REV (Rewind):** Rewinds media playback.
- **PLAY:** Starts or resumes media playback.
- **FWD (Fast Forward):** Fast forwards media playback.
- **REC (Record):** Initiates recording (if TV supports PVR functionality).
- **REC STOP (Record Stop):** Stops recording.
- **STOP:** Stops media playback.
- **ACTION:** Performs a specific action, often context-sensitive.
- **AQUOS LINK:** Activates or controls Sharp AQUOS Link compatible devices.

SETUP

The ALLIMITY GA586WJSA remote control is designed for immediate use with compatible Sharp LCD AQUOS TVs without requiring complex programming.

Battery Installation:

1. Locate the battery compartment on the back of the remote control. This is typically a sliding cover at the bottom.
2. Slide the battery compartment cover open.
3. Insert two new AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use. No additional pairing or programming is required for compatible Sharp LCD AQUOS TV models.

OPERATING INSTRUCTIONS

To operate your TV with the ALLIMITY GA586WJSA remote control, point the remote directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

Basic Operations:

- **Power On/Off:** Press the **Power** button once.
- **Channel Selection:** Use the **Number Pad** to enter a channel number directly, or use the **P+** / **P-** buttons to cycle through channels.
- **Volume Adjustment:** Use the **V+** / **V-** buttons to increase or decrease the volume.
- **Input Source:** Press the **AV MODE** button to cycle through available input sources (e.g., HDMI, AV, Component).
- **Menu Navigation:** Press the **MENU** button to open the TV's main menu. Use the **Navigation** buttons (Up, Down, Left, Right) to move through options and **OK** to select. Press **END** to exit the menu.

Advanced Functions:

- **Digital/Analog TV:** Use the **ATV** or **DTV** buttons to switch between analog and digital television broadcasts.

- **Program Guide:** Press **EPG** to view the Electronic Program Guide.
- **Media Playback Controls:** For compatible media players or TV functions, use **PLAY**, **STOP**, **REV**, and **FWD** buttons.
- **Recording Functions:** If your TV supports PVR, use **REC** and **REC STOP**.
- **AQUOS LINK:** Utilize this button to control other Sharp AQUOS Link compatible devices connected to your TV.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:** Ensure the remote is pointed directly at the TV's infrared sensor. Check for any obstructions.
- **Buttons unresponsive:** Replace the batteries with fresh ones. Weak batteries are a common cause of intermittent or non-responsive remote control behavior.
- **TV not turning on/off:** Verify that the TV is plugged into a power source and is not in standby mode due to a power outage.
- **Interference:** Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the remote's infrared signal.

If the issue persists after trying these steps, please refer to the Support section.

SPECIFICATIONS

Brand	ALLIMITY
Model Number	GA586WJSA
Connectivity Technology	Infrared (IR)
Maximum Range	10 Meters
Power Source	2 x AAA Batteries (not included)
Compatible Devices	Sharp LCD AQUOS TV models including: LC-52XL2E, LC-52X20E, LC-52LE705E, LC-52LE700E, LC-52DH77E, LC-52DH66E, LC-52DH65S, LC-52DH65E, LC-52D65E, LC-48X8E, LC-46XL2E, LC-46X8E, LC-46X20E, LC-46LX705E, LC-46LX700E, LC-46LU705E, LC-46LU700E, LC-46LE705E, LC-46LE700E, LC-46LE600E, LC-46DH77S, LC-46DH77E, LC-46DH66E, LC-46DH65S, LC-46DH65E, LC-46D65E, LC-46D653E, LC-42X20E, LC-42DH77S, LC-42DH77E, LC-40LX705E, LC-40LX700E, LC-40LU705E, LC-40LU700E, LC-40LE705E, LC-40LE700E, LC-40LE600E, LC-40DH77E, LC-37XL8E, LC-37X20E, LC-37G20E, LC-37DH66E, LC-37DH65S, LC-37DH65E, LC-37D65E, LC-37D653E, LC-37B20E, LC-32XL8E, LC-32X8E, LC-32X20E, LC-32LX705E, LC-32LX700E, LC-32LU705E, LC-32LU700E, LC-32LE705E, LC-32LE700E, LC-32LE600E, LC-32G20E, LC-32DH77S, LC-32DH77E, LC-32DH66E, LC-32DH65S, LC-32DH65E, LC-32D65E, LC-32D653E, LC-32B20E.

WARRANTY AND SUPPORT

This ALLIMITY GA586WJSA remote control comes with a 90-day warranty, ensuring excellent return service for any manufacturing defects or performance issues within this period.

For any assistance, questions, or troubleshooting beyond the scope of this manual, please do not hesitate to contact ALLIMITY customer support. Contact information can typically be found on the product packaging or the retailer's website.

where the product was purchased.