

Electrolux KMFE264TEX

Electrolux KMFE264TEX Microwave Oven User Manual

Model: KMFE264TEX

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Electrolux KMFE264TEX microwave oven. Please read these instructions carefully before using the appliance and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

SETUP AND INSTALLATION

Unpacking

Carefully remove the microwave oven from its packaging. Remove all packing materials, including any protective film or tape. Inspect the oven for any damage. If damaged, do not operate and contact Electrolux customer service.

Placement

- Place the oven on a flat, stable surface capable of supporting its weight (approximately 12.02 kg).

- Ensure adequate ventilation. Maintain a minimum clearance of 10 cm (4 inches) on the top, sides, and rear of the oven for proper airflow.
- Do not block air vents.
- Keep the oven away from heat sources such as radiators or direct sunlight.

Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance (typically 230V for household microwaves). Do not use extension cords or adapters.



Figure 1: Front view of the Electrolux KMFE264TEX Microwave Oven. This image shows the sleek black design with a digital display and control panel on the right side.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a digital display and various touch controls for setting cooking time, power level, and special functions.

- **Display:** Shows time of day, cooking time, and selected functions.
- **Power Level Button:** Selects microwave power levels (e.g., 100%, 70%, 50%).
- **Time/Weight Dial/Buttons:** Adjusts cooking time or weight for defrosting.
- **Start/Pause Button:** Starts or pauses the cooking cycle.
- **Stop/Cancel Button:** Stops the cooking cycle and clears settings.

Setting the Clock

1. Plug in the microwave. The display will show "0:00" or similar.
2. Press the "Clock" button (if available, otherwise consult specific model instructions for clock setting).
3. Use the time adjustment buttons or dial to set the current hour.
4. Press the "Clock" button again.
5. Use the time adjustment buttons or dial to set the current minutes.
6. Press the "Clock" button one last time to confirm.

Microwave Cooking

1. Place food in a microwave-safe container.
2. Open the oven door and place the container on the turntable. Close the door securely.
3. Press the "Power Level" button repeatedly to select the desired power level (e.g., P100 for full power).
4. Use the time adjustment buttons or dial to set the desired cooking time.
5. Press the "Start" button to begin cooking.

Defrosting

Your microwave oven may offer defrosting by time or by weight.

- **Defrost by Time:**

- a. Press the "Defrost" button.
- b. Set the desired defrosting time using the time adjustment buttons.
- c. Press "Start".

- **Defrost by Weight:**

- a. Press the "Defrost" button multiple times until "Defrost by Weight" mode is selected (if applicable).
- b. Use the weight adjustment buttons to enter the food's weight.
- c. Press "Start".

CARE AND MAINTENANCE

Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior with a damp cloth after each use to prevent food buildup.
- For stubborn stains, use a mild detergent or a microwave-safe cleaner. Avoid abrasive cleaners or scouring pads.
- Clean the turntable and roller ring regularly with warm, soapy water.

Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not allow water to drip into the ventilation openings.
- Clean the control panel with a soft, damp cloth. Avoid excessive water.

Replacing the Oven Light

The oven light is a specialized component. If it needs replacement, contact qualified service personnel or Electrolux customer service. Do not attempt to replace it yourself.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or rotated; Incorrect power level or cooking time.	Stir or rotate food during cooking; Adjust power level and cooking time as needed.

Problem	Possible Cause	Solution
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Sparking inside oven	Metal or foil in oven; Damaged oven interior.	Remove all metal objects; Contact service if interior is damaged.

If the problem persists after attempting these solutions, please contact Electrolux customer service.

SPECIFICATIONS

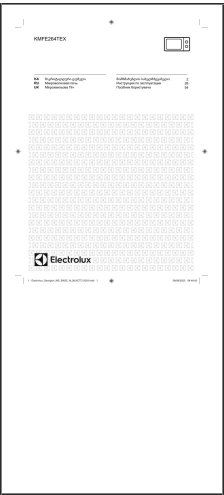 
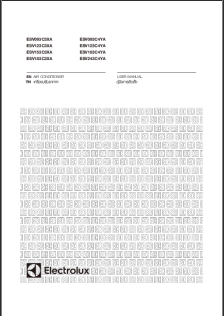 

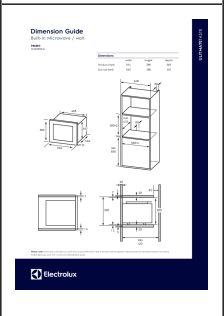 
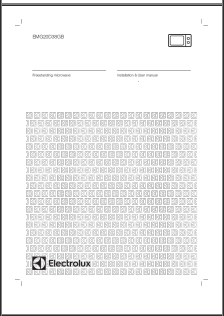 
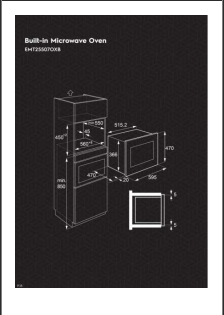 
- **Brand:** Electrolux
- **Model:** KMFE264TEX
- **Color:** Silver tones
- **Recommended Use:** Domestic
- **Weight:** Approximately 12.02 kg
- **Dimensions (L x W x H):** *Note: The provided dimensions (24 x 69 x 2.5 cm) appear unusual for a complete microwave oven. Please refer to the product packaging or official Electrolux documentation for precise measurements.*
- **Power Supply:** *Typically 230V, 50Hz. Please check the rating label on your appliance for exact voltage and wattage.*

WARRANTY AND SUPPORT

For warranty information, service requests, or to purchase genuine Electrolux spare parts, please visit the official Electrolux website or contact your local authorized service center. Keep your purchase receipt as proof of purchase for warranty claims.

Electrolux Official Website: www.electrolux.com

Related Documents - KMFE264TEX

	<p>Electrolux KMFE264TEX: მომხმარებლის სახელმძღვანელო</p> <p>ეს დოკუმენტი წარმოადგენს Electrolux KMFE264TEX ჩასაშენებელი მიკროტალღური ღუმელის მომხმარებლის სახელმძღვანელოს, რომელიც შეიცავს უსაფრთხოების ინსტრუქციებს, მონტაჟის, ექსპლუატაციის და ტექნიკური ინფორმაციის დეტალურ აღწერას.</p>
	<p>Electrolux Air Conditioner User Manual - ESV Series</p> <p>Comprehensive user manual for Electrolux ESV series air conditioners. Includes installation, operation, maintenance, safety instructions, and troubleshooting for models like ESV093C3XA, ESV123C4YA, and more.</p>
	<p>Electrolux EMB2529DSD Built-in Combination Microwave User Manual</p> <p>User manual for the Electrolux EMB2529DSD built-in combination microwave oven. Provides instructions for operation, installation, safety, troubleshooting, and warranty information.</p>
	<p>Electrolux EMSB25XG Built-in Microwave Dimension Guide</p> <p>Provides detailed dimensions and installation guidelines for the Electrolux EMSB25XG Built-in Microwave / wall model.</p>
	<p>Electrolux EMG20D38GB Freestanding Microwave Oven Installation and User Manual</p> <p>This manual provides comprehensive installation and user instructions for the Electrolux EMG20D38GB freestanding microwave oven. It covers safety precautions, product description, control panel functions, daily use, automatic programs, accessories, troubleshooting, and cleaning.</p>
	<p>Electrolux Built-in Microwave Oven EMT255070XB Installation Dimensions</p> <p>Provides essential installation dimensions, cabinet requirements, and clearance specifications for the Electrolux EMT255070XB built-in microwave oven.</p>

