

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual for Mitsubishi TV Models

ECONTROLLY RCEC-MKJ36998126

ECONTROLLY Replacement Remote Control User Manual

Model: RCEC-MKJ36998126

INTRODUCTION

This user manual provides comprehensive instructions for the ECONTROLLY Replacement Remote Control, designed for a wide range of Mitsubishi TV models. This remote offers a direct replacement experience, requiring no complex programming. Simply insert batteries, and it's ready for use.

PRODUCT OVERVIEW





Image: Front view of the ECONTROLLY Replacement Remote Control. The remote is black with white buttons, featuring a standard layout including number keys, navigation pad, volume and channel controls, and dedicated function buttons like Power, Mute, Menu, and Input.

SETUP

Battery Installation

The remote control requires 2 AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

No programming is required. The remote is ready for use once batteries are installed.

OPERATING INSTRUCTIONS

This remote control is designed to function identically to your original Mitsubishi TV remote. Point the remote directly at your television's infrared sensor for optimal performance.

Button Functions

Button	Function
POWER	Turns the television on or off.
SLEEP	Activates or adjusts the sleep timer function.
MUTE	Mutes or unmutes the television audio.
TOOLS	Accesses quick settings or tool menus.
FAV	Accesses favorite channels or content.
FORMAT	Changes the screen aspect ratio or display format.
FREEZE	Freezes the current image on the screen.
INPUT	Selects the video input source (e.g., HDMI, AV).
MENU	Opens the main television menu.
0-9 (Number Buttons)	Directly enters channel numbers.
CANCEL	Cancels the current operation or input.
LAST	Returns to the previously viewed channel.
VOL (Volume Up/Down)	Adjusts the television volume level.
CH PAGE (Channel Up/Down)	Changes the television channel.
GUIDE	Displays the electronic program guide (EPG).
AUDIO	Selects audio options or tracks.
INFO	Displays current program information.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
ENTER	Confirms selections or enters a menu item.
VIDEO	Accesses video settings or modes.
EXIT	Exits the current menu or function.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	• Check if batteries are inserted correctly with correct polarity. • Replace old or dead batteries with new AAA batteries. • Ensure there is a clear line of sight between the remote and the TV's infrared sensor. • Verify that the remote is compatible with your specific Mitsubishi TV model.
Some buttons do not work.	• This remote is a direct replacement; ensure your TV model is listed as compatible. • Clean the remote's surface and buttons to ensure no debris is obstructing button presses.

SPECIFICATIONS

- **Model Number:** RCEC-MKJ36998126
- **Compatible Devices:** Various Mitsubishi TV models (WD73737, WD73738, WD73740, WD65736, WD65737, WD65738, etc.)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** Approximately 7 x 2 x 0.65 inches
- **Item Weight:** Approximately 1 ounce (without batteries)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For any issues or further assistance, please refer to the seller's return policy or contact the manufacturer directly. Keep your purchase receipt for warranty claims, if applicable.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question