

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [eufy](#) /

> [eufy RoboVac G10 Hybrid Robotic Vacuum Cleaner User Manual](#)

eufy RoboVac G10 Hybrid

eufy RoboVac G10 Hybrid Robotic Vacuum Cleaner User Manual

Model: T2150

Brand: eufy

1. INTRODUCTION

Welcome to the eufy RoboVac G10 Hybrid User Manual. This document provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new robotic vacuum cleaner. The RoboVac G10 Hybrid is designed to simplify your cleaning routine with its advanced features, including dynamic navigation, 2-in-1 sweeping and mopping capabilities, and smart control options. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

Key Features

- **Dynamic Navigation:** Advanced gyro-navigation technology for up to 2x cleaning efficiency.
- **Hybrid 2-in-1 Vacuum & Mop:** Combines sweeping and mopping for a deeper clean on hard floors.
- **Convenient Control:** Voice control via Google Assistant or phone control via the eufy Clean app.
- **Slim but Strong:** 2000Pa suction power in a super-slim 2.85-inch body.
- **Quiet Operation:** Engineered for quiet vacuuming.

Included Components

- RoboVac G10 Hybrid unit
- Charging base
- AC power adapter
- Cleaning tool
- Water tank
- Washable mopping cloths (x2)
- Waterproof pad
- Extra filter elements (x4)

- Extra set of unibody filter
- Side brushes (x4)
- Cable ties (x5)
- Quick installation guide and manual

Product Visuals



The eufy RoboVac G10 Hybrid, showcasing its sleek design, charging base, and the accompanying smartphone application for control.

Smart Dynamic Navigation



2x

2x More Efficient*

*Compared with RoboVac 10

The RoboVac G10 Hybrid utilizing its Smart Dynamic Navigation to efficiently clean a hard floor, illustrating its systematic cleaning path.

Clean From Your Smartphone



Schedule



Spot Cleaning




Maintenance Alert



Remote Control



eufy Clean

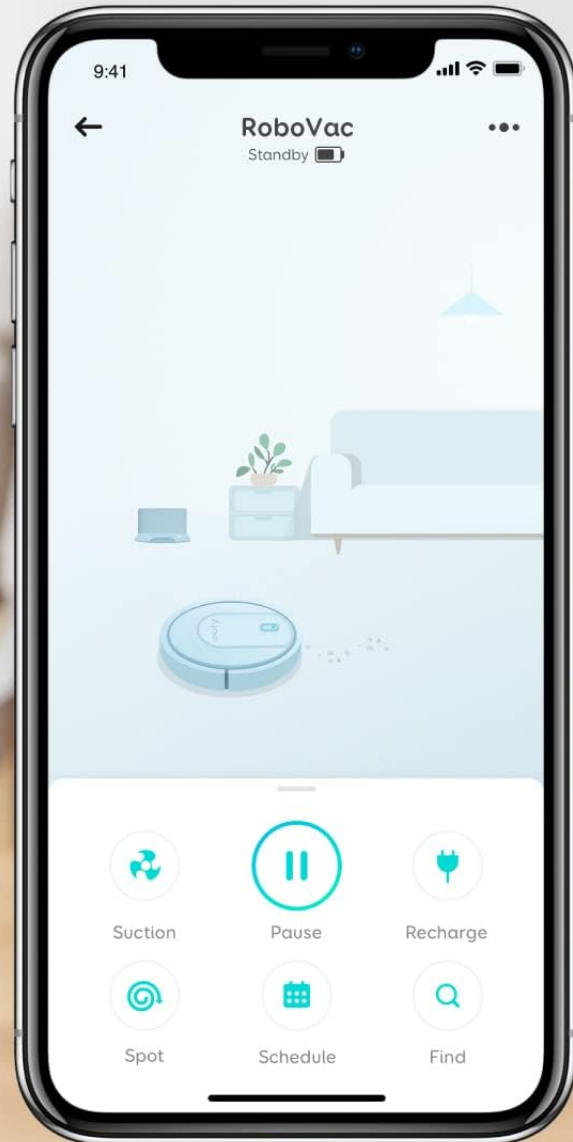

Control your RoboVac directly from your smartphone using the eufy Clean app, offering scheduling, spot cleaning, maintenance alerts, and remote control.

2000Pa for Supreme Cleaning



4x

4x Stronger
Suction Power*

*Compared with RoboVac 10

The RoboVac G10 Hybrid demonstrating its powerful 2000Pa suction, effectively cleaning debris from hard surfaces.

Hybrid 2-in-1 Vacuum & Mop



The Hybrid 2-in-1 Vacuum & Mop function allows the RoboVac to sweep and mop simultaneously, ensuring a thorough clean on hard floors.

Helpful Voice-Prompts



The RoboVac G10 Hybrid provides helpful voice prompts to keep you informed about its status, such as Wi-Fi setup, cleaning progress, and battery levels.

Official Product Video

Your browser does not support the video tag.

This official video from eufy demonstrates the key features of the RoboVac G10 Hybrid, including its smart dynamic navigation and 2-in-1 sweep and mop functionality. It provides a visual overview of the product in action.

3. SETUP

Charging Base Placement

- Place the charging base on a hard, level surface against a wall.
- Ensure there is at least 3 ft (1 m) of clear space to the front and 1 ft (0.3 m) to either side of the charging base.
- Connect the AC power adapter to the charging base and a wall outlet.

Initial Charging

- Place the RoboVac onto the charging base, ensuring the charging pins align.
- The indicator lights on the RoboVac will illuminate to show it is charging.
- Fully charge the RoboVac before first use (approximately 5-6 hours).

Connecting to the eufy Clean App

- Download the "eufy Clean" app from the App Store (iOS) or Google Play (Android).
- Follow the in-app instructions to connect your RoboVac to your home Wi-Fi network.
- Ensure your Wi-Fi network is 2.4GHz for successful connection.

Preparing the Cleaning Area

- Remove any cables, wires, or small objects from the floor to prevent tangling. Five cable ties are provided to help organize cords.
- For mopping, ensure the water tank is filled and the mopping cloth is attached.
- The RoboVac G10 Hybrid is engineered for hard floors only.

4. OPERATING INSTRUCTIONS

Starting a Clean

- Press the power button on the RoboVac or use the eufy Clean app to start a cleaning cycle.
- The RoboVac will automatically begin cleaning in a systematic path using its dynamic navigation.

Cleaning Modes

- **Standard Suction Mode:** Ideal for daily cleaning on hard floors, providing up to 80 minutes of cleaning time.
- **Max Suction Mode:** Provides increased suction for tougher dirt. Note that this mode reduces battery life.
- **Spot Cleaning:** Directs the RoboVac to clean a specific area more intensely.

Using the Mopping Function

- Fill the water tank with clean water. Do not use cleaning solutions that are not approved for robotic vacuums.
- Attach a clean mopping cloth to the water tank.
- Slide the water tank assembly into the back of the RoboVac until it clicks into place.
- The RoboVac will automatically switch to mopping mode when the water tank is attached.

Voice Control

- The RoboVac G10 Hybrid is compatible with Amazon Echo and Google Home devices.
- Enable the eufy Clean skill/action in your smart home app.
- Use voice commands such as "Alexa, ask RoboVac to start cleaning" or "Hey Google, tell RoboVac to go home."

Self-Charging

When the battery level is low, the RoboVac will automatically return to its charging base. If a cleaning cycle is interrupted due to low battery, it will resume cleaning from where it left off once sufficiently charged.

5. MAINTENANCE

Regular maintenance is crucial for optimal performance of your RoboVac G10 Hybrid. Perform these steps regularly:

Cleaning the Dustbin and Filter

- Empty the dustbin after each use.
- Clean the unibody filter by tapping it against a trash can to remove debris. Rinse the filter with water if necessary, and allow it to air dry completely before reinserting.

Cleaning Side Brushes

- Check side brushes regularly for tangled hair or debris.
- Remove any obstructions and ensure the brushes are securely attached.

Cleaning the Mopping Cloth and Water Tank

- Remove and wash the mopping cloth after each mopping session. It can be hand-washed or machine-washed.
- Empty any remaining water from the water tank and allow it to air dry to prevent mildew.

Cleaning Sensors

- Wipe the drop sensors and charging pins on the RoboVac and charging base with a clean, dry cloth.
- Keep the infrared sensor on the front of the RoboVac clean for accurate navigation.

6. TROUBLESHOOTING

If you encounter issues with your RoboVac G10 Hybrid, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
RoboVac gets stuck frequently.	Cables, small objects, or furniture obstructions. May also get stuck in direct sunlight.	Clear the cleaning area of obstacles. Use provided cable ties. Avoid direct sunlight on the floor during operation.
Side brushes fall off.	Brushes not securely attached or worn out.	Ensure brushes are clicked into place. Replace worn brushes with new ones from the included accessories.
Mopping function is not effective or leaves residue.	Improper water/solution, dirty cloth, or heavy floor grime.	Use only clean water or eufy-approved cleaning solutions. Ensure the mopping cloth is clean. For heavily soiled floors, manual cleaning may be required first.
Cannot connect to the eufy Clean app.	Incorrect Wi-Fi settings (e.g., 5GHz network), app issues, or temporary connectivity problems.	Ensure your Wi-Fi is 2.4GHz. Restart your router and RoboVac. Re-attempt the connection process in the app. Contact customer support if issues persist.
RoboVac leaves debris behind.	Full dustbin, clogged filter, or worn brushes.	Empty the dustbin and clean the filter. Check and clean the side brushes. Ensure no large objects are being sucked up that could block the intake.
Error message "device trapped" or "wheel suspended".	RoboVac is physically stuck or sensors are dirty.	Manually move the RoboVac to a clear area. Clean the drop sensors and wheels. If the issue persists, try resetting the device.

7. SPECIFICATIONS

Attribute	Detail
Brand	eufy
Model Name	RoboVac G10 Hybrid
Model Number	T2150
Special Feature	BoostIQ™ Technology, Slim (2.85"), Powerful performance
Color	Black
Product Dimensions	12.8"L x 12.8"W x 2.83"H
Item Weight	5.95 pounds
Filter Type	Disk
Battery Life	80 minutes (Standard suction mode)
Power Source	Corded Electric
Batteries Included	Yes (1 AA battery required, included)
Control Method	Voice, App
Compatible Devices	Amazon Echo, Google Home
UPC	848061058376, 194644068592
Specific instructions for use	Dual action, hard floor

8. WARRANTY AND SUPPORT

eufy provides a 12-month worry-free warranty for the RoboVac G10 Hybrid. For any questions, technical support, or warranty claims, please contact eufy customer support. You can find additional support and contact information on the official eufy website or through the eufy Clean app.

For a detailed user guide in PDF format, please refer to the official document available [here](#).