

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Samsonite](#) /
- › [Samsonite Freeform Hardside Expandable Spinner Luggage User Manual](#)

Samsonite 80242-1596

Samsonite Freeform Hardside Expandable Spinner Luggage User Manual

Model: 80242-1596

INTRODUCTION

The Samsonite Freeform Hardside Expandable Spinner Luggage is engineered for modern travel, offering a blend of durability, maneuverability, and organized packing. This manual provides essential information for the proper use and care of your luggage.



Image: The Samsonite Freeform Hardside Expandable Spinner Luggage in Amethyst Purple, showcasing its ribbed hardshell design and spinner wheels.

KEY FEATURES

- **Durable Hardshell:** Constructed from scratch-resistant Polypropylene for enhanced durability.
- **Expandable Capacity:** Features an expansion zipper to increase packing volume.
- **Double Spinner Wheels:** Four oversized, multidirectional spinner wheels for smooth 360-degree mobility.
- **TSA Combination Lock:** Integrated lock for secure, keyless security, approved by the Transportation Security Administration.
- **Adjustable Handle:** Ergonomic, push-button locking handle for comfortable maneuvering.
- **Organized Interior:** Includes elastic cross-straps, a zippered divider, and a pouch for secure and neat packing.

SETUP AND INITIAL USE

Setting the TSA Combination Lock

1. The lock is preset to 0-0-0.
2. Locate the small reset button (often recessed) next to the dials. Use a pen or pointed object to press and hold this button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set.
5. Test the lock by scrambling the numbers and then entering your new combination to open it.



Image: A detailed view of the integrated TSA-approved combination lock, showing the dials and the zipper pullers inserted into the lock mechanism.

Adjusting the Handle

To extend the handle, press the button located on the top of the handle and pull upwards. To retract, press the button and push downwards until it locks into place.

Adjustable Ergonomic Handle



Image: A close-up of the adjustable ergonomic handle, illustrating its design and the push-button mechanism for extension and retraction.

OPERATING INSTRUCTIONS

Packing Your Luggage

- Utilize the elastic cross-straps to secure clothing and prevent shifting during transit.
- Use the zippered divider to separate compartments or keep items organized. The integrated pouch can store smaller accessories.
- For additional space, unzip the expansion zipper located around the perimeter of the luggage.



Stay Organized

Cross Ribbon

Divider with Pocket

Image: The interior of the luggage, demonstrating the cross-ribbon straps and a zippered divider with a pocket for organized packing.

Expandable Storage Capacity



Image: A visual comparison of the luggage in its standard and expanded states, highlighting the additional storage capacity provided by the expansion zipper.

Maneuvering the Luggage

The four oversized, multidirectional spinner wheels allow for effortless 360-degree movement. Push or pull the luggage in any direction with minimal effort.



Image: A close-up view of the oversized 360-degree dual spinner wheels, designed for smooth and easy navigation.

MAINTENANCE AND CARE

- **Cleaning the Exterior:** Wipe the hardshell surface with a soft, damp cloth and mild soap. Avoid abrasive cleaners.
- **Wheel Care:** Periodically check wheels for debris. Clean with a soft brush if necessary. Avoid harsh chemicals.
- **Zipper Maintenance:** Keep zippers free of dirt and lubricate occasionally with a silicone-based spray if they become stiff.
- **Storage:** Store luggage in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

- **Lock Not Opening:** Ensure you are using the correct 3-digit combination. If forgotten, contact Samsonite customer support for assistance. TSA agents can open the lock with a master key without damaging it.
- **Stiff Wheels:** Check for hair or debris caught in the wheel mechanism. Clean as described in the

Maintenance section.

- **Handle Sticking:** Ensure the push-button is fully depressed when extending or retracting. Check for any obstructions in the handle mechanism.
- **Zipper Issues:** If a zipper is stuck, try gently moving it back and forth. Ensure no fabric is caught. Lubricate if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	80242-1596
Material Composition	Polycarbonate
Product Dimensions (External, incl. wheels)	31.1" x 20.9" x 13.8" (79 x 53 x 35 cm)
Product Dimensions (Case Body)	27.6" x 20" x 13" (70.1 x 50.8 x 33.02 cm)
Weight (Large Checked)	2.95 kg (6.5 lbs)
Wheels	Four Oversized, Multidirectional Spinner Wheels
Lock Type	Integrated TSA Combination Lock
Expandable	Yes



Image: A visual representation of the three available sizes (Carry-On, Checked Medium, Checked Large) of the Freeform luggage, including their respective width, depth, and height measurements.



Image: The Amethyst Purple luggage shown with its overall height, width, and depth dimensions in centimeters.

WARRANTY AND SUPPORT

The Samsonite Freeform Hardside Expandable Spinner Luggage is backed by a 10-year limited warranty, covering manufacturing defects. For warranty claims, product support, or to register your product, please visit the official Samsonite website or contact their customer service.

You can find more information and contact details by visiting the [Samsonite Store on Amazon](#).



Image: An illustration featuring the Samsonite Freeform Hardside Luggage and highlighting the 10-year limited warranty.