



Manuals.plus /

› AZMKIMI /

› AZMKIMI Universal TV Remote Control User Manual for Sony RM-YD102 and RM-YD103

AZMKIMI RM-YD102 RM-YD103

AZMKIMI Universal TV Remote Control User Manual

Model: RM-YD102, RM-YD103

1. INTRODUCTION

This manual provides instructions for the AZMKIMI Universal TV Remote Control, designed as a replacement for various Sony TV models, including those originally using RM-YD102 and RM-YD103 remotes. This remote offers straightforward operation without requiring complex programming.



Image: The AZMKIMI Universal TV Remote Control, highlighting its compatibility with Sony LED LCD TVs. Key features include stable performance, an upgraded smart chip, no programming required, and an extended transmitting distance.

Key Features:

- Compatible with Sony TV models: KDL32W700B, KDL40W590B, KDL40W600B, KDL42W700B, KDL48W590B, KDL48W600B, KDL50W700B, KDL55W700B, KDL60W610B, KDL60W630B, XBR55X800B, XBR65X800B.
- Also compatible with Sony Remote Controller models: RM-YD102, RM-YD028, RM-YD092, RM-YD065, RM-YD063, RM-YD040, RM-YD027, RM-YD026, RM-YD025, RM-YD024, RM-YD021, RM-YD018, RM-YD014, RM-YD005.
- Features a virtual keyboard and dedicated Netflix button.
- No programming or setup required for immediate use.

2. SETUP: BATTERY INSTALLATION

To begin using your remote control, you must first install two AAA batteries (not included).

1. **Step 1:** Remove the battery cover from the back of the remote control.
2. **Step 2:** Insert two new AAA batteries into the battery compartment, ensuring correct polarity (+ and -).

3. **Step 3:** Replace the battery cover until it clicks securely into place.



Image: A visual guide demonstrating the three steps for installing AAA batteries into the remote control.

Once batteries are installed, the remote is ready for use with compatible Sony TVs without any additional programming.

3. OPERATING INSTRUCTIONS: FUNCTION BUTTONS

Familiarize yourself with the functions of each button on your remote control:

Function Button



POWER - Turns the TV on and off.

Color buttons (RED/ GREEN/ YELLOW/ BLUE) - Shortcut keys for interactive functions.

FOOTBALL - Turns on the "live football" mode.

SOCIAL VIEW - Presses to use social network services.

DISCOVER - Access the "Discover"

NETFLIX - Accesses the "NETFLIX".

SEN - Accesses the "Sony Entertainment Network TM" online service.

RETURN - Returns to the previous menu.

HOME - Press to access the HOME dashboard.

OPTIONS - Displays the available options on the screen.

GUIDE - Displays and Electronic Program Guide.

DISPLAY - Shows current program information for the current channel.

CC - Close the caption.

VOL+/- - Adjusts the volume.

CH+/- - Changes channels.

MUTING - Cuts off the sound temporarily.

Image: A detailed diagram illustrating the layout and specific functions of each button on the AZMKIMI remote control.

| Button | Function |
|--|--|
| POWER | Turns the TV on and off. |
| Color buttons (RED/ GREEN/ YELLOW/ BLUE) | Shortcut keys for interactive functions. |
| FOOTBALL | Turns on the "live football" mode. |
| SOCIAL VIEW | Presses to use social network services. |
| DISCOVER | Accesses the "Discover" menu. |
| NETFLIX | Accesses the "NETFLIX" application directly. |
| SEN | Accesses the "Sony Entertainment Network TM" online service. |
| RETURN | Returns to the previous menu or screen. |
| HOME | Presses to access the HOME dashboard. |
| OPTIONS | Displays the available options on the screen. |
| GUIDE | Displays the Electronic Program Guide. |
| DISPLAY | Shows current program information for the current channel. |
| CC | Closes the caption (Closed Captioning). |
| VOL +/- | Adjusts the volume up or down. |
| CH +/- | Changes channels up or down. |
| MUTING | Cuts off the sound temporarily. |

4. MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use two new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you experience issues with your remote control, consider the following:

- **Remote Not Responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that the TV is powered on.
- **Limited Range:**
 - Ensure there are no objects blocking the signal path.
 - Replace batteries if they are low.
- **Specific Buttons Not Working:**
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any debris.

- If only specific buttons are not working, and battery replacement does not resolve the issue, the remote may be faulty.

6. SPECIFICATIONS

| Feature | Detail |
|---------------------------------|---|
| Model Number | RM-YD102 RM-YD103 |
| Brand | AZMKIMI |
| Compatible Devices | Television (Sony Bravia HDTV LCD LED 3D Smart TV) |
| Power Source | 2 x AAA batteries (not included) |
| Product Dimensions | 8 x 2 x 0.01 inches |
| Item Weight | 2.89 ounces |
| Special Feature | IR Remote |
| Color | Black |
| Max Number of Supported Devices | 1 |

Remote Size

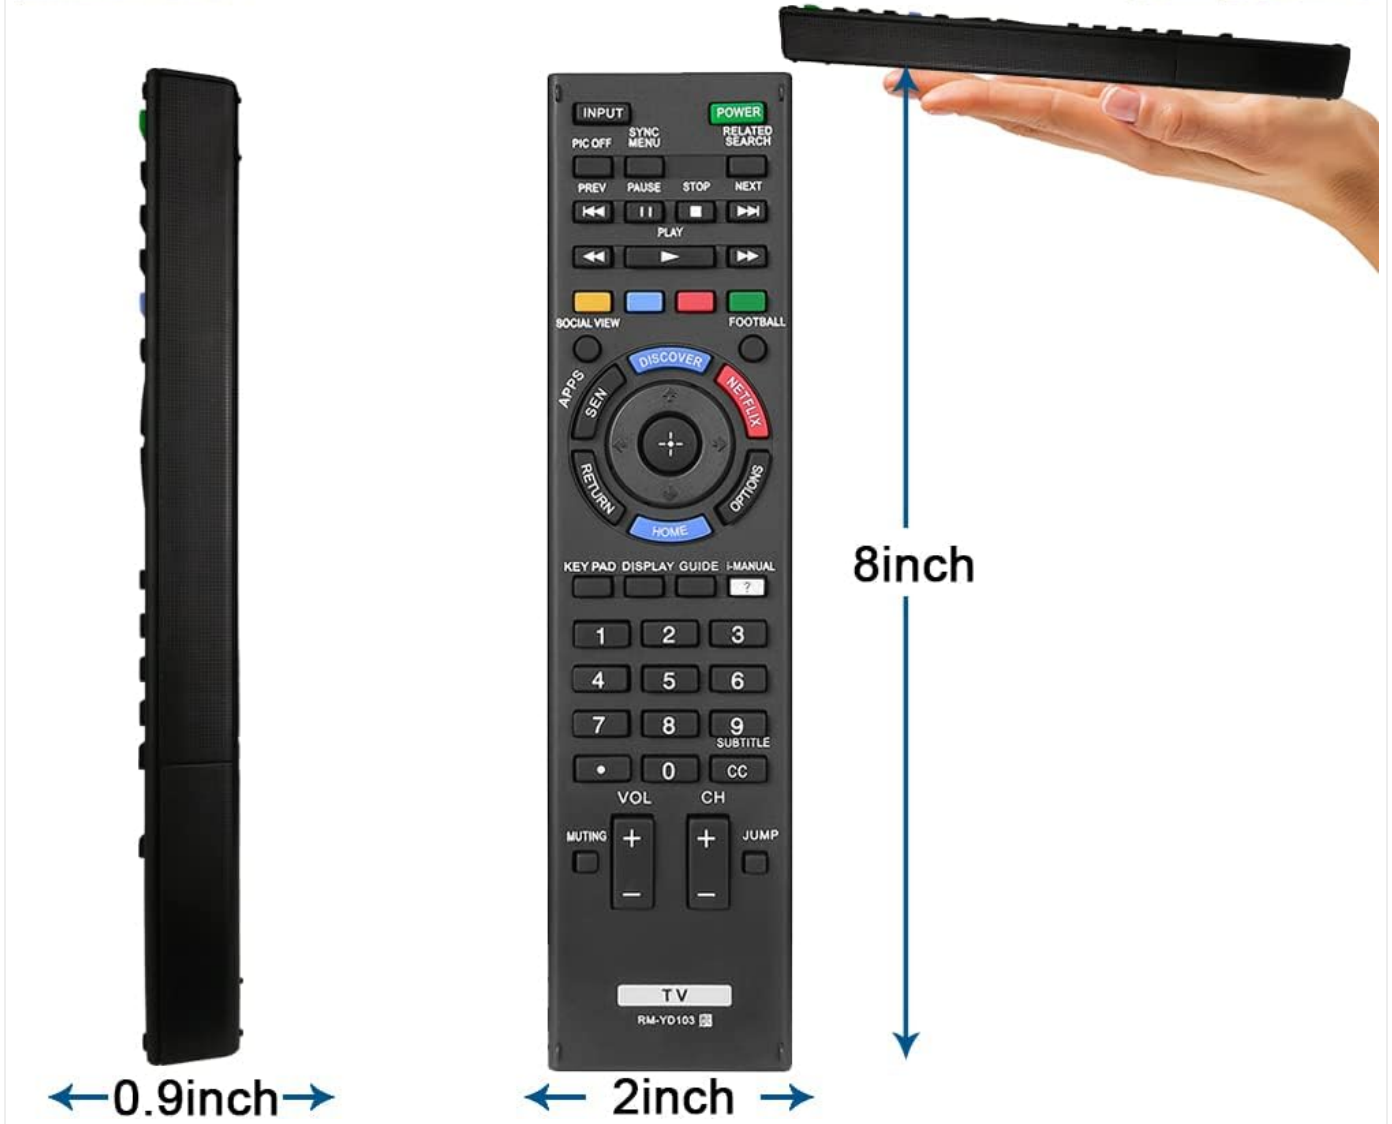


Image: A visual representation of the remote control's dimensions, showing a length of 8 inches and a width of 2 inches.

7. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your AZMKIMI Universal TV Remote Control, please contact the manufacturer directly through their official channels or the retailer where the product was purchased.

Manufacturer: AZMKIMI

