

[Manuals.plus](#) /

› [SKYN](#) /

› SKYN Thrill Massager Instruction Manual

SKYN Thrill Massager

SKYN Thrill Massager Instruction Manual

Model: Thrill Massager

1. INTRODUCTION

The SKYN Thrill Massager is a discreet, rechargeable vibrating massager designed for personal use. It features a compact, bullet-shaped design with a rose gold finish and offers three distinct vibrating speeds for varying intensity. This manual provides essential information for the safe and effective use of your SKYN Thrill Massager.





Image 1.1: The SKYN Thrill Massager in its retail packaging, showcasing the product name and key features.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the SKYN Thrill Massager. Failure to do so may result in injury or product damage.

- **Keep out of reach of children.** This product is intended for adult use only.
- **Legal Disclaimer:** Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.
- **Material Safety:** The massager is made with latex-free and phthalate-free, non-porous material.
- **Compatibility:** This device is compatible for use with all SKYN lubricants and condoms. Use only water-based or silicone-based lubricants. Avoid oil-based lubricants as they may damage the product material.
- **Cleaning:** Clean the massager thoroughly before and after each use as described in the Maintenance section.
- **Charging:** Use only the provided USB charging cable. Do not use damaged cables or chargers.
- **Water Resistance:** The device is water-resistant, not waterproof. Do not submerge it in water for extended periods.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x SKYN Thrill Massager
- 1 x USB Charging Cable
- 1 x Black Silk Storage Bag
- 1 x Instruction Leaflet (refer to www.skyn.com for additional information)

4. SETUP AND INITIAL CHARGE

4.1 Initial Cleaning

Before first use, clean the massager with mild soap and water. Rinse thoroughly and pat dry with a lint-free cloth.

4.2 Charging the Device

The SKYN Thrill Massager is powered by a lithium battery and requires charging before use.

1. Locate the charging port on the massager.
2. Insert the small end of the provided USB charging cable into the massager's charging port.
3. Connect the larger end of the USB cable to a standard USB power source (e.g., computer USB port, USB wall adapter).
4. Allow approximately 2 hours for a full charge. The indicator light will typically change or turn off when charging is complete.
5. A full charge provides up to 60 minutes of use.



THRILL



Quiet & discreet



Rose gold finish & unique lipstick-shape



Water resistant



Comes with a discreet carrying case



Easy to clean with mild soap and water



USB rechargeable (2 hours charging time will give you up to 1 hour pleasure)



Image 4.1: The SKYN Thrill Massager highlighting its USB rechargeable feature and other key attributes.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the massager on or off, press and hold the power button located on the device for a few seconds until it vibrates or stops.

5.2 Adjusting Vibration Speeds

The SKYN Thrill Massager offers 3 distinct vibration speeds.

1. Once the device is powered on, press the power button briefly to cycle through the available speeds.
2. Each press will advance to the next speed setting.
3. Continue pressing until you reach your desired intensity.



SIZE COMPARISON



Image 5.1: A size comparison of the SKYN Thrill Massager, demonstrating its compact and discreet dimensions (3.7 inches long, 0.7 inches wide).

6. MAINTENANCE AND CARE

6.1 Cleaning

Proper cleaning ensures hygiene and extends the life of your massager.

- Always clean the massager before and after each use.
- Wash the device with mild soap and warm water.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a soft, lint-free cloth.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

6.2 Storage

Store the massager in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided black silk storage bag for discreet and protected storage.

7. TROUBLESHOOTING

If you encounter any issues with your SKYN Thrill Massager, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on or vibrate.	Battery is depleted.	Charge the device for 2 hours using the provided USB cable.
Device does not charge.	Loose connection, faulty cable/charger, or charging port issue.	Ensure the USB cable is securely connected to both the massager and the power source. Try a different USB port or wall adapter. If the issue persists, contact customer support.
Vibrations are weak.	Low battery.	Fully charge the device.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Thrill Massager
Brand	SKYN
Color	Rose Gold
Material	Silicone (Latex-free, Phthalate-free, Non-porous)
Product Dimensions	3.15 x 1.38 x 5.32 inches (approximate packaging dimensions); Massager: 3.7 inches (length) x 0.7 inches (width)
Weight	2.89 ounces
Vibration Speeds	3
Battery Type	Rechargeable Lithium Battery
Charging Time	Approximately 2 hours
Operating Time	Up to 60 minutes on a full charge
Water Resistance	Yes (splash-proof, not submersible)
Manufacturer	Lifestyles

9. WARRANTY AND SUPPORT

For specific warranty information, product registration, or customer support, please visit the official SKYN website at

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07RZ12N7F>

More documents and user manuals: <https://manuals.plus/>