

KAFF Bellini BLH 783

KAFF Bellini BLH 783 Built-in Hobs Instruction Manual

Model: Bellini BLH 783

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installing or using this appliance. Keep this manual for future reference. Failure to follow these instructions could result in fire, electric shock, or personal injury.

- Ensure proper ventilation in the kitchen area.
- Do not store flammable materials near the hob.
- This appliance is designed for domestic use only.
- Supervise children when the appliance is in use.
- In case of a gas leak, immediately turn off the gas supply, open windows, and do not operate any electrical switches.
- The Flame Failure Device (FFD) on the large burner is a safety feature. Ensure it is functioning correctly.

2. PRODUCT OVERVIEW

The KAFF Bellini BLH 783 is a 78 CM built-in hob designed for modern kitchens. It features a durable 8 MM toughened glass top, three full brass burners, and an auto electric ignition system for convenient operation. One large burner is equipped with a Flame Failure Device (FFD) for enhanced safety.



Image 2.1: Front view of the KAFF Bellini BLH 783 Built-in Hob.

Key Features:

- **3 Full Brass Burners:** Provides efficient and even heat distribution.
- **Auto Electric Ignition:** For quick and easy flame ignition.
- **8 MM Toughened Glass Top:** Durable and easy to clean surface.
- **Flame Failure Device (FFD):** Located on the large burner, it automatically cuts off the gas supply if the flame extinguishes.
- **SS Moulded Strip:** Adds to the aesthetic and structural integrity.
- **Knob Controls:** Ergonomic controls for precise flame adjustment.

3. INSTALLATION AND SETUP

Installation should be performed by a qualified technician in accordance with local regulations and safety standards. Ensure the kitchen counter cutout dimensions are accurate for a proper fit.

3.1 Countertop Cutout Dimensions

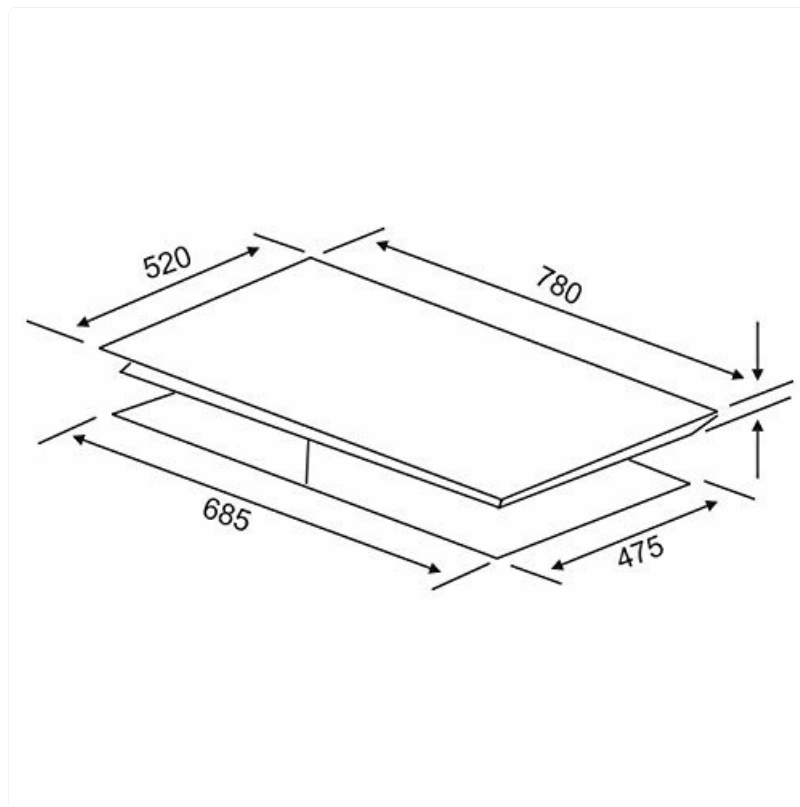


Image 3.1: Diagram illustrating the required cutout dimensions for the hob installation. The top surface measures 780mm x 520mm. The required cutout for installation is 685mm x 475mm.

- **Overall Hob Dimensions:** Approximately 780 mm (length) x 520 mm (width).
- **Required Cutout Dimensions:** Approximately 685 mm (length) x 475 mm (width).
- Ensure sufficient clearance around the hob for ventilation and maintenance.

3.2 Gas Connection

Connect the hob to a suitable gas supply (LPG or Natural Gas, as per model specifications) using an approved flexible hose or rigid pipe. Ensure all connections are leak-free using a soapy water solution.

3.3 Electrical Connection

The hob requires a 230 Volts AC power supply for the auto electric ignition. Ensure the electrical connection is properly grounded and installed by a qualified electrician.

4. OPERATING INSTRUCTIONS

4.1 Igniting a Burner

1. Place a suitable cooking vessel on the burner grate.
2. Push down the corresponding control knob and turn it counter-clockwise to the "Ignite" position (usually marked with a flame symbol).
3. The auto electric ignition will spark, and the burner will ignite.
4. Once the flame is lit, continue to hold the knob down for a few seconds (approximately 5-7 seconds) to allow the Flame Failure Device (FFD) sensor to heat up and engage, especially for the large burner equipped with FFD.
5. Release the knob. If the flame goes out, repeat the process, holding the knob down for a longer duration.
6. Adjust the flame size by turning the knob between the "High" and "Low" settings.

4.2 Turning Off a Burner

To turn off a burner, turn the control knob clockwise until it reaches the "Off" position (usually marked with a dot or '0'). Ensure the flame is completely extinguished.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hob. Always ensure the hob is cool and disconnected from the power supply before cleaning.

5.1 Cleaning the Glass Top

- Use a soft cloth or sponge with mild detergent and warm water.
- For stubborn stains, use a non-abrasive glass cleaner specifically designed for ceramic or glass cooktops.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals as they can scratch or damage the glass surface.
- Wipe dry with a clean, soft cloth to prevent water spots.

5.2 Cleaning Burners and Grates

- Remove the burner caps, burner rings, and pan supports (grates) when cool.
- Wash them with warm soapy water. For brass burners, avoid harsh chemicals that may tarnish the finish.
- Ensure all parts are completely dry before reassembling. Blocked burner holes can affect flame quality.
- Clean the ignition pins gently with a dry cloth to ensure proper sparking.

5.3 Control Knobs

The control knobs can be removed by pulling them gently upwards. Clean them with a damp cloth and mild detergent. Ensure they are dry before reattaching.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply, ignition pin dirty/wet, power outage, burner parts incorrectly assembled.	Check gas supply. Clean and dry ignition pin. Check power connection. Reassemble burner parts correctly.
Flame goes out after releasing knob (FFD burner).	Knob not held long enough, FFD sensor dirty or faulty.	Hold knob down for 5-7 seconds after ignition. Clean FFD sensor. If problem persists, contact service.
Irregular or yellow flame.	Burner holes blocked, incorrect gas pressure.	Clean burner holes. Contact a qualified technician to check gas pressure.
Gas smell.	Gas leak.	Immediately turn off gas supply, open windows, do not operate electrical switches. Contact emergency services and a qualified technician.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact KAFF customer service.

7. SPECIFICATIONS

- **Brand:** KAFF
- **Model:** Bellini BLH 783
- **Type:** Built-in Hob
- **Burners:** 3 (Full Brass)
- **Ignition System:** Auto Electric Ignition (Electronic)
- **Surface Material:** 8 MM Toughened Glass
- **Control Type:** Knob
- **Flame Failure Device (FFD):** Present on 1 Big Burner
- **Overall Dimensions:** 78 CM (Length) x 52 CM (Width) (Approximate)
- **Cutout Dimensions:** 68.5 CM (Length) x 47.5 CM (Width) (Approximate)
- **Power Source:** Corded Electric
- **Voltage:** 230 Volts
- **Fuel Type:** Gas (LPG/Natural Gas - check local regulations and appliance rating plate)
- **Color:** Black

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, service requests, or technical assistance, please refer to the warranty card provided with your appliance or visit the official KAFF website. Keep your purchase receipt as proof of purchase.

KAFF Customer Service:

Refer to your product documentation for specific contact details.

Visit the [Official KAFF Store on Amazon](#) for more product information.

© 2024 KAFF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question