

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tihebayan](#) /

› [Tihebayan Remote Control User Manual](#)

Tihebayan Tihebeyang6rg8z9oxu

Tihebayan Remote Control User Manual

Replacement Remote Control for MAG TV Box (Models 250, 254, 255, 260, 261, 270)

INTRODUCTION

This user manual provides comprehensive instructions for the Tihebayan Remote Control, designed as a direct replacement for various MAG IPTV TV Box models. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan.

This remote control is specifically compatible with MAG 250, 254, 255, 260, 261, and 270 IPTV TV Box models.

SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high temperatures, or humidity.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not dispose of batteries in fire.
- Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or aerosols.

PACKAGE CONTENTS

Please check the package carefully to ensure all items are present and in good condition.

- 1 x Tihebayan Remote Control

Note: 2 x AAA batteries are NOT included and must be purchased separately.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment location and installation. The image displays the remote control from various angles, including a detailed view of the battery cover being removed and batteries being inserted.

Once batteries are installed, the remote control is ready for immediate use with compatible MAG TV Box models without any additional programming.

OPERATING INSTRUCTIONS

The Tihebeyan remote control is designed to function identically to your original MAG TV Box remote. Simply point the remote control towards your MAG TV Box and press the desired buttons.

Key Functions Overview



Figure 2: Front and back view of the remote control, highlighting button layout.

Button	Function
Power (Red Button)	Turns the MAG TV Box on or off.
F1, F2, F3, F4 (Colored Buttons)	Programmable or specific functions depending on your MAG TV Box model and firmware.

Button	Function
A/V	Switches audio/video input sources.
MODE	Changes operating modes.
SETUP (Gear Icon)	Accesses system settings or setup menu.
APP	Opens the applications menu.
TV	Switches to TV mode.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
VOL +/-	Adjusts volume up or down.
CHAN +/-	Changes channels up or down.
Mute (Speaker with X)	Mutes or unmutes audio.
Menu (Three Lines)	Opens the main menu.
Info (i)	Displays information about the current program or content.
Numeric Keypad (0-9)	Direct channel entry or inputting numbers.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip)	Controls media playback.
Back/Return (Arrow)	Returns to the previous screen or menu.

The actual remote distance can be up to 10 meters (33 feet), though this may vary depending on the specific model of your IPTV TV box and environmental factors.



Figure 3: Remote control in use, demonstrating its ergonomic design and typical operating environment.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Do not use abrasive cleaners, solvents, or chemical agents, as these can damage the plastic and electronic components.
- **Battery Replacement:** Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote control range is poor.	Low battery power; Obstruction between remote and TV Box; Interference.	Replace batteries. Ensure a clear line of sight to the TV Box. Remove any objects blocking the signal. Reduce sources of interference.
Specific buttons not responding.	Button stuck or damaged; Compatibility issue with specific MAG TV Box model.	Gently press the button multiple times. Ensure your MAG TV Box model is listed as compatible (250, 254, 255, 260, 261, 270).
Remote control feels sluggish.	Low battery power.	Replace batteries.

If the problem persists after trying these solutions, please refer to the Support section.

SPECIFICATIONS

Feature	Detail
Model Number	Tihebeyang6rg8z9oxu
Compatible Models	MAG 250, 254, 255, 260, 261, 270 IPTV TV Box
Shell Material	ABS
Color	Black
Dimensions (L x W x H)	17.5 x 4.4 x 1.8 cm (6.9 x 1.7 x 0.7 inches)
Item Weight	Approximately 40.8 grams (1.44 ounces) without batteries
Remote Control Distance	Up to 10 meters (33 feet) (Actual distance depends on IPTV TV box model)
Power Supply	DC 3V (2 x AAA batteries, NOT included)
Special Feature	Ergonomic design



Figure 4: Remote control dimensions.

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. The warranty period typically begins from the date of purchase.

The warranty does not cover damage caused by:

- Accident, misuse, abuse, or neglect.
- Unauthorized repair or modification.
- Improper battery installation or use of incorrect battery types.
- Exposure to extreme temperatures or liquids.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact your retailer or the manufacturer directly. Please have your product model number (Tihebeyang6rg8z9oxu) and purchase details ready when contacting support.

You can visit the Tihebeyan Store for more information: [Tihebeyan Store on Amazon](#)