

Bergner BG-51186-RD

Bergner NATURALLY Air Fryer Instruction Manual

MODEL: BG-51186-RD | BRAND: BERGNER

1. Important Safety Instructions

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the cord, plug, or appliance in water or other liquid.
- **Hot Surfaces:** The appliance surfaces become hot during use. Always use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Ventilation:** Do not block any ventilation openings. Allow sufficient space (at least 10 cm) around the appliance for proper air circulation.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Usage Environment:** Use the appliance only on a stable, heat-resistant surface. Do not place it near flammable materials or heat sources.
- **Maintenance:** Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.

2. Product Overview

The Bergner NATURALLY Air Fryer is designed for healthy cooking with minimal oil. It features a large

capacity and intuitive controls.



Figure 2.1: Front view of the Bergner NATURALLY Air Fryer with cooked food in the basket, showcasing the digital control panel and the Ceratech coating label.



Figure 2.2: Direct front view of the Bergner NATURALLY Air Fryer, highlighting its sleek design and integrated handle.



Figure 2.3: Side view of the air fryer with the cooking basket partially pulled out, demonstrating its accessible design.



Figure 2.4: Top-down view of the empty air fryer basket, showing the design of the Ceratech non-stick coating and the included roasting rack.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Cooking Basket:** Removable basket with Ceratech non-stick coating for food placement.
- **Roasting Rack:** Insertable rack for optimal roasting of meats and vegetables.
- **Digital Control Panel:** Touch-sensitive display for setting temperature, time, and selecting programs.
- **Handle:** Ergonomic handle for safe removal of the cooking basket.

Features:

- **8 Intuitive Programs:** Pre-set cooking programs for various dishes.
- **Adjustable Temperature Control:** Temperature range from 80°C to 200°C.
- **30-Minute Timer:** With automatic shut-off.
- **Ceratech Non-Stick Coating:** Advanced coating on basket and rack for easy food release and cleaning.
- **1800W Power:** Ensures rapid heating and efficient cooking.

3. Setup

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash the cooking basket and roasting rack with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance for proper ventilation.
4. **First Use (Burn-in):** Before cooking food, run the air fryer for approximately 10 minutes at 180°C without any food inside. This helps to burn off any manufacturing residues and eliminate initial odors. A slight odor may be present during this process; this is normal.

4. Operating Instructions

The Bergner NATURALLY Air Fryer features a user-friendly digital control panel.



Figure 4.1: Detailed view of the digital control panel, showing temperature and time display with various program icons.



Figure 4.2: The air fryer positioned in a kitchen environment, ready for use with food in the basket.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket. For best results, do not overfill the basket. If using the roasting rack, place it inside the basket before adding food.
2. **Insert Basket:** Slide the cooking basket firmly back into the air fryer until it clicks into place.
3. **Power On:** Plug the appliance into a grounded wall outlet. The control panel will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature control buttons (usually '+' and '-') to set the desired cooking temperature (80-200°C).
 - Use the timer control buttons (usually '+' and '-') to set the desired cooking time (up to 30 minutes).
5. **Select Program (Optional):** Alternatively, press the 'M' (Mode) button to cycle through the 8 pre-set cooking programs. Each program has a default temperature and time, which can be adjusted manually if needed.
6. **Start Cooking:** Press the Power button to start the cooking process. The fan and heating element will activate.

7. **Shake/Flip Food:** For even cooking, especially with items like fries or chicken wings, pull out the basket halfway through the cooking time and shake or flip the food. Reinsert the basket to resume cooking.
8. **Completion:** The air fryer will beep when the set cooking time has elapsed and automatically shut off. Carefully pull out the basket and transfer the cooked food to a serving dish.

Tips for Best Results:

- For crispier results, lightly brush or spray food with oil.
- Do not overcrowd the basket; cook in batches if necessary.
- Preheating the air fryer for 3-5 minutes can improve cooking efficiency.

5. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Cleaning the Basket and Rack:**
 - The cooking basket and roasting rack have a Ceratech non-stick coating. Wash them with hot water, dish soap, and a non-abrasive sponge.
 - For stubborn food residues, soak the basket and rack in hot soapy water for about 10-15 minutes before cleaning.
 - Do not use metal utensils or abrasive cleaning materials, as they can damage the non-stick coating.
3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn grease, use a mild degreaser. Ensure no water enters the heating element area.
4. **Cleaning the Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

6. Troubleshooting

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Check power cord connection; test outlet with another appliance; ensure basket is pushed in completely.
Food is not cooked evenly.	Basket overcrowded; food not shaken/flipped.	Cook in smaller batches; shake or flip food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from appliance.	Grease residue from previous use; high-fat food.	Clean the basket and interior thoroughly; drain excess fat from food before cooking.
Food is not crispy.	Not enough oil; temperature too low; cooking time too short.	Lightly brush or spray food with oil; increase temperature or cooking time.

7. Specifications

Specification	Detail
Brand	Bergner
Model Number	BG-51186-RD
Color	Maroon (Red)
Capacity	6.9 Liters
Power	1800 Watts
Voltage	230 Volts (AC)
Material	Stainless Steel, Plastic
Product Weight	5.3 kg
Dimensions (LxWxH)	36 cm x 36 cm x 40 cm
Control Method	Touch
Recommended Uses	Roasting, Grilling

8. Warranty and Support

This Bergner NATURALLY Air Fryer comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, spare parts, or service inquiries, please contact Bergner customer service through their official website or the contact information provided in your product documentation. Always have your model number (BG-51186-RD) and purchase date ready when contacting support.

