

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Yamaha AV Receivers

Easytry123 HTR-5830, RX-V340, RX-V350, RX-V359, HTR-5930, HTR-5940, HTR-5730SL

# Easytry123 Replacement Remote Control User Manual for Yamaha AV Receivers

Models: HTR-5830, RX-V340, RX-V350, RX-V359, HTR-5930, HTR-5940, HTR-5730SL

---

## 1. INTRODUCTION

---

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Yamaha AV Receiver models. This remote offers essential functions for controlling your compatible Yamaha receiver.



Figure 1: Front view of the Easytry123 Replacement Remote Control.

**Important Note:** This is a replacement remote control. While it provides core functionalities, some advanced or specific functions of your original Yamaha remote may not be available or may operate differently. Please ensure your receiver model is listed as compatible before use.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Back view of the remote control, illustrating the battery compartment.

**Note:** Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

### 3. OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready for use. No programming is typically required for compatible Yamaha AV receivers.

## 3.1 Basic Operation

- **Power On/Off:** Press the **POWER** button to turn your Yamaha receiver on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the audio level.
- **Input Selection:** Use the dedicated input buttons (e.g., **CD**, **DVD**, **TUNER**, **AUX**) to switch between audio/video sources.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore.
- **Navigation:** Use the directional arrow buttons and **ENTER** (or **OK**) button for menu navigation if your receiver supports it.

## 3.2 Compatibility

This remote control is compatible with the following Yamaha AV Receiver models:

- Yamaha HTR-5830
- Yamaha RX-V340
- Yamaha RX-V350
- Yamaha RX-V359
- Yamaha HTR-5930
- Yamaha HTR-5940
- Yamaha HTR-5730SL

For optimal performance, ensure a clear line of sight between the remote control and the infrared (IR) sensor on your Yamaha receiver.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

If the remote control's performance degrades or it stops responding, the batteries may need to be replaced. Refer to Section 2.1 "Battery Installation" for instructions on how to replace the AA batteries.

- Remove old batteries promptly to prevent leakage.
- Dispose of used batteries according to local regulations.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are installed correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AA batteries.
  - Ensure there is a clear line of sight between the remote's IR emitter and the receiver's IR sensor. Obstructions can block the signal.
  - Verify that the remote is pointed directly at the receiver.
- **Some functions do not work:**
  - As a replacement remote, it may not support all advanced or specific functions of your original

Yamaha remote. This is normal for universal or replacement remotes.

- Ensure your receiver model is listed in the compatibility section (Section 3.2).

## 6. SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Compatible Devices	Yamaha HTR-5730SL, Yamaha HTR-5830, Yamaha HTR-5930, Yamaha HTR-5940, Yamaha RX-V340, Yamaha RX-V350, Yamaha RX-V359
Power Source	2 x AA Batteries (not included)
Color	Black
Item Weight	2.08 ounces (approximately 59 grams)
Package Dimensions	5 x 1.13 x 1 inches (approximately 12.7 x 2.87 x 2.54 cm)

## 7. WARRANTY AND SUPPORT

Specific warranty information for this Easytry123 replacement remote control is not provided in the product details. For any warranty-related inquiries or technical support, please contact the seller directly through your purchase platform.

Ensure you retain your proof of purchase for any potential claims.