

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Remote Control User Manual for Yamaha RAV270, RAV238, RAV232, RX-V730, HTR-5560, DSP-AX1400 AV Receivers

Easytry123 RAV359

Easytry123 Replacement Remote Control User Manual

For Yamaha AV Receivers: RAV270, RAV238, RAV232, RX-V730, HTR-5560, DSP-AX1400

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Yamaha AV receiver and amplifier models. This remote is a direct replacement and does not require programming or code setup. Please note that while it replicates many original functions, some specific features of your original remote may not be fully supported.

2. PRODUCT OVERVIEW

The Easytry123 replacement remote control is designed to provide essential control over your compatible Yamaha AV receiver. It features a standard layout with buttons for power, volume, input selection, and navigation.

2.1 Compatible Models

- Yamaha RAV270
- Yamaha RAV238
- Yamaha RAV232
- Yamaha V8294700I
- Yamaha RX-V730
- Yamaha HTR-5560
- Yamaha WB378600
- Yamaha DSP-AX1400

2.2 Remote Control Layout



Figure 1: Front view of the remote control with all buttons visible.



Figure 2: Back view of the remote control.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3: Battery installation in the remote control.

3.2 Initial Use

This replacement remote control is designed for immediate use with compatible Yamaha AV receivers. No setup, programming, or code entry is required. Once batteries are installed, point the remote towards your receiver and begin operation.

4. OPERATING INSTRUCTIONS

The remote control provides access to common functions of your Yamaha AV receiver. Ensure there is a clear line of sight between the remote's infrared emitter and your receiver's sensor.

4.1 Basic Functions

- **POWER:** Turns the receiver on or off.
- **INPUT SELECT (e.g., CD, DVD, TV, TUNER):** Selects the desired audio/video input source.
- **VOLUME (+/-):** Adjusts the master volume level.
- **MUTE:** Temporarily silences the audio output.
- **CH (+/-):** For controlling TV channels if the remote is also configured for TV control (functionality may vary).
- **NAVIGATION (Arrow buttons, ENTER):** Used for menu navigation and selection on your receiver's display.

Refer to your Yamaha AV receiver's original manual for detailed information on specific functions and menu operations.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's performance degrades or if it stops responding. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the receiver. Remove any obstructions.
 - Verify that the remote is pointed directly at the receiver's infrared sensor.
- **Certain functions do not work:**
 - As a replacement remote, it may not support all advanced or specific functions of your original remote. This is a common characteristic of universal or replacement remotes.
 - Ensure your receiver model is listed as compatible.
- **Remote works intermittently:**
 - This often indicates low battery power. Replace the batteries.
 - Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.

7. SPECIFICATIONS

Feature	Detail
Model Number	RAV359
Package Dimensions	11.5 x 2.68 x 1.42 inches
Item Weight	4.1 ounces
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Compatible Devices	AV Receiver, Amplifier

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller directly through your purchase platform. As this is a replacement product, specific warranty terms may vary and are typically provided by the seller at the time of purchase. Ensure you have your order details available when contacting support for faster assistance.

© 2023 Easytry123. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question