



[Manuals.plus](#) /

› [BoxWave](#) /

› BoxWave AccuPoint Active Stylus User Manual for OnePlus 7 Pro 5G (Model bw-1434-17663-10305)

**BoxWave bw-1434-17663-10305**

# BoxWave AccuPoint Active Stylus User Manual

Model: bw-1434-17663-10305

Compatible with OnePlus 7 Pro 5G

## 1. INTRODUCTION

The BoxWave AccuPoint Active Stylus is an electronic stylus designed to provide a natural writing and drawing experience on your touchscreen device. It features an ultra-fine tip for precision and operates without the need for Bluetooth pairing.

This manual provides instructions for the proper use, charging, and maintenance of your AccuPoint Active Stylus.



Image: The BoxWave AccuPoint Active Stylus, a sleek metallic silver pen-like device.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- BoxWave AccuPoint Active Stylus (Metallic Silver)
- MicroUSB Charging Cable

## 3. SETUP AND INITIAL USE

---

### 3.1 Initial Charging

Before first use, fully charge the stylus. Connect the included MicroUSB cable to the charging port on the stylus and plug the other end into any standard USB power source (e.g., computer USB port, USB wall adapter).



Image: Close-up of the stylus charging port with a MicroUSB cable connected, showing indicator lights for power on (blue), charging (red), and full charge (green).

### 3.2 Powering On/Off

To turn on the stylus, press the button located on the barrel. An indicator light will illuminate, typically blue, to show it is active. To turn off, press the button again.

**Note:** The AccuPoint Active Stylus does not require Bluetooth pairing with your device. It operates by emitting small electronic pulses to interact with the touchscreen.



Image: A diagram highlighting the built-in charging port, indicator light, 1.9mm extra fine tip, and the absence of Bluetooth requirement for the stylus.

#### 4. OPERATING INSTRUCTIONS

Once powered on, the stylus is ready for use. Simply touch the ultra-accurate 2mm pen tip to your device's touchscreen with the same pressure you would use with a traditional pen and paper.

- **Tapping:** Lightly tap the screen to select items or activate functions.
- **Swiping:** Drag the stylus across the screen to scroll or navigate.
- **Drawing/Writing:** Apply gentle pressure to draw or write, mimicking a natural pen stroke.

The stylus is designed for precision and responsiveness, enhancing your interaction with the screen.



# Higher Accuracy & Sensitivity



Image: The BoxWave AccuPoint Active Stylus in use on a tablet, illustrating its precision and responsiveness for tasks like drawing or selecting icons.

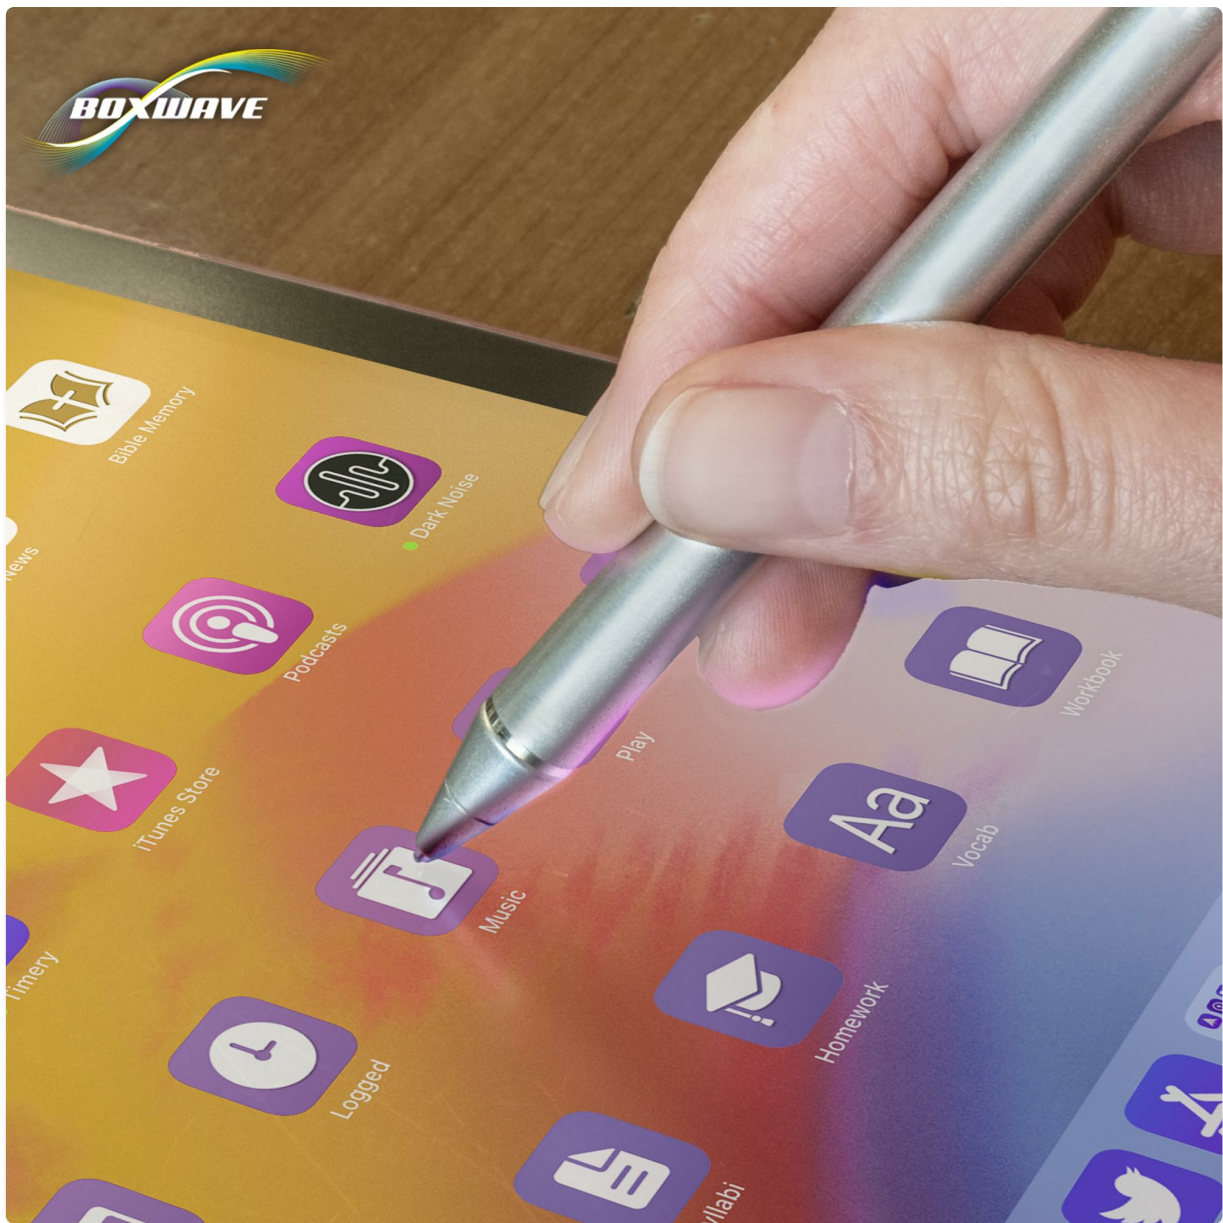


Image: A hand holding the stylus, tapping on a music application icon on a tablet screen, demonstrating typical usage.

#### 4.1 Important Considerations

- The AccuPoint Active Stylus does **not** support Palm Rejection. Avoid resting your palm on the screen while using the stylus to prevent unintended input.
- The stylus does **not** support Pressure Sensitivity. Line thickness and opacity will not vary with pressure applied.

#### 5. CHARGING THE STYLUS

The stylus is equipped with a built-in battery that provides up to 12 hours of continuous use on a full charge.

- Connect the MicroUSB cable to the stylus charging port.
- Connect the other end of the cable to a USB power source.
- The indicator light will show the charging status (e.g., red for charging, green for fully charged).
- Disconnect the cable once charging is complete.



Image: The stylus being charged by connecting its MicroUSB cable to a laptop's USB port, illustrating convenient charging.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the stylus body. For the tip, gently wipe with a slightly damp cloth if necessary. Avoid harsh chemicals.
- **Storage:** Store the stylus in a cool, dry place when not in use. Avoid extreme temperatures.
- **Handling:** The stylus features a solid brushed aluminum barrel. Avoid dropping the stylus or subjecting it to excessive force, which could damage internal components or the tip.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding on screen.	Stylus is off or battery is low.	Ensure the stylus is turned on (check indicator light). Charge the stylus if the battery is low.

Problem	Possible Cause	Solution
Stylus not charging.	Faulty cable or power source.	Verify the MicroUSB cable is securely connected. Try a different USB power source or cable.
Inaccurate input or erratic behavior.	Screen protector interference or dirty screen/tip.	Ensure your screen is clean. Clean the stylus tip. If using a thick screen protector, it might affect performance.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	bw-1434-17663-10305
Compatibility	OnePlus 7 Pro 5G (and other compatible smartphones)
Tip Size	2mm (Ultra Fine Tip)
Battery Life	Up to 12 hours of use
Charging Interface	MicroUSB
Material	Brushed Aluminum Barrel
Item Weight	1.3 ounces
Package Dimensions	7.56 x 1.81 x 0.91 inches
Color	Metallic Silver

## 9. SAFETY INFORMATION

- Do not disassemble, modify, or attempt to repair the stylus. This may void the warranty and pose a safety risk.
- Keep the stylus away from water, moisture, and extreme temperatures.
- Do not expose the stylus to open flames or dispose of it in fire.
- Keep out of reach of children.

## 10. WARRANTY AND SUPPORT

This product includes limited third-party technical support for the OnePlus 7 Pro 5G (up to 3 inquiries via electronic messaging). This support is provided by BoxWave Corporation and is not affiliated with or endorsed by OnePlus.

For further assistance or inquiries, please contact BoxWave Corporation directly.