



Manuals.plus /

› UpStart Components /

› UpStart Components 240351601 Refrigerator Freezer Door Bin Side Shelf Instruction Manual

UpStart Components AP-240351601-DL924

UpStart Components 240351601 Refrigerator Freezer Door Bin Side Shelf Instruction Manual

Model: AP-240351601-DL924

1. INTRODUCTION

This manual provides instructions for the installation, use, and maintenance of the UpStart Components 240351601 Refrigerator Freezer Door Bin Side Shelf. This replacement part is designed for compatibility with Kenmore/Sears 25354703400 refrigerators, as well as other models that use part number 240351601 (AP2115974).

It replaces original part numbers such as 240351607, 891154, AH430027, EA430027, and PS430027. This product is manufactured by UpStart Components and is not an OEM product. All brand names and logos mentioned are registered trademarks of their respective owners and are used strictly to illustrate compatibility.

2. PRODUCT OVERVIEW

The 240351601 Refrigerator Freezer Door Bin is a durable replacement component designed to restore storage functionality to your refrigerator door. It is constructed from high-quality plastic material, engineered to resist wear and tear over time.

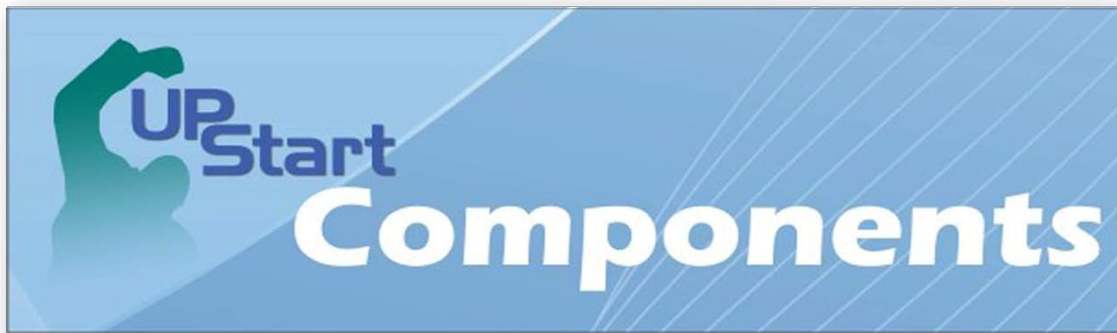


Figure 1: The UpStart Components 240351601 Refrigerator Freezer Door Bin, shown in its retail packaging. This image provides a view of the product as it would appear upon unboxing.

- **Material:** Durable Plastic
- **Compatibility:** Designed for Kenmore/Sears 25354703400 refrigerators and other models using part 240351601.
- **Function:** Provides additional storage space on the refrigerator or freezer door.

3. SETUP AND INSTALLATION

Installation of the door bin is designed to be straightforward and can typically be completed at home without specialized tools.

1. **Preparation:** Ensure your refrigerator is unplugged for safety, especially if you need to remove the door or other components to access the bin area. For simple bin replacement, unplugging may not be necessary, but it is always recommended for any appliance work.
2. **Remove Old Bin (if applicable):** If replacing an existing bin, carefully lift the old bin upwards and then pull it outwards from its mounting slots on the refrigerator door.

3. **Inspect Mounting Area:** Clean any debris or residue from the mounting slots on the refrigerator door where the new bin will be installed.
4. **Install New Bin:** Align the hooks or tabs on the back of the new UpStart Components door bin with the corresponding slots on the refrigerator door. Gently push the bin downwards until it clicks securely into place. Ensure it is level and stable.



Figure 2: A side profile view of the 240351601 door bin, highlighting the attachment points designed to slide into the refrigerator door slots. This view helps in understanding the installation mechanism.



Figure 3: A front-facing view of the 240351601 door bin, showing its general shape and depth. This perspective is useful for confirming the correct part before installation.

4. OPERATING INSTRUCTIONS

Once installed, the door bin functions as a storage compartment within your refrigerator or freezer door. It is designed to hold various items such as bottles, jars, and smaller containers, helping to organize the interior of your appliance.

- Avoid overloading the bin to prevent damage to the bin or the refrigerator door.
- Distribute weight evenly within the bin.
- Ensure items placed in the bin do not obstruct the door from closing properly.

5. MAINTENANCE

Regular cleaning of your door bin will help maintain hygiene and extend its lifespan.

- **Cleaning:** The bin can be easily removed for cleaning. Wash with mild soap and warm water. Avoid

abrasive cleaners or harsh chemicals, as these can damage the plastic.

- **Drying:** Allow the bin to air dry completely or wipe it dry with a soft cloth before re-installing it into the refrigerator door.
- **Inspection:** Periodically inspect the bin for any cracks or damage. Replace if necessary to prevent items from falling or spills.

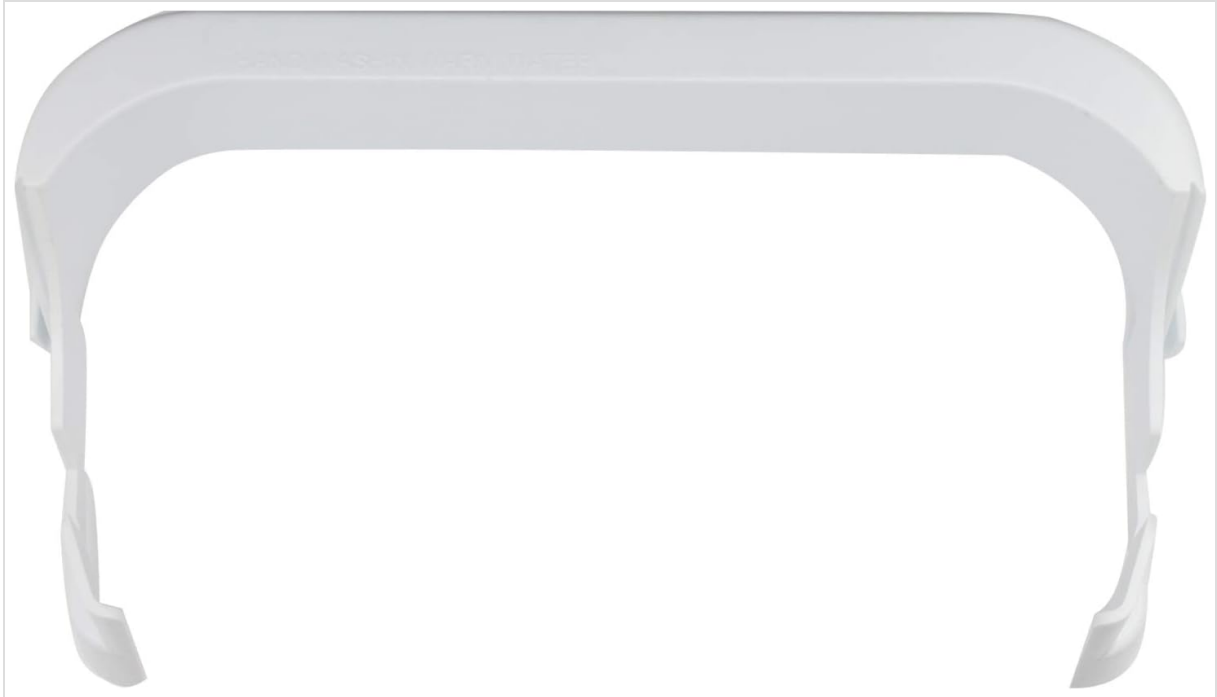


Figure 4: A top-down view of the 240351601 door bin, illustrating its open design for easy cleaning and access. This view also shows the overall dimensions and capacity.

6. TROUBLESHOOTING

If you encounter issues with your new door bin, consider the following:

- **Bin Does Not Fit:** Double-check the model number of your refrigerator and compare it with the compatible models listed for this part. Ensure the bin is oriented correctly and the mounting tabs are aligned with the door slots.
- **Bin Feels Loose:** Ensure the bin is fully seated in the mounting slots. Apply gentle downward pressure until it locks into place. If it remains loose, inspect the mounting slots on the door for damage or wear.
- **Damage Upon Arrival:** If the product arrives damaged, contact the seller or UpStart Components directly for assistance regarding a return or replacement.

7. SPECIFICATIONS

Feature	Detail
Brand	UpStart Components
Model Number	AP-240351601-DL924
Part Number	240351601 (AP2115974)
Material	Plastic
Compatible With	Kenmore/Sears 25354703400 Refrigerator, and other models using 240351601. Replaces 240351607, 891154, AH430027, EA430027, PS430027.
Date First Available	May 18, 2019

8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any original equipment manufacturers (OEMs) and is not covered under any warranties offered by the original manufacturers.

For warranty claims, product support, or assistance with returns/replacements, please contact UpStart Components or the retailer from whom the product was purchased. Refer to your purchase documentation for specific contact information.

The seller for this product is Certified Battery. For issues related to your purchase, you may contact them directly via their seller page on the platform where you made your purchase.