

[Manuals.plus](#) /

› [ChefWave](#) /

› ChefWave Kava Espresso Machine (Model NCM01R) Instruction Manual

ChefWave NCM01R

ChefWave Kava Espresso Machine (Model NCM01R) Instruction Manual

Your guide to operating and maintaining your ChefWave Kava Espresso Machine.

INTRODUCTION

The ChefWave Kava Espresso Machine is designed to deliver rich, full-bodied espresso with a powerful 20-bar pump pressure. Its compact, stainless steel design makes it suitable for various spaces, including home kitchens, offices, apartments, and dorms. This machine is compatible with both ground coffee and ESE pods, offering versatile brewing options. Enjoy fast heating, simple one-touch controls, and easy-to-clean components for a convenient coffee experience.



Image 1: ChefWave Kava Espresso Machine with included accessories.

SETUP

1. Unpacking and Initial Placement

- Carefully remove all components from the packaging.
- Place the espresso machine on a stable, flat, and dry surface. Ensure adequate clearance around the machine for ventilation and access to the water tank.
- Remove any protective films or packaging materials from the machine.

2. Filling the Water Tank

1. Locate the removable water tank at the back of the machine.
2. Lift the water tank lid or remove the entire tank from its base.
3. Fill the tank with fresh, cold water up to the MAX fill line. Do not overfill.

4. Replace the water tank securely.



Image 2: Key components including the removable water tank and drip tray.

3. Initial Priming (First Use)

- Plug the machine into a grounded electrical outlet.
- Press the power button (located on the side) to turn on the machine. The brew buttons will illuminate when ready.
- Place an empty cup under the coffee spout.
- Press either brew button to run a cycle of hot water through the machine without a coffee pod. This primes the system and cleans internal components.
- Discard the hot water. The machine is now ready for use.

OPERATING INSTRUCTIONS

1. Brewing Espresso

1. Ensure the water tank is filled and the machine is powered on and ready (brew buttons illuminated).
2. Lift the lever at the top of the machine to open the capsule compartment.
3. Insert a compatible coffee capsule or ESE pod into the compartment.
4. Close the lever firmly until it clicks into place.
5. Place your desired cup on the drip tray under the coffee spout.
6. Select your preferred brew size by pressing the corresponding button:
 - **Small Cup Button:** For a 1.3 oz espresso shot.
 - **Large Cup Button:** For a 3.75 oz lungo.
7. The machine will begin brewing and automatically stop when the selected volume is reached.
8. After brewing, lift the lever again to eject the used capsule into the internal collection bin.
9. Close the lever.



Image 3: Brew size options for Espresso and Lungo.

PERFECT ESPRESSO MAKER

CREATE A BARISTA-GRADE ESPRESSO AT HOME



QUICK AND EASY



Image 4: Espresso brewing process.

MAINTENANCE

1. Cleaning the Drip Tray and Used Capsule Container

- Regularly empty and clean the drip tray and the used capsule container.
- Slide out the drip tray from the front of the machine. The used capsule container is typically integrated or located directly above the drip tray.
- Discard used capsules and any accumulated liquid.
- Wash both components with warm, soapy water. Rinse thoroughly and dry before reassembling.
- These parts are dishwasher safe for convenience.

COMPACT DESIGN

FITS ANY KITCHEN
AND ANY
LIFESTYLE.

- ✓ LIGHTWEIGHT YET
POWERFUL MACHINE
- ✓ DETACHABLE & EASY
TO CLEAN PARTS



Image 5: Detachable parts for easy cleaning.

2. Descaling

To maintain optimal performance and extend the lifespan of your espresso machine, regular descaling is recommended, especially in areas with hard water. Refer to the descaling instructions provided with your descaling solution or contact ChefWave customer support for guidance.

3. Exterior Cleaning

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the machine in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No coffee dispenses.	Water tank empty; machine not primed; clogged nozzle.	Fill water tank; perform initial priming cycle; clean coffee spout.
Coffee is cold.	Machine not preheated; cold cup.	Allow machine to fully preheat (buttons illuminated); preheat cup with hot water.
Leaking from machine.	Water tank not seated correctly; drip tray full.	Ensure water tank is firmly in place; empty and clean drip tray.
Machine not turning on.	Not plugged in; power outlet issue.	Check power connection; try a different outlet.

SPECIFICATIONS

- **Brand:** ChefWave
- **Model Number:** NCM01R
- **Product Dimensions:** 12.3"D x 13.6"W x 11.1"H
- **Item Weight:** 8.5 pounds
- **Coffee Maker Type:** Espresso Machine
- **Operation Mode:** Fully Automatic
- **Pressure:** 20 Bar Pump Pressure
- **Voltage:** 120 Volts
- **Coffee Input Type:** Capsules (compatible with ground coffee and ESE pods)
- **Special Feature:** Programmable, Auto Shut-off, Energy Saving Standby Mode
- **Dishwasher Safe Parts:** Yes (removable drip tray and used capsule container)

WARRANTY AND SUPPORT

The ChefWave Kava Espresso Machine typically comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact ChefWave customer service through their official website or the contact information provided in your product documentation.

For additional information and support, visit the official [ChefWave Store](#).

© 2025 ChefWave. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question