

LG BP175

LG BP175 Blu-Ray DVD Player User Manual

Model: BP175

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your LG BP175 Blu-Ray DVD Player. Please read this manual thoroughly before using the product and retain it for future reference.

The LG BP175 is designed for high-definition movie playback, offering resolutions up to five times greater than standard DVD. It supports a wide range of disc formats and features an Ethernet port for wired network connectivity.

2. IMPORTANT SAFETY INFORMATION

- **Power Source:** Connect the player only to the specified power supply.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Disc Handling:** Handle discs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use.

3. WHAT'S IN THE BOX

Upon opening the package, verify that all the following items are present:

- LG BP175 Blu-Ray DVD Player
- Remote Control (requires 2 AA batteries, not always included)
- Power Adapter
- HDMI Cable (6-foot)
- User Manual (this document)



Image: The LG BP175 Blu-Ray DVD Player shown with the included 6-foot HDMI cable.

4. SETUP

4.1 Connecting the Player

1. **Connect HDMI Cable:** Insert one end of the HDMI cable into the **HDMI OUT TO TV** port on the back of the Blu-Ray player. Connect the other end to an available HDMI input on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2) for later selection on your TV.



Image: Rear panel of the LG BP175 player, highlighting the HDMI output port.

2. **Connect Ethernet Cable (Optional):** If you plan to use streaming services or firmware updates, connect an Ethernet cable from your router or modem to the **ETHERNET** port on the back of the player. This player does not support wireless connectivity.
3. **Connect Power Adapter:** Plug the power adapter into the **DC IN 12V** port on the back of the player. Then, plug the other end of the power adapter into a wall outlet.

4.2 Initial Power On

1. Turn on your television and select the correct HDMI input source that corresponds to where you connected the Blu-

Ray player.

2. Press the **POWER** button on the front of the player or on the remote control. The power indicator light on the player will illuminate.
3. Follow any on-screen prompts for initial setup, such as language selection.



Image: Front view of the LG BP175 player, showing the disc tray, power button, and USB port.

5. OPERATING THE PLAYER

5.1 Disc Playback

1. Press the **OPEN/CLOSE** button on the player or remote control to open the disc tray.
2. Place a Blu-Ray disc, DVD, or CD onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the disc tray. The player will automatically begin reading the disc.
4. Use the remote control's navigation buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and **ENTER** button to select options from the disc menu.
5. Press the **PLAY** button to start playback. Use **PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons for control.

5.2 Supported Disc and File Formats

The LG BP175 supports a variety of disc and digital file formats:

- **Disc Formats:** CD-R/RW, DVD±R/RW, DVD-ROM, DVD, CD, BD-R, BD-RE, BD-ROM.
- **Audio Formats:** WMA, AAC, MPEG1 Layer2, MP3, FLAC, LPCM, MPEG2 Layer2.
- **Video Formats:** MPEG-1, WMV, MKV, VC-1, AVCHD, MOV, AVC, 3GP, VOB, TS, DAT, FLV, M4V, MPEG-2 PS, MPEG-2 TS, MPEG-4 AVC, MP4.

5.3 Streaming Services

The player supports various streaming services such as CinemaNow, Netflix, Pandora, Spotify, and YouTube. Access these services via the player's main menu, provided an Ethernet connection is established.

Note: A wired Ethernet connection is required for internet-based features. This model does not include Wi-Fi connectivity.

5.4 Audio Settings

The LG BP175 supports several surround sound formats for an enhanced audio experience:

- DTS
- DTS-HD Master Audio
- Dolby Digital
- Dolby Digital Plus
- Dolby TrueHD

Adjust audio output settings through the player's on-screen menu, typically found under "Audio" or "Sound" settings. Ensure your connected audio system is compatible with the selected output format.

6. MAINTENANCE

6.1 Cleaning the Unit

- Before cleaning, disconnect the power cord from the wall outlet.
- Use a soft, dry cloth to wipe the exterior surfaces of the player. Do not use abrasive pads, powders, or solvents like alcohol or benzene.
- Avoid spraying liquids directly onto the unit.

6.2 Cleaning Discs

- Wipe discs gently from the center outwards using a soft, lint-free cloth.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static sprays intended for vinyl LPs.

7. TROUBLESHOOTING

If you encounter issues with your LG BP175, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected securely.	Check power cord connection to the player and wall outlet.

Problem	Possible Cause	Solution
No picture on TV	Incorrect HDMI input selected on TV. HDMI cable not connected properly.	Select the correct HDMI input on your TV. Ensure HDMI cable is securely connected to both player and TV.
No sound	TV/audio system volume is too low or muted. Incorrect audio settings on player or TV.	Increase volume. Check audio output settings on the player and TV. Ensure audio cables are connected correctly.
Disc does not play	Disc is dirty, scratched, or inserted incorrectly. Disc format not supported.	Clean the disc. Ensure the disc is inserted label-side up. Verify the disc format is supported by the player.
Cannot connect to internet	Ethernet cable not connected. Network settings incorrect.	Ensure Ethernet cable is securely connected. Check network settings in the player's menu. Confirm your router is working.

8. SPECIFICATIONS

Model Name	BP175
Brand	LG
Product Dimensions	8 x 6 x 1 inches
Item Weight	2 pounds
Media Type	Blu-Ray Disc, CD, DVD
Resolution	1920x1080 (Full HD 1080p)
Connectivity Technology	Ethernet, HDMI
Connector Type	HDMI
Audio Output Mode	Stereo (Supports DTS, DTS-HD Master Audio, Dolby Digital, Dolby Digital Plus, Dolby TrueHD)
Color	Black
Power Source	DC 12V (via included power adapter)
Batteries for Remote	2 AA batteries required

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official LG website. Keep your purchase receipt as proof of purchase for warranty claims.

LG Customer Service: For further assistance, please contact LG customer support through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question