

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 330031 Top Burner Receptacle Kit Instruction Manual

UpStart Components AP-330031

UpStart Components 330031 Top Burner Receptacle Kit Instruction Manual

Model: AP-330031

Brand: UpStart Components

INTRODUCTION

This instruction manual provides guidance for the installation, maintenance, and troubleshooting of the UpStart Components 330031 Top Burner Receptacle Kit. This kit is designed as a replacement part for various Whirlpool range, cooktop, and oven models, ensuring proper electrical connection to the heating elements. Please read this manual thoroughly before proceeding with installation or any maintenance.

IMPORTANT SAFETY INFORMATION

WARNING: Risk of Electric Shock or Injury.

- Always disconnect power to the appliance at the circuit breaker or fuse box before attempting any installation, repair, or maintenance. Failure to do so can result in serious injury or death.
- Wear appropriate personal protective equipment, including safety glasses and gloves.
- If you are unsure about performing the installation, consult a qualified appliance technician.
- Ensure all connections are secure and properly insulated after installation.
- Keep children and pets away from the work area.

PACKAGE CONTENTS

The UpStart Components 330031 Top Burner Receptacle Kit typically includes the following items:

- Burner receptacle housing
- Wiring harnesses with connectors
- Heat shrink tubing or ceramic wire nuts for insulation
- Mounting clips/brackets

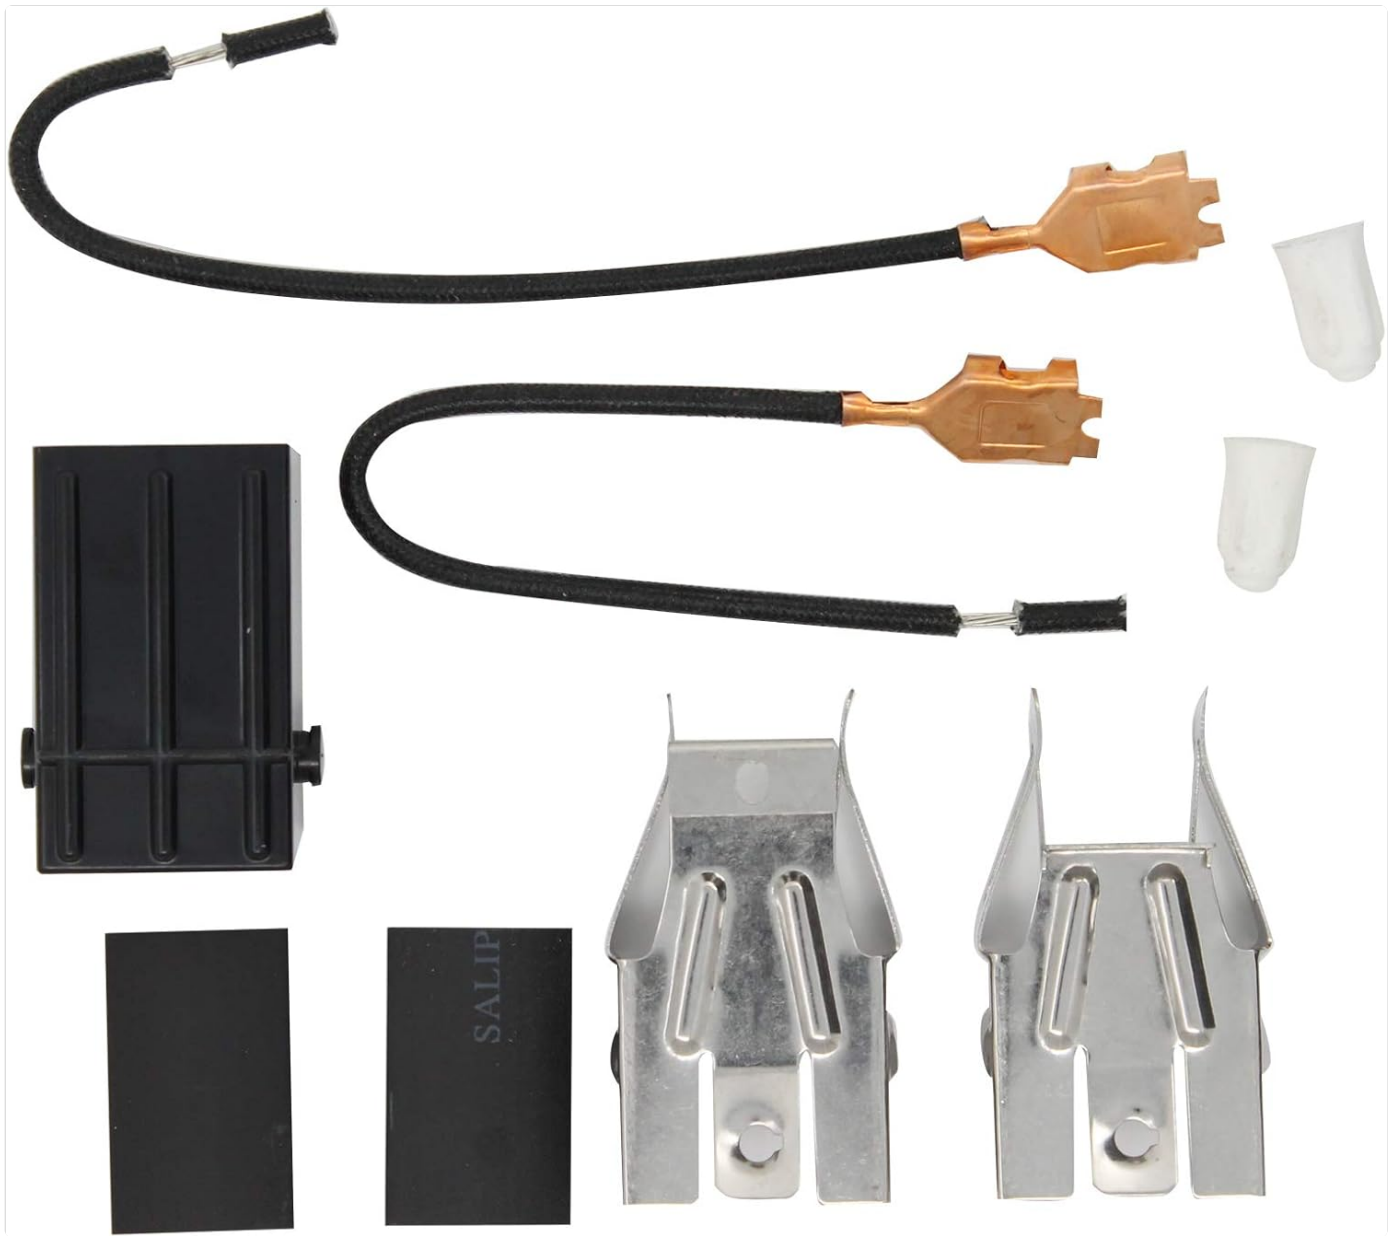


Image: Contents of the 330031 Top Burner Receptacle Kit, showing the receptacle housing, wiring, and mounting clips.

INSTALLATION INSTRUCTIONS

This section outlines the general steps for replacing a top burner receptacle. Specific appliance models may vary, so always refer to your appliance's service manual if available.

Tools Required (Not Included):

- Screwdriver (Phillips and/or Flathead)
- Wire Strippers/Cutters
- Needle-nose Pliers
- Multimeter (for testing, optional but recommended)

Step-by-Step Installation:

1. **Disconnect Power:** Locate the circuit breaker for your range/cooktop/oven and turn off the power. Verify power is off by attempting to turn on a burner.
2. **Access Burner Area:** Depending on your appliance, you may need to lift the cooktop, remove burner grates, or access the wiring from the back panel. Consult your appliance's user manual for specific access instructions.

3. **Identify and Disconnect Old Receptacle:** Carefully observe how the existing burner receptacle is wired and mounted. Take photos for reference if needed. Disconnect the wires from the old receptacle. Note the position of each wire.
4. **Remove Old Receptacle:** Unclip or unscrew the old receptacle from its mounting bracket.
5. **Prepare New Receptacle:** If necessary, strip the ends of the appliance's existing wires to ensure a clean connection with the new receptacle's wiring harnesses.
6. **Connect New Receptacle:** Connect the new receptacle's wiring harnesses to the appliance's wires, matching the connections you observed from the old receptacle. Use the provided heat shrink tubing or ceramic wire nuts to secure and insulate the connections. Ensure all connections are tight and secure.
7. **Mount New Receptacle:** Secure the new receptacle into the mounting bracket. Ensure it is firmly in place.
8. **Reassemble Appliance:** Carefully reassemble any panels or cooktop sections that were removed. Ensure no wires are pinched.
9. **Restore Power and Test:** Turn the power back on at the circuit breaker. Test the burner associated with the newly installed receptacle to ensure it heats up correctly.

OPERATING INSTRUCTIONS

Once properly installed, the 330031 Top Burner Receptacle Kit functions as an integral part of your range, cooktop, or oven's heating system. There are no specific operating instructions for the receptacle itself, as its function is passive. Operate your appliance as you normally would, following its original manufacturer's instructions.

MAINTENANCE

Regular maintenance of the burner receptacle is not typically required. However, periodic inspection can help ensure continued safe operation:

- **Visual Inspection:** If you notice issues with a burner, visually inspect the receptacle and its wiring for signs of burning, corrosion, or loose connections.
- **Cleaning:** Ensure the area around the receptacle is free from food debris or spills, which can cause short circuits or damage over time. Always disconnect power before cleaning.
- **Connection Check:** If a burner is intermittent, ensure the heating element prongs are making good contact with the receptacle terminals.

TROUBLESHOOTING

If you experience issues after installing the new burner receptacle, consider the following:

Problem	Possible Cause	Solution
Burner does not heat up.	No power to the appliance.	Check circuit breaker or fuse.
Burner does not heat up.	Loose or incorrect wiring connection at the receptacle.	Disconnect power, re-check all wire connections for tightness and correct placement.
Burner does not heat up.	Faulty heating element.	Test the heating element for continuity (requires a multimeter). Replace if faulty.

Problem	Possible Cause	Solution
Burner heats intermittently.	Poor contact between heating element prongs and receptacle terminals.	Ensure element prongs are clean and fully inserted into the receptacle.
Visible arcing or burning smell.	Loose connection or damaged wiring/receptacle.	Immediately disconnect power. Inspect for damage. Replace any damaged components. Do not operate until repaired.

If troubleshooting steps do not resolve the issue, it is recommended to contact a qualified appliance technician.

SPECIFICATIONS

- **Model Number:** AP-330031
- **Part Number:** AP-330031 (also compatible with R300, TS300, 3374, 5303935058, WB17X210, 42147, 42153, AP3075808, W10841094, 550226, 71930, and others listed in product description)
- **Manufacturer:** UpStart Components
- **Compatibility:** Designed for various Whirlpool range, cooktop, and oven models. Refer to your appliance's part number for exact compatibility.
- **Material:** Ultra durable, high quality material (as per product features)

WARRANTY INFORMATION

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any other brands mentioned and is not covered under any warranties offered by the original appliance manufacturers. For specific warranty details, please contact UpStart Components directly or refer to the product packaging.

CUSTOMER SUPPORT

For further assistance, technical questions, or warranty inquiries regarding your UpStart Components 330031 Top Burner Receptacle Kit, please contact the manufacturer, UpStart Components. It is recommended to have your model number (AP-330031) available when contacting support.

If you are unsure about any installation steps or encounter difficulties, it is always best to consult a qualified appliance repair technician.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07S45RLRN>

More documents and user manuals: **<https://manuals.plus/>**