

Manuals.plus /

- › Norwii /
- › Norwii N29 Wireless Presentation Remote User Manual

**Norwii N29**

# Norwii N29 Wireless Presentation Remote User Manual

Model: N29

## 1. INTRODUCTION

---

The Norwii N29 is a multifunctional wireless presentation remote designed to enhance your presentations. It features a bright laser pointer, long control range, and customizable buttons for seamless navigation through slides, controlling volume, and managing hyperlinks. Its plug-and-play design ensures easy setup across various operating systems and presentation software.





*Image 1.1: Norwii N29 Wireless Presentation Remote*

## **2. PACKAGE CONTENTS**

---

Please check the package for the following items:

- 1 x Norwii N29 Wireless Presenter
- 1 x USB Receiver
- 1 x User Manual
- 1 x Pouch

## **3. PRODUCT OVERVIEW**

---

Familiarize yourself with the buttons and features of your Norwii N29 Wireless Presentation Remote:



Image 3.1: Detailed button functions of the Norwii N29 remote.

- **LED Indicator:** Shows connection status and low power alert.
- **Power On/Off Switch:** Located on the side to conserve battery.
- **Volume Up/Down:** Side buttons for system volume control.
- **Top Key (Square icon):** Single click for Tab, Long press for Alt+Tab (switch windows). Double click to open hyperlinks.
- **Page Up (Left Arrow):** Single click for Page Up.
- **Page Down (Right Arrow):** Single click for Page Down.
- **Laser Key (Yellow button):** Activates the red laser pointer.
- **Integrated USB Receiver:** Stored securely in the tail of the presenter.

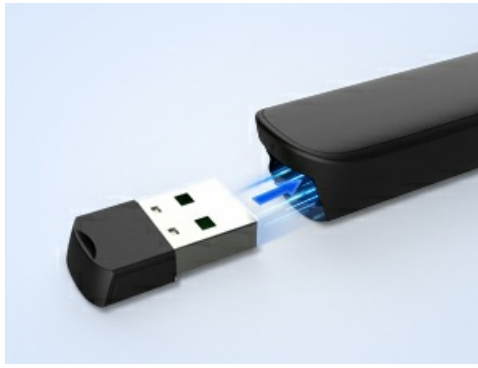


Image 3.2: The USB receiver is stored in the tail of the presenter for convenience.



Image 3.3: The bumped design on the 'Page Down' key allows for tactile navigation without looking.

## 4. SETUP

---

The Norwii N29 is a plug-and-play device, requiring no driver installation for basic functionality.

1. **Insert Battery:** Open the battery cover and insert one AAA battery (not included) into the presenter, ensuring correct polarity.
2. **Retrieve USB Receiver:** Gently pull out the USB receiver from the tail of the presenter.
3. **Connect to Computer:** Plug the USB receiver into an available USB-A port on your computer (Laptop, Mac, Personal Computer).
4. **Power On:** Slide the Power On/Off switch on the side of the presenter to the 'ON' position.
5. **Ready for Use:** Your computer should automatically detect the device. You are now ready to use the presenter.

For a visual guide on setup, please refer to the video below:

*Video 4.1: Official Norwii N29 'How to Use' video, demonstrating initial setup and basic functions.*

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Slide Navigation

- Press the **Page Up (Left Arrow)** key to move to the previous slide.
- Press the **Page Down (Right Arrow)** key to move to the next slide.

### 5.2. Laser Pointer

- Press and hold the **Yellow Laser Key** to activate the red laser pointer. Release to turn off.



Image 5.1: The Norwii N29 offers a long control range for both the remote and the laser pointer.

### 5.3. Full Screen / Black Screen

- **Full Screen:** Long press the **Page Up (Left Arrow)** key to enter full screen mode in presentation software.
- **Black Screen:** Long press the **Page Down (Right Arrow)** key to turn the screen black during a presentation. Press any page turning key to exit black screen.

### 5.4. Hyperlink Control

- **Select Hyperlink:** Single click the **Top Key (Square icon)** to select a hyperlink on your slide. A dashed box will appear around the selected hyperlink.
- **Open Hyperlink:** Double click the **Top Key (Square icon)** to open the selected hyperlink.

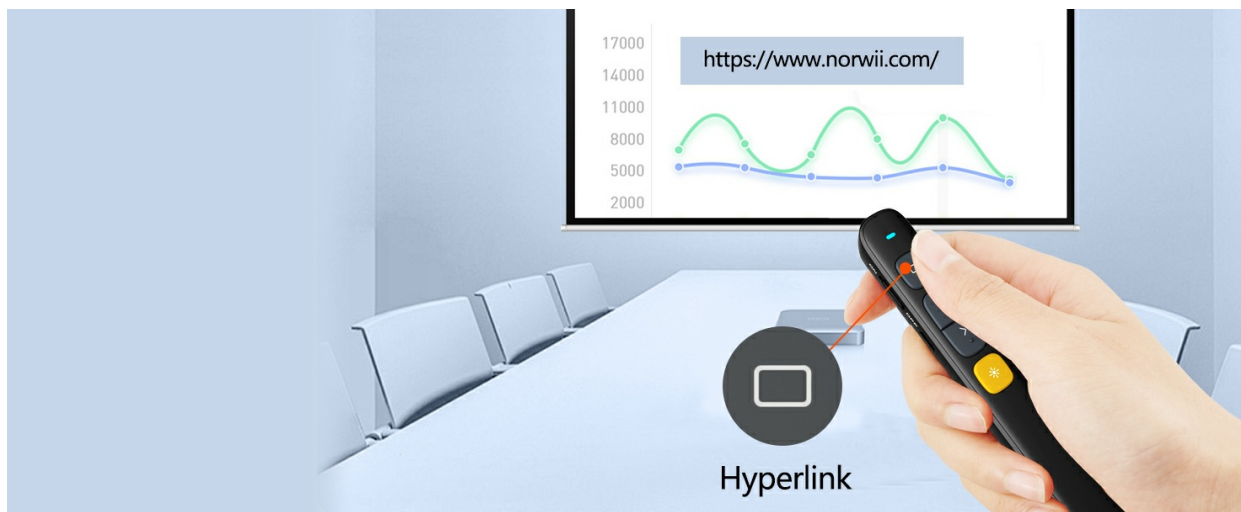


Image 5.2: The top key allows for selection and activation of hyperlinks within presentations.

## 5.5. Volume Control

- Long press the **Volume Up (+)** key on the side to increase system volume.
- Long press the **Volume Down (-)** key on the side to decrease system volume.



Image 5.3: Side buttons provide convenient control over system volume.

## 5.6. Switching Active Windows

- Long press the **Top Key (Square icon)** to switch between active windows (equivalent to Alt+Tab).

## 6. MODES SWITCHING

The Norwii N29 supports three different modes for its page navigation keys, allowing compatibility with various presentation software. You can switch between these modes by long pressing the '<' and '>' keys simultaneously for 1-3 seconds. The device automatically remembers the last used mode.

## Three Modes Switching

Switch by long pressing the "<" and ">" keys at the same time. It automatically remembers the last mode when you use next time.



### 1 Up/Down

(PowerPoint/Keynote can turn pages)



### 2 Left/Right

(Prezi can turn pages)



### 3 Page Up/Page Down

Browser and photo viewer software can turn pages



Image 6.1: Visual representation of the three operating modes for page navigation.

- **Mode 1: Up/Down Keys** (Default) - Usually used in PowerPoint, Keynote.
- **Mode 2: Left/Right Keys** - Usually used in Prezi.
- **Mode 3: PgUp/PgDn Keys** - Usually used in browser or photo viewer software.

## 7. CUSTOMIZABLE BUTTONS

The Norwii N29 allows you to reprogram button functions using the Norwii Presenter software. This software can be downloaded from the official Norwii website.

1. Download and install the Norwii Presenter software.
2. Ensure the USB receiver is plugged into your computer and the presenter is turned on.
3. Open the Norwii Presenter software.
4. Navigate to the 'Customize' tab.
5. Select the key you wish to customize.
6. Choose the desired function from the available options for short press, long press, or double click.
7. Save your changes.

# Function Customize

- ① Open Norwii Presenter software →
- ② Insert the USB receiver
- ③ Click to select a key ↓
- ④ Input or select a hotkey ←

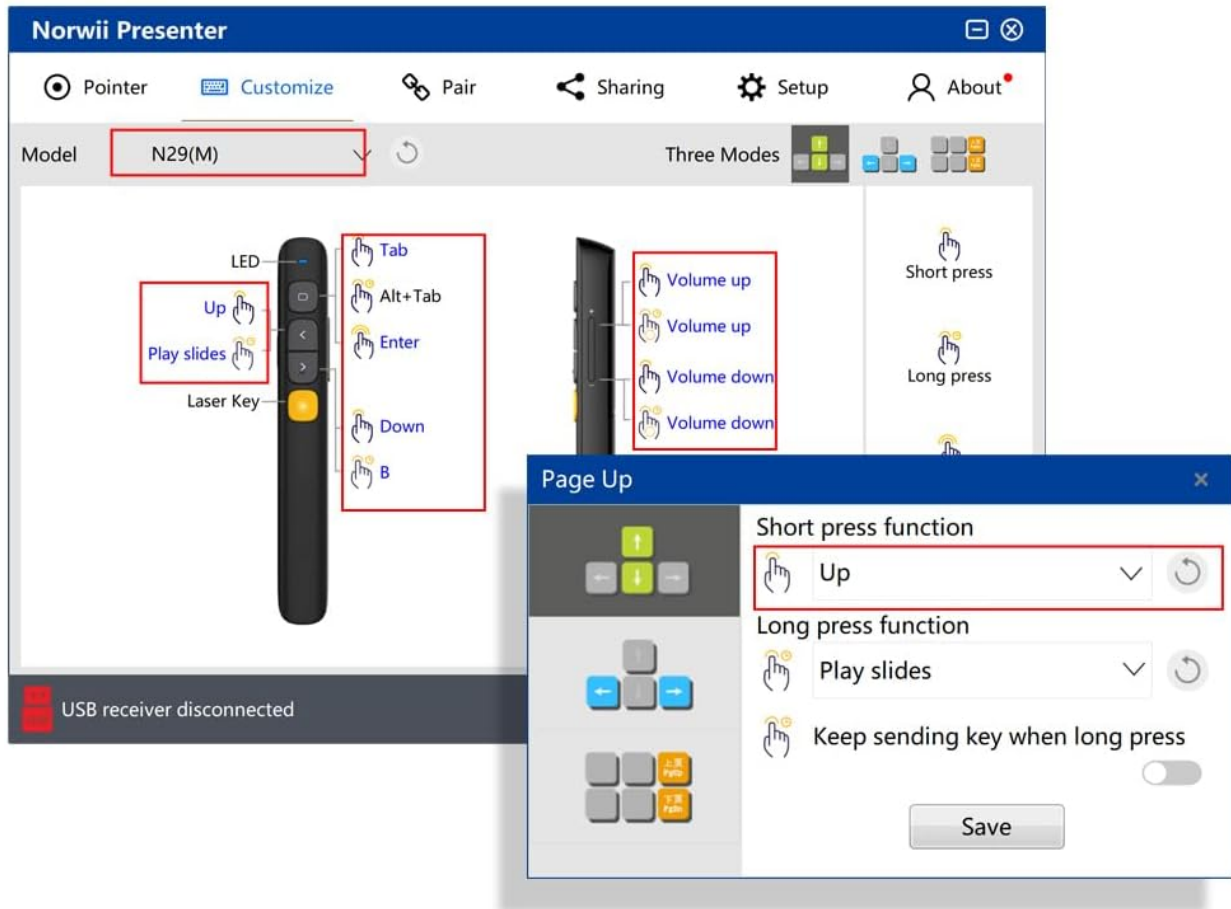 


Image 7.1: Screenshot of the Norwii Presenter software interface for customizing key functions.

## 8. COMPATIBILITY

The Norwii N29 Wireless Presentation Remote offers broad compatibility with various operating systems and presentation software.

### 8.1. Operating Systems

- Windows
- macOS
- Android
- Linux

### 8.2. Presentation Software

- PowerPoint
- Prezi
- Keynote
- Google Slides
- ProPresenter












- MediaShout
- Word, Excel, ACD See, OneNote, Pages, Numbers, Photos (for PgUp/PgDn mode)

# Widely Compatible

Compatible with Windows, macOS, Android and Linux, support multiple software





### Softwares


			
Word	Excel	Powerpoint	ACD See
			
OneNote	Keynote	Google Slides	Prezi
			.....
Pages	Numbers	Photos	

### Support Hyperlink

It can open hyperlinks on PowerPoint and Keynote.







Open Hyperlink

Image 8.1: The Norwii N29 is compatible with major operating systems and presentation applications.

## 9. TROUBLESHOOTING

If you encounter issues with your Norwii N29, please refer to the following common problems and solutions:

# Troubleshooting



## 1. Causes for weak laser

- Ensure the battery has sufficient power.
- Laser is weak on TV screens due to prohibitive regulations. Please see Norwii N95s Pro or N97s for TV screens.

## 2. Causes for short control range

- Ensure the battery has sufficient power.
- An obstruction between the wireless presenter and the USB receiver may shorten the control distance.

## 3. The laser works fine, but the control page turn does not respond

- Ensure that the presentation window is the currently active window by click the presentation window.
- Long press the “^” & “v” key for 3s to switch among the 3 or 4 working modes: Up & Down, left & right, Scroll, Pgup & PgdN.
- For the first time on macOS, set the keyboard type to ANSI after plugging the USB receiver into your computer.

**Be free to contact us via email for the most prompt technical support.**

*Image 9.1: Troubleshooting steps for common issues with the Norwii N29.*

### 9.1. Weak Laser

- Ensure the battery has sufficient power. Replace if necessary.
- Note: Laser may appear weak on TV screens due to prohibitive regulations. For TV screens, consider Norwii N95s Pro or N97s models.

### 9.2. Short Control Range

- Ensure the battery has sufficient power.
- An obstruction between the wireless presenter and the USB receiver may shorten the control distance. Ensure a clear line of sight or reduce distance.

### 9.3. Laser Works, But Page Turn Does Not Respond

- Ensure that the presentation window is the currently active window on your computer.
- Long press the '<' and '>' keys for 3 seconds to switch among the 3 or 4 working modes (Up & Down, Left & Right, Scroll, PgUp & PgDn). Ensure the correct mode is selected for your software.
- For the first time on macOS, set the keyboard type to ANSI after plugging the USB receiver into your computer.

If these steps do not resolve your issue, please contact technical support.

## 10. SPECIFICATIONS

Feature	Detail
Model Name	N29
Connectivity Technology	Radio Frequency (2.4GHz RF)
Control Range	Up to 328 feet (100 meters)
Laser Distance	Up to 656 feet (200 meters)
Laser Type	Class II, Red
Output Power	<1mW
Battery Type	1 x AAA battery (not included)
Dimensions	139.2 x 19.2 x 15.4 mm
Item Weight	26.9 Grams
Compatible Devices	Laptop, Mac, Personal Computer
Special Features	Reprogrammable buttons, Hyperlink & Volume Control, Integrated USB receiver storage, Bumped design for tactile feedback

## 11. WARRANTY AND SUPPORT

### 11.1. Warranty Information

The Norwii N29 Wireless Presentation Remote comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

### 11.2. Technical Support

For technical assistance or further inquiries, please contact Norwii customer support. You can find contact information on the official Norwii website or through your retailer.