

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Shark](#) /
- › [Shark Pet Cordless Vacuum Cleaner Instruction Manual](#)

Shark IX141

Shark Pet Cordless Stick Vacuum

INSTRUCTION MANUAL

Model: IX141 Pet Cordless Essential

1. Product Overview & Components

The Shark Pet Cordless Stick Vacuum (Model IX141) is designed for versatile and powerful cleaning across various floor types. Its lightweight design and removable handheld vacuum offer convenience for floor-to-ceiling cleaning.



Figure 1: Shark Pet Cordless Stick Vacuum with included accessories.

Included Components:

- Cordless Vacuum (Main Unit)
- Crevice Tool
- Pet Multi-Tool
- Charging Adapter

2. Setup & Initial Use

Assembly:

1. Insert the wand into the floor nozzle until it clicks securely.

2. Insert the handheld vacuum into the wand until it clicks securely.



Figure 2: Assembled vacuum ready for use.

Charging the Battery:

Before first use, fully charge the battery. The battery is integrated into the handheld vacuum unit.

- Plug the charging adapter into the charging port on the handheld vacuum.
- Plug the adapter into a wall outlet. The LED indicator lights will illuminate to show charging status.
- A full charge takes approximately 240 minutes (4 hours). The battery provides up to 40 minutes of runtime in standard mode.

WHAT'S IN THE BOX

Pet Multi
Tool



Crevice
Tool



Figure 3: Vacuum in freestanding storage mode while charging.

3. Operating Instructions

Power Settings:

The vacuum features two power levels for different cleaning needs:

- **Bare Floor/Low Power:** Ideal for hard floors and light debris.
- **Carpet/High Power:** Provides increased suction for carpets and tougher messes.

To activate a temporary boost in suction, pull and hold the trigger on the handheld unit. This provides Hypervelocity Suction for concentrated cleaning.



***HYPERVELOCITY* SUCTION**

Powerful suction handles pet hair and tough messes with ease.

Figure 4: Demonstrating Hypervelocity Suction on hard floors.

LED Headlights:

The floor nozzle is equipped with LED headlights that illuminate hidden dust and debris, making it easier to spot and clean in dimly lit areas or under furniture.



Figure 5: LED headlights reveal hidden debris.

Removable Handheld Vacuum:

The main unit easily detaches to become a lightweight handheld vacuum for versatile cleaning above floors.

- Press the release button to detach the handheld unit from the wand.
- Attach the Crevice Tool for tight spaces, corners, and along baseboards.
- Attach the Pet Multi-Tool to effectively remove pet hair from upholstery and carpets.



Detach the hand vac to clean stairs, furniture, and more with the **Crevice Tool** or the **Pet Multi-Tool**.

Figure 6: Handheld vacuum with Crevice Tool for detailed cleaning.



XL dust cup **holds more debris** for longer cleaning sessions.

Figure 7: Handheld vacuum with Pet Multi-Tool for pet hair.

4. Maintenance

Emptying the XL Dust Cup:

The XL dust cup is designed for easy, hands-free debris disposal.

1. Ensure the handheld vacuum is detached from the wand.
2. Hold the dust cup over a trash bin.
3. Slide the CleanTouch Dirt Ejector tab to release the bottom of the dust cup, allowing debris to fall out.
4. Close the dust cup bottom securely until it clicks.



Figure 8: Emptying the XL dust cup.

Cleaning the Brushroll:

The brushroll is designed to minimize hair wrap. Regularly check the brushroll for any tangled hair or debris and remove as needed.

Filter Maintenance:

Regularly clean the HEPA and Foam filters to maintain optimal suction performance. Refer to the full user manual for detailed filter cleaning instructions.

5. Troubleshooting

Issue	Possible Cause	Solution
--------------	-----------------------	-----------------

Issue	Possible Cause	Solution
Vacuum not picking up debris or low suction.	Dust cup is full. Filters are dirty. Blockage in nozzle or wand.	Empty dust cup. Clean filters. Check for and clear any blockages.
Vacuum shuts off.	Battery is low. Overheating due to blockage.	Recharge battery. Clear any blockages and allow unit to cool.
Brushroll not spinning.	Obstruction in brushroll. Incorrect power setting.	Remove any obstructions from brushroll. Ensure correct power setting for floor type.

6. Specifications

Feature	Value
Brand	Shark
Model Name	Shark IX141
Special Feature	Lightweight, Cordless, Headlight
Filter Type	HEPA, Foam
Is Cordless?	Yes
Capacity	0.34 Quarts
Wattage	181 watts
Runtime	40 minutes
Charging Time	240 minutes
Recommended Uses	Pet Hair, Indoor
Form Factor	Handheld, Stick
Color	Gray
Product Dimensions	10.24"L x 7.09"W x 46.09"H
Battery Description	Lithium-Ion
Noise Level	80 dB
UPC	622356559935
Item Weight	6.89 pounds
Number of Speeds	2

7. Warranty & Support

This Shark product comes with a 5-year limited warranty, covering defects in material and workmanship under normal household use. For full warranty details and terms, please refer to the official user manual.

For further assistance, troubleshooting, or to register your product, please visit the official Shark website or refer to the comprehensive user manual.

Official User Manual (PDF): [Download Here](#)