

## Landworks GUO125

# Landworks GUO125 Wheeled Walk-Behind Leaf Blower User Manual

Model: GUO125

## 1. SAFETY INFORMATION

Read and understand all safety instructions before operating the Landworks GUO125 Leaf Blower. Failure to follow these instructions may result in serious injury or property damage.


- **Personal Protective Equipment:** Always wear appropriate ANSI standard hand and eye protection during operation. Hearing protection is also recommended due to the noise level (70 Decibels).
- **Fuel Handling:** Use Unleaded 87+ octane Gasoline (10% or less ETHANOL recommended). Do not refuel while the engine is running or hot. Ensure proper ventilation.
- **Engine Oil:** Engine oil is NOT included with the unit. You MUST add the correct type and amount of engine oil upon unboxing and before first use. Refer to the engine manual for specific oil requirements.
- **Intended Use:** This blower is designed exclusively for lawn and garden applications, specifically for moving leaves and light debris. Do not use for purposes other than its intended design.
- **Impeller Safety:** The blower is equipped with a powerful metal impeller. Keep hands, feet, and loose clothing away from the intake and discharge openings. Inspect the impeller for damage before each use. Damage to the impeller can lead to severe vibration and operational failure.
- **Environmental Compliance:** This product is EPA Certified and CARB Compliant.

## 2. PRODUCT OVERVIEW

The Landworks GUO125 is a powerful wheeled walk-behind leaf blower designed for efficient clearing of leaves and debris in various outdoor environments. It features a robust engine and durable construction for reliable performance.



The Landworks GUO125 Wheeled Walk-Behind Leaf Blower ready for operation.

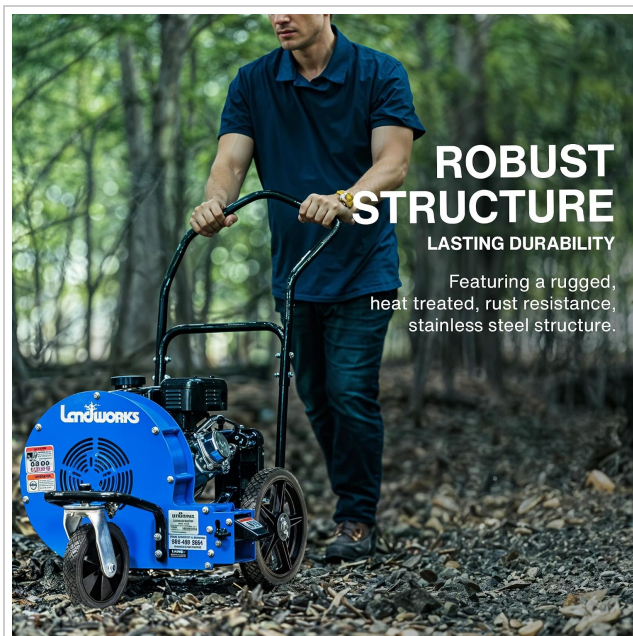

The blower features a rugged, heat-treated, rust-resistant stainless steel structure for lasting durability.

### Key Features:

- **Engine:** 7HP 212cc 4-Stroke Single Cylinder OHV Gas Engine.
- **Wind Force:** 150-200 MPH.
- **Air Volume:** 1270-2000 CFM.
- **Max Rotation Speed:** 3600 RPM.
- **Impeller:** Heavy-duty industrial size 13.5 inch (340mm) metal impeller.
- **Wheels:** Two rugged all-terrain 10-inch rear wheels and one 8-inch 360-degree swivel front wheel.
- **Flow Angle:** 90-degree adjustable flow angle.

Your browser does not support the video tag.

Official video demonstrating the Landworks Leaf Blower's dominant sweeping capabilities.

### 3. SETUP

---

Proper assembly and preparation are crucial for safe and effective operation of your leaf blower.

#### Assembly:

The Landworks GUO125 is designed for straightforward assembly. Follow the detailed instructions provided in the included user manual for step-by-step guidance. Ensure all bolts and fasteners are securely tightened before operation.

Your browser does not support the video tag.

Video showcasing the assembly and initial setup of the Landworks Super Duty Leaf & Debris Blower.

#### Fuel and Oil:

- **Engine Oil:** Before starting the engine for the first time, add the recommended engine oil to the crankcase. Refer to the engine manual for the correct oil type and fill level. Operating without oil will cause severe engine damage.
- **Fuel:** Fill the fuel tank with Unleaded 87+ octane gasoline. The maximum capacity is 0.7 gallons. Avoid gasoline with more than 10% ethanol.

### 4. OPERATING INSTRUCTIONS

---

Follow these steps for safe and effective operation of your Landworks GUO125 Leaf Blower.

#### Starting the Engine:

1. Ensure the fuel tank is filled and engine oil is at the correct level.
2. Turn the engine switch to the "ON" position.
3. Engage the choke if the engine is cold.
4. Pull the starter cord firmly until the engine starts.
5. Once started, gradually disengage the choke.



The ergonomic handle and all-terrain wheels provide

comfortable and efficient operation.



Adjust the 90-degree flow angle to direct airflow precisely where needed.

### Maneuvering and Airflow Control:

- The 8-inch 360-degree swivel front wheel and 10-inch rear wheels allow for smooth navigation across various terrains.
- Utilize the 90-degree adjustable flow angle to optimize debris movement and achieve desired results.

Your browser does not support the video tag.

A review video demonstrating the walk-behind leaf blower in action, highlighting its operational effectiveness.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Landworks GUO125 Leaf Blower.

### General Maintenance Tips:

- **Engine:** Regularly check and change the engine oil as per the engine manufacturer's recommendations. Inspect the air filter and spark plug periodically.
- **Impeller Inspection:** Frequently inspect the 13.5-inch metal impeller for any signs of damage, cracks, or wear. A damaged impeller can lead to severe vibrations, reduced performance, and potential safety hazards. If damage is found, replace the impeller immediately.
- **Cleaning:** Keep the blower housing and engine free of debris. Clean the air intake and discharge areas to ensure unrestricted airflow.
- **Storage:** When storing the blower for extended periods, drain the fuel tank or use a fuel stabilizer. Store in a dry, protected area.



Regularly inspect the impeller and housing for debris or damage to maintain optimal performance.

## 6. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Landworks GUO125 Leaf Blower.

Problem	Possible Cause	Solution
Engine does not start	No fuel, incorrect choke setting, engine switch off, no engine oil.	Check fuel level, adjust choke, turn engine switch to ON, add engine oil.
Reduced blowing power	Clogged air intake/discharge, damaged impeller.	Clear any obstructions. Inspect impeller for damage and replace if necessary.
Excessive vibration or unusual noise	Damaged or unbalanced impeller, loose components.	Immediately shut off the engine. Inspect the impeller for damage. Check all bolts and fasteners for tightness. Contact customer support if the issue persists.
Front wheel issues (e.g., bending, not turning)	Damage to the front wheel support bracket or swivel mechanism.	Inspect the front wheel assembly for damage. If the bracket is bent or broken, contact customer support for replacement parts.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Landworks customer support for assistance.

## 7. SPECIFICATIONS

Detailed technical specifications for the Landworks GUO125 Wheeled Walk-Behind Leaf Blower.

- **Model Number:** GUO125

- **Engine:** 7HP 212cc 4-Stroke Single Cylinder OHV Gas Engine
- **Max Output Power:** 4.1 kW
- **Wind Force Speed:** 150-200 MPH
- **Air Flow Capacity:** 1270-2000 CFM
- **Max Rotation Speed:** 3600 RPM
- **Impeller Size:** 13.5 inch (340mm)
- **Fuel Type:** Unleaded 87+ octane Gasoline (10%< less ETHANOL recommended)
- **Fuel Tank Capacity:** 0.7 gallons
- **Rear Wheels:** (2) Rugged All Terrain 10 inch
- **Front Wheel:** (1) 8 Inch 360-Degree Swivel
- **Adjustable Flow Angle:** 90 Degrees
- **Noise Level:** 70 Decibels
- **Material:** Heavy-duty powder-coated heat-treated rust-resistant steel, Cast Iron
- **Dimensions (L x W x H):** 26.6" x 22.5" x 22.3"

## 8. WARRANTY AND SUPPORT

---

For warranty information, technical support, or to order replacement parts, please contact Landworks customer support.

- **Customer Support:** Refer to the contact information provided with your product packaging or visit the official Landworks website.
- **Warranty:** Product warranty details are typically included with your purchase documentation. Keep your proof of purchase for warranty claims.