

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Case Logic](#) /
- › [Case Logic Stereo Earbuds with Microphone User Manual](#)

Case Logic CLAUEB119BK

Case Logic Stereo Earbuds with Microphone User Manual

Model: CLAUEB119BK

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the Case Logic Stereo Earbuds with Microphone. These earbuds are designed to provide clear audio and convenient communication for your daily needs. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.



Figure 1: Case Logic Stereo Earbuds with Microphone. An image showing the Case Logic Stereo Earbuds, featuring the 3.5mm audio jack, the left and right earbuds with their metallic housing, and the in-line microphone with a control button.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the product. Keep this manual for future reference.

- Avoid prolonged listening at high volume levels to prevent hearing damage.
- Do not use the earbuds in situations where inability to hear ambient sounds could be dangerous (e.g., while driving, cycling, or walking in traffic).
- Keep the earbuds away from water and moisture.
- Do not attempt to disassemble or modify the earbuds. This will void the warranty.

- Keep out of reach of children and pets.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Case Logic Stereo Earbuds with Microphone (1 pair)

4. SETUP

4.1 Connecting the Earbuds

1. Locate the 3.5mm audio jack on your audio device (smartphone, tablet, laptop, MP3 player, etc.).
2. Insert the 3.5mm plug of the Case Logic Stereo Earbuds firmly into the audio jack of your device.
3. Ensure the plug is fully inserted to prevent sound distortion or loss of connection.

5. OPERATING INSTRUCTIONS

5.1 Audio Playback

- Once connected, play audio from your device. Sound will be routed through the earbuds.
- Adjust the volume using your device's volume controls.

5.2 Using the In-line Microphone

The earbuds feature an in-line microphone and a control button for convenient call management and media control.

- **Answering/Ending Calls:** Press the control button once to answer an incoming call. Press it again to end an active call.
- **Playing/Pausing Music:** Press the control button once to play or pause music playback.
- **Skipping Tracks:** Press the control button twice quickly to skip to the next track. Press it three times quickly to go back to the previous track.
- **Voice Assistant:** Press and hold the control button for a few seconds to activate your device's voice assistant (e.g., Siri, Google Assistant).

6. MAINTENANCE

6.1 Cleaning

- Gently wipe the earbuds and cable with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- For the ear tips, you may carefully remove them and clean with a mild soap solution, then rinse thoroughly and ensure they are completely dry before reattaching.

6.2 Storage

- When not in use, store the earbuds in a clean, dry place, preferably in a protective pouch or case to prevent tangling and damage.
- Avoid extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or distorted sound	Plug not fully inserted. Device volume too low or muted. Incorrect audio output selected on device. Damaged cable or plug.	Ensure the 3.5mm plug is fully inserted into the audio jack. Increase the volume on your device. Check your device's audio settings to ensure the correct output is selected. Try the earbuds with another device. If the problem persists, the earbuds may be damaged.
Microphone not working	Plug not fully inserted. Device microphone settings. Application microphone access.	Ensure the 3.5mm plug is fully inserted. Check your device's microphone input settings. Ensure the application you are using has permission to access the microphone. Test with another device or application.
Control button not responding	Incompatibility with device. Damaged button.	Some older devices may not fully support all in-line control functions. Try with another compatible device. If the issue persists, the button may be faulty.

8. SPECIFICATIONS

Model Name	Case Logic
Model Number	CLAUEB119BK
Ear Placement	In Ear
Color	BLACK
Connectivity Technology	Wired (3.5mm Jack)
Included Components	Caselogic Stereo Earbuds W/Mic
Item Weight	1 Pounds (approx. 0.45 kg)
Product Dimensions	1 x 1 x 1 inches (approx. 2.54 x 2.54 x 2.54 cm)
UPC	805112026333
Manufacturer	Caselogic
Date First Available	May 23, 2019

Note: Specifications are subject to change without notice.

9. WARRANTY INFORMATION

Case Logic products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Case Logic website. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, encounter issues, or require technical assistance with your Case Logic Stereo Earbuds, please contact our customer support team:

- **Website:** Visit the official Case Logic website for FAQs, support resources, and contact information. [Case Logic Store on Amazon](#) (Note: This link directs to the brand's store on Amazon, for general support, please search for the official Case Logic website.)
- **Email/Phone:** Refer to the contact details provided on the Case Logic website or product packaging.

When contacting support, please have your product model number (CLAUEB119BK) and purchase details ready.