

[manuals.plus](#) /› [Westinghouse](#) /› [Westinghouse WEVC01 Cordless Vacuum Cleaner User Manual](#)

Westinghouse WEVC01

Westinghouse WEVC01 Cordless Vacuum Cleaner User Manual

Model: WEVC01

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Exercise extra care when cleaning on stairs.
- Do not use to pick up large objects or sharp objects like glass, nails, screws, or coins.
- Always ensure the vacuum is fully assembled before use.

PRODUCT OVERVIEW

The Westinghouse WEVC01 is a 130W cordless vacuum cleaner designed for efficient home cleaning. It features a powerful lithium-ion battery, offering up to 40 minutes of operation on low speed and 25 minutes on high speed. The vacuum includes a hygienic one-button dustbin emptying system and an LED-equipped power brush for improved visibility under furniture.



Image: The Westinghouse WEVC01 Cordless Vacuum Cleaner, fully assembled in its stick configuration, showcasing its red and black design.

Its lightweight design and cordless operation provide flexibility and ease of use for various cleaning tasks.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- Main Vacuum Unit (Motor and Dustbin)
- Extension Tube
- Motorized Floor Brush with LED Lights
- 2-in-1 Crevice Tool
- Square Nozzle
- Charging Station

- Power Adapter
- User Manual (this document)



Image: The main vacuum unit placed in its charging station, with the 2-in-1 crevice tool and square nozzle attached to the station for storage.

SETUP

Follow these steps to assemble your Westinghouse WEVC01 Cordless Vacuum Cleaner:

- 1. Charge the Battery:** Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging station, then place the main vacuum unit onto the charging station. The charging indicator light will illuminate. A full charge takes approximately 4-5 hours.
- 2. Attach the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
- 3. Attach the Floor Brush:** Insert the motorized floor brush into the other end of the extension tube until it clicks securely.
- 4. Attach Accessories (Optional):** For handheld use, you can attach the 2-in-1 crevice tool or square nozzle directly to the main vacuum unit. For extended reach, attach them to the extension tube.

OPERATING INSTRUCTIONS

Operating your vacuum cleaner is straightforward:

- 1. Power On/Off:** Press the power button on the handle to turn the vacuum cleaner on. Press it again to turn it off.
- 2. Adjust Suction Speed:** The vacuum has two speed settings. Press the speed control button (usually near the power button) to switch between low and high suction modes.
- 3. Using the Floor Brush:** For general floor cleaning, use the motorized floor brush. The integrated LED lights will illuminate the cleaning path, making dirt visible in dark areas.
- 4. Using Accessories:** For specific tasks like cleaning crevices, upholstery, or tight spaces, detach the extension tube and floor brush, then attach the 2-in-1 crevice tool or square nozzle directly to the main unit.
- 5. Battery Life:** The vacuum provides approximately 35-40 minutes of runtime on low speed and 20-25 minutes on high speed when fully charged.





Image: A detailed view of the main vacuum unit, showing the transparent dustbin, motor housing, and the Westinghouse logo.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

- Emptying the Dustbin:** After each use or when the dustbin is full, press the dustbin release button to hygienically empty its contents into a trash receptacle.
- Cleaning the Filters:** The vacuum features a HEPA filter. Regularly check and clean the filters. Twist and pull to remove the filter assembly from the dustbin. Tap off loose dirt. If necessary, rinse the filters with cold water. Ensure filters are completely dry before reinserting them. Do not use the vacuum with wet filters.
- Cleaning the Brush Roll:** Periodically check the motorized floor brush for tangled hair or debris. Turn off the vacuum, then use scissors or a brush to carefully remove any obstructions from the brush roll.
- Wiping Down the Unit:** Use a soft, damp cloth to wipe the exterior of the vacuum cleaner. Do not use harsh chemicals or abrasive cleaners.



Image: A close-up view of the motorized floor brush, highlighting the brush roll and the Westinghouse logo on the red and black casing.

TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filters are clogged Obstruction in nozzle/tube/brush	Empty the dustbin Clean or replace filters Remove any obstructions

Problem	Possible Cause	Solution
Brush roll not spinning	Obstruction in brush roll Brush roll motor issue	Clean hair/debris from brush roll Contact customer support if problem persists
Short battery life	Battery not fully charged Using high speed continuously Battery degradation	Ensure full charge (4-5 hours) Use low speed for longer runtime Contact customer support for battery replacement options

SPECIFICATIONS

Technical specifications for the Westinghouse WEVC01 Cordless Vacuum Cleaner:

Brand	Westinghouse
Model Number	WEVC01 (WFVC001)
Power	130 Watts
Voltage	5 Volts
Number of Speeds	2
Battery Type	1 Lithium-ion (included)
Operating Time (Low Speed)	35-40 minutes
Operating Time (High Speed)	20-25 minutes
Charging Time	4-5 hours
Filter Type	HEPA
Weight	3.72 Kilograms
Dimensions (L x W x H)	105 x 21 x 27 cm
Special Features	HEPA filter, Lightweight, Foldable, Bagless, Cordless

WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the warranty card included with your purchase or visit the official Westinghouse website. Please have your model number (WEVC01) and purchase date available when contacting support.