

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WOSPORTS](#) /

› [WOSPORTS Kids Walkie Talkies User Manual](#)

WOSPORTS WS-WT-H388

WOSPORTS Kids Walkie Talkies User Manual

Model: H-388

INTRODUCTION

Thank you for choosing WOSPORTS Kids Walkie Talkies. This 3-pack of two-way radios is designed for clear and reliable communication, perfect for children aged 3-12 during outdoor adventures, camping, hiking, and other activities. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance and safety.



Image: A set of three WOSPORTS H-388 Kids Walkie Talkies, showcasing their distinct red, yellow, and blue colors. These compact devices are designed for easy handling by children.

SAFETY INFORMATION

Please read and understand all safety precautions before using the walkie talkies. Keep these instructions for future reference.

- Do not expose the walkie talkies to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the devices to strong impacts. While designed to be durable, excessive force can cause damage.
- Keep batteries out of reach of small children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Turn off the walkie talkie when not in use to conserve battery life and prevent accidental transmissions.
- This product is water resistant, not waterproof. Avoid submerging in water.

Drop Resistant (1.2meters)



Image: A yellow WOSPORTS H-388 walkie talkie is depicted in a dynamic shot, emphasizing its drop-resistant design as it appears to bounce off a hard, cracked surface.

PACKAGE CONTENTS

The package includes:

- 3 x WOSPORTS Kids Walkie Talkies (Model H-388)
- 1 x User Manual

Note: AAA batteries are NOT included and must be purchased separately. Rechargeable AAA batteries are recommended for extended use.

PRODUCT OVERVIEW

The WOSPORTS H-388 walkie talkies are designed with user-friendly features for children. Key components include:

- **Antenna:** For transmitting and receiving signals.
- **LCD Display:** Shows channel, battery level, and other indicators.
- **Power/Menu Button:** To turn the unit on/off and access menu settings.
- **PTT (Push-to-Talk) Button:** Press and hold to transmit your voice.
- **Up/Down Buttons:** For navigating menus and changing settings (e.g., channel).

- **Call Button:** To send a call alert tone.
- **Flashlight Button:** To activate the built-in LED flashlight.
- **Speaker/Microphone:** For audio output and input.
- **Belt Clip:** For convenient carrying.



Image: A blue WOSPORTS H-388 walkie talkie is shown with its dimensions (150mm height, 56mm width, 23mm depth) and icons highlighting its features: 22 Channels, Clear Sound, Flashlight, and Key Lock.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the walkie talkie.
2. Press down on the clip and slide the battery cover downwards to open.
3. Insert 4 x AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery cover by sliding it upwards until it clicks into place.

Powering On/Off

- To turn on: Press and hold the **MENU/POWER** button until the LCD screen illuminates.
- To turn off: Press and hold the **MENU/POWER** button until the LCD screen turns off.



◀ LED Flashlight

Rechargeable AAA ▶
Battery is Recommended
(Battery not included)



Image: A yellow WOSPORTS H-388 walkie talkie demonstrating its LED flashlight feature. Below, the open battery compartment is visible, indicating the use of AAA batteries (not included).

OPERATING INSTRUCTIONS

Channel Selection

The walkie talkies feature 22 main channels for communication.

1. Press the **MENU** button once. The channel number on the LCD display will flash.
2. Use the **UP** or **DOWN** buttons to select your desired channel (1-22).
3. Press the **MENU** button again to confirm your selection or wait a few seconds for it to automatically set.

Sub-code (Privacy Codes)

Sub-codes help ensure privacy by filtering out unwanted conversations on the same channel. Both walkie talkies must be on the same channel and sub-code to communicate.

1. Press the **MENU** button twice. The sub-code number will flash.
2. Use the **UP** or **DOWN** buttons to select your desired sub-code.
3. Press the **MENU** button again to confirm or wait for automatic setting.

Push-to-Talk (PTT) Operation

To speak, press and hold the **PTT** button located on the side of the walkie talkie. Speak clearly into the microphone. Release the **PTT** button when you are finished speaking to listen for a response.

Call Alert Function

Press the **CALL** button (music note icon) once to send an audible call alert tone to other walkie talkies on the same channel and sub-code.

Flashlight Function

Press the **FLASHLIGHT** button (light bulb icon) once to turn the LED flashlight on. Press it again to turn it off.

Key Lock Function

To prevent accidental changes to settings, press and hold the **MENU** button until a key lock icon appears on the display. To unlock, press and hold the **MENU** button again.

Automatic Scanning

The automatic scanning feature allows you to quickly find active channels. To activate, press and hold the **UP** or **DOWN** button until the scan icon appears. The walkie talkie will scan through channels and stop on an active one. Press **PTT** to talk on that channel or **MENU** to exit scan mode.

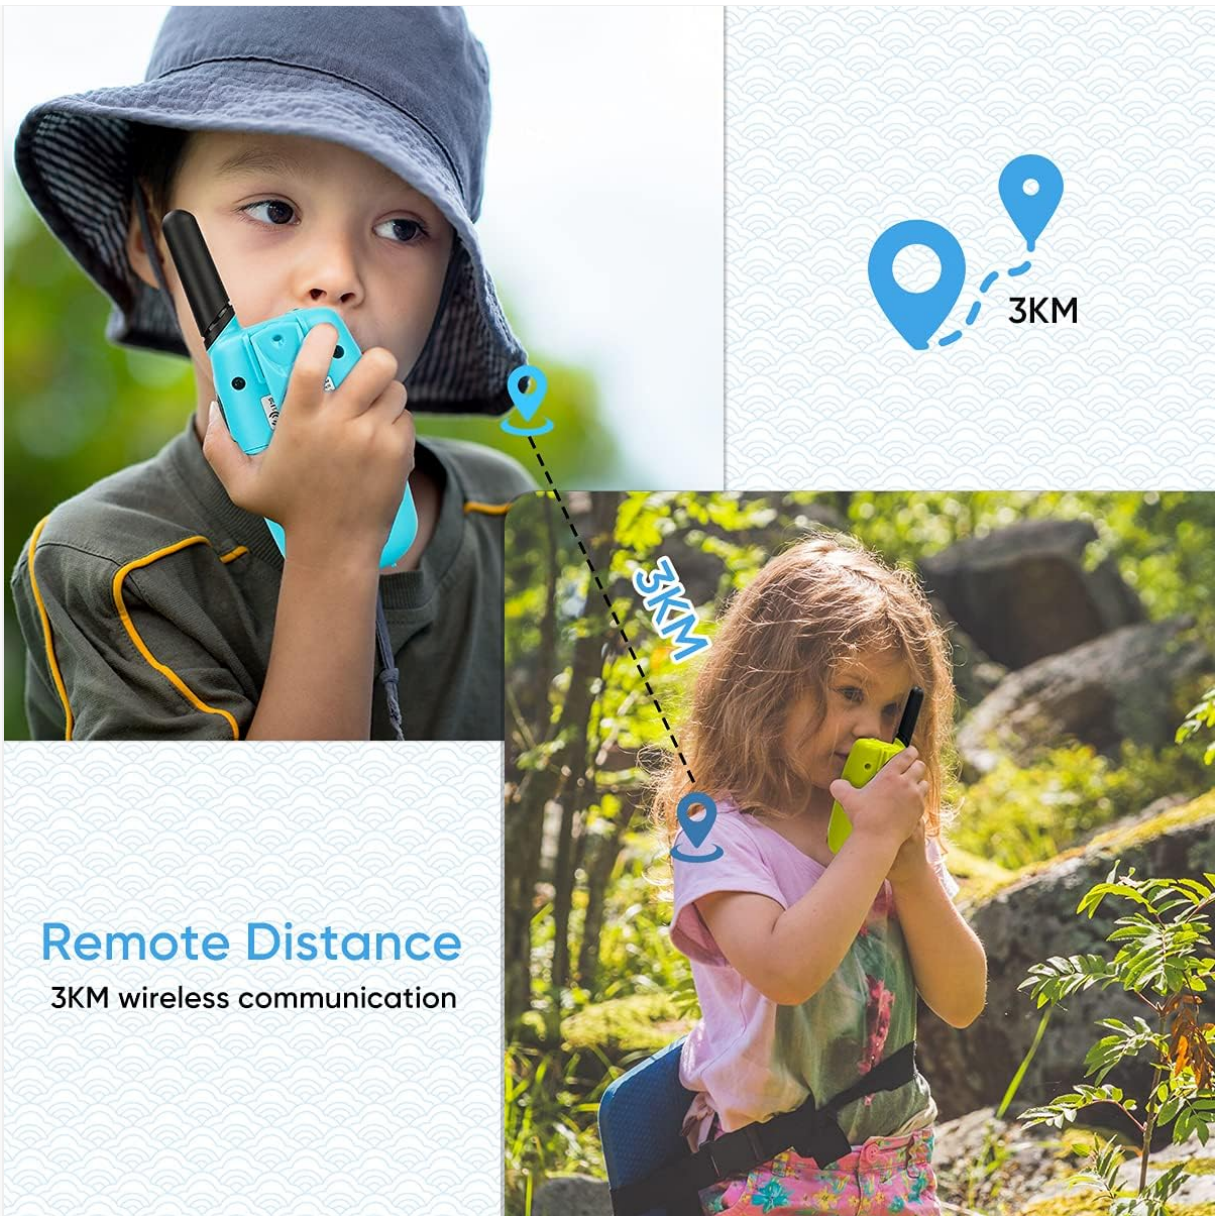


Image: Two children are shown using the WOSPORTS H-388 walkie talkies in an outdoor setting, illustrating the product's 3KM wireless communication range.

MAINTENANCE

- **Cleaning:** Wipe the walkie talkie with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the devices in a cool, dry place.
- **Battery Care:** Always turn off the walkie talkies when not in use to maximize battery life. If using rechargeable batteries, follow the manufacturer's charging instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Unit not turning on.	Batteries are dead or incorrectly installed.	Replace with fresh AAA batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Cannot communicate with other units.	Different channels or sub-codes; out of range.	Ensure all units are on the same channel and sub-code. Move closer to the other unit.
Static or unclear sound.	Interference; low battery.	Change channel/sub-code. Replace batteries. Avoid obstacles like buildings or dense foliage.
Short battery life.	Non-rechargeable batteries; unit left on.	Use high-quality rechargeable AAA batteries. Turn off the unit when not in use.

SPECIFICATIONS

- **Brand:** WOSPORTS
- **Model Number:** H-388 (WS-WT-H388)
- **Number of Channels:** 22
- **Frequency Range:** 400-470 MHz
- **Talking Range Maximum:** 3 Kilometers (approx. 1.86 miles)
- **Dimensions:** 4.57 x 2.68 x 6.18 inches (approx. 11.6 x 6.8 x 15.7 cm)
- **Item Weight:** 9.1 ounces (approx. 258 grams)
- **Power Source:** 4 x AAA batteries per unit (not included)
- **Special Features:** Adjustable volume, Wireless communication, Built-in LED Flashlight, Key Lock function, Call Alert function, Automatic Scan.
- **Water Resistance Level:** Water Resistant

WARRANTY AND SUPPORT

WOSPORTS offers a 3-month unconditional return and replacement policy for this product, along with a 12-month warranty. For any issues or support inquiries, please contact WOSPORTS customer service through the retailer where the product was purchased.

For more information or to explore other WOSPORTS products, please visit the official WOSPORTS store on Amazon: [WOSPORTS Amazon Store](#).