

[Manuals.plus](#) /

› [Kemei](#) /

› Kemei KM-290R Women's Dry Hair Trimmer User Manual

Kemei KM-290R

Kemei KM-290R Women's Dry Hair Trimmer User Manual

Model: KM-290R

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is designed for dry use only. Do not use it in the shower, bath, or with water.
- Keep the appliance away from children.
- Do not use the appliance if it is damaged or not functioning correctly.
- Ensure the appliance is fully charged before its first use to optimize battery life.
- Only use the charging cable provided with the device.
- Do not attempt to disassemble or repair the appliance yourself. Contact qualified service personnel.
- Avoid using the trimmer on irritated skin, open wounds, or infections.

2. PRODUCT OVERVIEW

The Kemei KM-290R is a compact, battery-powered dry hair trimmer designed for women. It features a single speed setting and a durable stainless steel foil head for effective hair removal.



Figure 1: Kemei KM-290R dry hair trimmer and its intended application areas.

Components:

- Trimmer Unit (with foil head)
- Charging Cable
- Cleaning Brush (if included, not explicitly stated but common)

3. SETUP

3.1 Initial Charging

Before first use, fully charge the Kemei KM-290R trimmer. This typically takes several hours. Refer to the charging indicator light (if present) for charge status.

1. Connect the charging cable to the trimmer's charging port.
2. Plug the other end of the charging cable into a suitable power outlet.
3. Allow the trimmer to charge until the indicator light signals a full charge (e.g., light changes color or turns off).
4. Unplug the trimmer once charging is complete.

3.2 Attaching/Detaching Heads (if applicable)

The KM-290R typically comes with a single foil head. If your model includes detachable heads, ensure the desired head is securely attached before use. Align the head with the trimmer body and press until it clicks into place. To detach, gently

pull the head away from the body.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To turn on the trimmer, slide the power switch to the 'ON' position. To turn it off, slide the switch back to the 'OFF' position.



Figure 2: Detail of the Kemei KM-290R showing the power switch.

4.2 Dry Hair Removal

The KM-290R is designed for dry use. Ensure your skin is clean and dry before trimming.

1. Turn on the trimmer.
2. Hold the trimmer at a 90-degree angle to your skin.
3. Gently glide the foil head against the direction of hair growth.
4. Stretch the skin taut with your free hand to ensure closer contact and better results.
5. Move the trimmer slowly and steadily over the desired area.
6. After use, turn off the trimmer and clean it as described in the Maintenance section.

5. MAINTENANCE

Regular cleaning and proper storage will ensure the longevity and optimal performance of your trimmer.

5.1 Cleaning the Trimmer Head

1. Ensure the trimmer is turned off and unplugged from any power source.
2. Remove the foil head by gently pulling it upwards.
3. Use the provided cleaning brush to brush away any accumulated hair from the foil and the internal blades.
4. Do not rinse the foil head or the trimmer body with water, as this appliance is for dry use only.
5. Once clean, reattach the foil head securely to the trimmer body.

5.2 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

5.3 Battery Care

To maintain battery health, avoid completely draining the battery frequently. Recharge the trimmer when the power indicator suggests low battery. If storing for an extended period, charge the battery every 3-6 months.

6. TROUBLESHOOTING

If you encounter issues with your Kemei KM-290R trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer does not turn on.	Power switch is not fully engaged.	Ensure the power switch is firmly in the 'ON' position.
Poor trimming performance.	Foil head is clogged with hair.	Clean the foil head and blades thoroughly using the cleaning brush.
Poor trimming performance.	Battery is low.	Recharge the trimmer.
Trimmer is not charging.	Charging cable or adapter is faulty.	Check the charging cable and adapter for damage. Try a different compatible power outlet.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Kemei KM-290R trimmer:

- **Model Number:** KM-290R
- **Brand:** Kemei
- **Power Source:** Battery (Rechargeable)
- **Operation Type:** Dry
- **Speed Settings:** 1
- **Target Group:** Women
- **Number of Heads:** 1
- **Head Type:** Foil
- **Blade Material:** Stainless Steel
- **Included Components:** Trimmer, Battery, Charging Cable
- **Shipping Dimensions:** 22.6 x 16.86 x 6.2 cm
- **Weight:** 488 grams
- **UPC:** 791294869991
- **GTIN:** 791294869991

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or service, please refer to the warranty card included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

