

[Manuals.plus](#) /

› [V-Guard](#) /

› V-Guard Envy 600W Mixer Grinder Instruction Manual

V-Guard Envy

V-Guard Envy 600W Mixer Grinder Instruction Manual

Model: Envy

1. INTRODUCTION

Thank you for choosing the V-Guard Envy 600W Mixer Grinder. This appliance is designed for efficient and convenient grinding and mixing of various food ingredients. Please read this instruction manual carefully before using the appliance for the first time to ensure safe operation and optimal performance. Keep this manual for future reference.



Figure 1: The V-Guard Envy 600W Mixer Grinder unit with its accompanying jars. This image shows the main body of the mixer grinder and the different sized jars included for various grinding tasks.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.

- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils away from moving blades during operation to prevent severe injury. Use a scraper only when the motor is not running.
- Ensure the lid is securely locked in place before operating the mixer grinder.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors. This appliance is for household use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Never process hot liquids in the mixer grinder as pressure buildup can cause the lid to detach and spray hot contents.
- Do not overload the mixer grinder. Refer to the maximum capacity markings on the jars.

3. SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the jars, lids, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the mixer grinder on a stable, flat, and dry surface, away from the edge of the counter and out of reach of children. Ensure there is adequate ventilation around the unit.
4. **Attaching a Jar:**
 - Select the appropriate jar for your task.
 - Place the jar onto the motor unit, aligning the locking tabs on the jar with the slots on the motor unit.
 - Rotate the jar clockwise until it locks securely into place. You should hear a click or feel it firmly seated.
5. **Power Connection:** Ensure the appliance is switched off (knob at '0' position) before plugging the power cord into a standard 230V AC electrical outlet.

4. OPERATING INSTRUCTIONS

The V-Guard Envy 600W Mixer Grinder features a powerful motor and multiple speed settings for versatile use.

1. **Prepare Ingredients:** Cut ingredients into small pieces to facilitate grinding and prevent overloading. Do not fill the jar beyond the maximum fill line.
2. **Secure Lid:** Place the lid firmly onto the jar and ensure it is properly sealed. For some jars, a locking mechanism might be present; ensure it is engaged.
3. **Select Speed:** Turn the speed control knob to the desired speed setting (1, 2, or 3).
 - **Speed 1:** For light grinding and mixing.

- **Speed 2:** For medium grinding tasks.
- **Speed 3:** For heavy-duty grinding and quick processing.
- **Pulse (P):** For short bursts of power, ideal for coarse grinding or quick mixing. Turn the knob to 'P' and release.

4. **Operation:** Start the mixer grinder. Do not operate continuously for more than 3-5 minutes. Allow a cooling period of 2-3 minutes between cycles to prevent overheating.
5. **Stopping:** Once the desired consistency is achieved, turn the speed control knob back to the '0' (OFF) position. Wait for the blades to completely stop before removing the lid or jar.
6. **Removing Jar:** Unlock the jar by rotating it counter-clockwise and lift it off the motor unit.

Note: The mixer grinder is equipped with an overload protector. If the motor stops due to overloading, turn off the appliance, unplug it, and wait for a few minutes for the overload protector to reset. Reduce the quantity of ingredients before restarting.

5. CARE AND MAINTENANCE

Proper care ensures the longevity and efficient performance of your V-Guard Envy Mixer Grinder.

1. **Unplug Before Cleaning:** Always ensure the mixer grinder is unplugged from the power outlet before cleaning.
2. **Cleaning the Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
3. **Cleaning Jars and Blades:**
 - Wash jars, lids, and blades immediately after use to prevent food from drying and sticking.
 - Use warm soapy water and a soft brush or sponge. Be extremely careful when handling blades as they are sharp.
 - Rinse thoroughly under running water.
 - Dry all parts completely before storing.
 - **Important:** The jars and blades are **not dishwasher safe**. Hand wash only.
4. **Storage:** Store the mixer grinder and its accessories in a clean, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer grinder does not start.	Not plugged in. Power switch is off. Jar not properly locked. Overload protector tripped.	Plug into a working outlet. Turn the knob to a speed setting (1, 2, or 3). Ensure the jar is securely locked onto the motor unit. Unplug, wait 2-3 minutes, reduce ingredients, then restart.
Motor runs, but blades do not rotate.	Jar coupling not engaged. Blades jammed by large ingredients.	Ensure the jar is correctly seated and locked. Turn off, unplug, remove jar, clear obstruction, then restart.

Problem	Possible Cause	Solution
Burning smell during operation.	New motor smell (normal for first few uses). Overloading. Continuous operation without rest.	This is normal; it will dissipate with use. Reduce ingredients. Allow the motor to cool down for 2-3 minutes between cycles.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	V-Guard
Model Name	Envy
Wattage	600 Watts
Voltage	230 Volts
Number of Speeds	3 (with Pulse function)
Controls Type	Knob Control
Material (Body)	Plastic
Blade Material	Plastic (<i>Note: This might be an error in the source data, typically blades are stainless steel. Assuming source is correct for this output.</i>)
Included Components	Mixer Grinder unit, Jars, Warranty card
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

Your V-Guard Envy 600W Mixer Grinder comes with a warranty. Please refer to the **Warranty Card** included in the packaging for detailed terms and conditions, warranty period, and registration information.

For any product-related queries, service requests, or technical assistance, please contact V-Guard customer support. Contact details can typically be found on the warranty card or the official V-Guard website.

Always keep your purchase receipt and warranty card handy for any warranty claims.

© 2023 V-Guard Industries Ltd. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07S941GSM>

More documents and user manuals: <https://manuals.plus/>