

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 341241 Dryer Drum Belt Replacement for Magic Chef YE205KW Dryer - Installation Guide

UpStart Components AP-341241-DL711

UpStart Components 341241 Dryer Drum Belt Replacement

Installation and Maintenance Guide for Magic Chef YE205KW Dryer

[Check](#) [Maintenance](#) [Introduction](#) [Safety](#) [Installation](#) [Post-Install](#)
[Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

INTRODUCTION

This manual provides detailed instructions for the installation, maintenance, and troubleshooting of the UpStart Components 341241 Dryer Drum Belt. This replacement part is compatible with Magic Chef YE205KW dryers and other models requiring a 8066065 belt. Please read all instructions carefully before beginning any repair work to ensure safe and correct installation.

SAFETY INFORMATION

WARNING: Always disconnect power to the dryer before performing any service or maintenance to prevent electric shock or injury.

- Ensure the dryer is unplugged from the electrical outlet.
- Turn off the gas supply if working on a gas dryer.
- Wear appropriate personal protective equipment, such as work gloves, to protect hands from sharp edges or components.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep children and pets away from the work area.

TOOLS REQUIRED FOR INSTALLATION

Before you begin, gather the following common tools:

- Screwdrivers (Phillips and Flathead)
- Nut drivers or socket wrench set
- Pliers
- Work gloves
- Flashlight (optional, for better visibility)

INSTALLATION INSTRUCTIONS

The following steps outline the general procedure for replacing a dryer drum belt. Specific dryer models may vary in disassembly. Refer to your dryer's service manual for precise panel removal instructions.



Figure 1: The UpStart Components 341241 Dryer Drum Belt as supplied, ready for installation. This belt is designed for durability and compatibility with various dryer models.

1. 1. Disconnect Power and Access the Dryer Interior

Unplug the dryer from the wall outlet. If it's a gas dryer, turn off the gas supply. Carefully move the dryer away from the wall to allow access to the rear and sides. Depending on your dryer model, you may need to remove the top panel, front panel, or rear access panel to gain access to the drum and belt assembly.

2. **Remove the Old Belt**

Once the drum is accessible, locate the old dryer drum belt. It typically wraps around the dryer drum and the motor pulley, often with an idler pulley providing tension. Note the routing of the old belt. Carefully release the tension from the idler pulley and slide the old belt off the drum and pulleys. Remove the old belt from the dryer.

3. **Inspect Components**

Before installing the new belt, inspect the idler pulley, motor pulley, and drum rollers for any signs of wear or damage. Replace any worn components as necessary to ensure optimal dryer performance and prevent premature belt failure.

4. **Install the New Drum Belt**

Position the new UpStart Components 341241 belt around the dryer drum. Ensure the ribbed side of the belt faces the drum. Route the belt around the motor pulley and the idler pulley, mimicking the path of the old belt. Apply tension to the idler pulley to secure the belt in place. Rotate the drum manually a few times to ensure the belt is properly seated and moves freely without rubbing against other components.



Figure 2: A close-up view of the replacement dryer drum belt, showing its flexible and ribbed construction. The ribbed side must make contact with the motor pulley for proper operation.



Figure 3: Detailed view of the belt's surface, highlighting the multiple ribs designed for optimal grip and power transfer from the motor to the dryer drum.

5. **Reassemble the Dryer**

Once the new belt is correctly installed and tensioned, reattach any panels that were removed. Ensure all screws and fasteners are securely tightened. Double-check that no tools or loose parts are left inside the dryer.

6. **6. Reconnect Power and Test**

Plug the dryer back into the electrical outlet and turn on the gas supply if applicable. Run a short cycle (e.g., air fluff) to verify that the drum rotates smoothly and quietly. Listen for any unusual noises or vibrations.

Post-Installation Check

After completing the installation, perform these checks to ensure proper functionality:

- Verify that the dryer drum spins freely and without obstruction.
- Run a test cycle and listen for any grinding, squealing, or thumping sounds.
- Confirm that the dryer heats correctly (if applicable) and completes a full cycle.
- Ensure all access panels are securely fastened.

Maintenance Tips for Dryer Longevity

While the drum belt itself is a wear item, proper dryer maintenance can extend the life of all components, including the new belt:

- **Clean the Lint Filter:** Clean the lint filter before or after every load to maintain airflow and prevent overheating.
- **Inspect the Exhaust Vent:** Periodically check and clean the dryer's exhaust vent to prevent lint buildup, which can restrict airflow and strain the motor and belt.
- **Avoid Overloading:** Do not overload the dryer, as this puts excessive strain on the motor, drum rollers, and the drive belt, leading to premature wear.
- **Check Drum Rollers:** Periodically inspect the drum rollers for wear. Worn rollers can cause the drum to wobble and put uneven stress on the belt.

Troubleshooting Common Issues

If you encounter problems after replacing the drum belt, refer to the table below for potential solutions:

Problem	Possible Cause	Solution
Dryer drum does not spin.	Belt not properly installed or slipped off; broken idler pulley; motor issue.	Re-check belt routing and tension. Inspect idler pulley for damage. Consult a technician if motor is suspected.
Squealing or grinding noise.	Worn drum rollers; idler pulley bearing failure; belt rubbing.	Inspect and replace worn drum rollers or idler pulley. Ensure belt is not rubbing against dryer components.
Dryer runs but clothes are not drying.	Not directly related to belt, but could be clogged vent, faulty heating element, or thermostat.	Clean lint filter and exhaust vent. Check heating element and thermostat.

PRODUCT SPECIFICATIONS

- **Part Number:** 341241 (UpStart Components AP-341241-DL711)
- **Compatible with:** Magic Chef YE205KW Dryer, and other models using 8066065 belt.
- **Replaces Part Numbers:** 8066065, AP2946843, 14210003, 31001026, 31531589, 3389628, 3392665, 3394651, 3399844, 341241VP, 345473, 349533, 529597, 53-0186, 53-1080, 53-1086, 53-1528, 53-1589, 53-2671, 53-2910, 660996, 660997, 661561, 693306, 694088, 694416, 694868, 695055, 697388, 8066065, 8206, 8210, 920H4, 920H5, AH346995, AP32, EA346995, ER341241, FSP341241, LB276, LB279, P46-037, P46-149, PS346995, TJ341241, W10127457, W10131364.
- **Material:** Ultra durable, high quality material.

WARRANTY INFORMATION

This UpStart Components replacement part is not an OEM product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components. Please refer to the UpStart Components website or contact customer support for specific warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries regarding your UpStart Components 341241 Dryer Drum Belt, please contact UpStart Components customer service. Contact information can typically be found on the official UpStart Components website or on your product packaging.

Note: Always have your product model number and purchase date available when contacting support.

© 2023 UpStart Components. All rights reserved.

This manual is for informational purposes only. UpStart Components is not responsible for any damages or injuries resulting from improper installation or use of this product.