

[Manuals.plus](#) /

› [Kingbox](#) /

› Kingbox X55 MP3 Player User Manual

Kingbox SP-X55-EY-32GB-CA

Kingbox X55 MP3 Player User Manual

Model: SP-X55-EY-32GB-CA

INTRODUCTION

This manual provides comprehensive instructions for the Kingbox X55 MP3 Player. The Kingbox X55 is a portable digital music player featuring Bluetooth 4.1 connectivity, 32GB internal storage expandable up to 128GB, FM radio, voice recorder, and a pedometer function. It is designed for users seeking a compact and versatile audio device.

PRODUCT OVERVIEW



Front and side view of the Kingbox X55 MP3 Player, showcasing its compact design, screen interface, and the included wired earphones and audio cable.



SETUP

1. Charging the Device

Before first use, fully charge the Kingbox X55 MP3 Player.

- Connect the provided USB cable to the Power Supply Slot on the player.
- Connect the other end of the USB cable to a USB power adapter (5V, 0.5-1A) or a computer's USB port.
- The battery indicator on the screen will show charging status. A full charge takes approximately 1.5 hours.
- A fully charged battery provides approximately 21 hours of recording time or 8 hours in Bluetooth mode.

2. Inserting a Micro SD Card (Optional)

The Kingbox X55 comes with 32GB of internal storage. You can expand the storage up to 128GB using a Micro SD card (not included).

Built-in **32GB** Memory



The Kingbox X55 MP3 Player with a Micro SD card being inserted into its dedicated slot, illustrating the expandable memory feature.

- Locate the TF Card Slot on the side of the player.
- Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
- To remove, gently push the card inwards until it springs out.

3. Transferring Files

Connect the player to your computer using the provided USB cable. The device will appear as a removable disk. You can drag and drop music, video, and text files directly into the player's internal storage or the inserted Micro SD card.

- Supported audio formats: MP3, WMA (NO DRM), FLAC, APE, WAV.
- Supported text format for E-book: TXT.
- Supported video formats: MP4 (specific resolution/encoding may be required for optimal playback).

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, slide the Switch Button to the ON position.
- To power off, slide the Switch Button to the OFF position.

2. Basic Navigation


Use the physical buttons on the front of the device to navigate menus and control playback.

- **Center Button:** Select/Confirm.
- **Up/Down/Left/Right Buttons:** Navigate through menus and options.
- **Back Button (Curved Arrow):** Go back to the previous screen.
- **Menu Button (Three Lines):** Access context-sensitive options within an application (e.g., music settings).
- **Play/Pause Button:** Start or pause playback.
- **Previous/Next Track Buttons:** Skip to the previous or next track. Long press for fast rewind/forward.

3. Music Playback

- From the main menu, select "Music".
- Browse your music by Artist, Album, Songs, Genres, Playlists, or Folders.
- Select a song to begin playback.
- During playback, use the navigation buttons to adjust volume, skip tracks, or access playback options via the Menu button (e.g., Equalizer, Repeat Mode, Shuffle).

Deliver High Quality Music

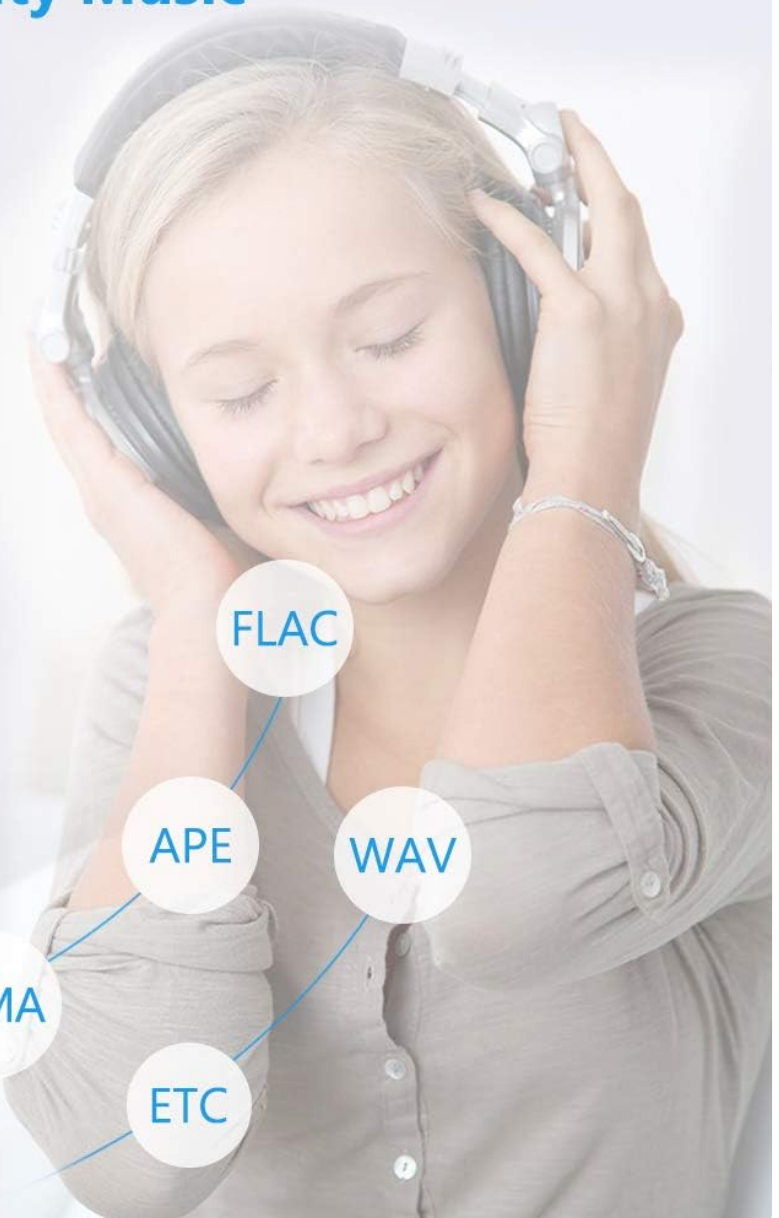

The Kingbox X55 MP3 Player screen showing music playback, emphasizing its capability to deliver high-quality audio and support various formats like MP3, WMA, FLAC, APE, and WAV.

4. Bluetooth Connectivity

The Kingbox X55 features Bluetooth 4.1 for wireless audio streaming to compatible headphones or speakers.

BT 4.1



Music



Recording



Video



FM-Radio



A-B Repeat

The Kingbox X55 MP3 Player demonstrating Bluetooth 4.1 connectivity, showing it paired with wireless earbuds and a Bluetooth speaker.

- From the main menu, select "Bluetooth".
- Turn on Bluetooth on the player.
- Ensure your Bluetooth headphones or speaker are in pairing mode.
- The player will scan for available devices. Select your device from the list to pair.
- Once paired, audio will be routed wirelessly.

5. FM Radio

- Connect wired earphones to the 3.5mm headphone jack; they act as the antenna for the FM radio.
- From the main menu, select "FM Radio".
- Use the options to auto-scan for stations or manually tune.
- You can record FM radio broadcasts directly to the device.

6. Voice Recorder

- From the main menu, select "Recorder".
- Choose "Start Voice Recording" to begin.
- Press the Play/Pause button to pause/resume recording.
- Press the Back button to stop and save the recording.

7. Pedometer Function

The built-in pedometer tracks your steps.

- From the main menu, select "Pedometer".
- Activate the pedometer mode. The device will record data when you are running or walking.
- The clip-on design allows for secure attachment to clothing during physical activity.

8. E-book Reading

- Ensure your E-book files are in TXT format.
- From the main menu, select "E-book".
- Browse and select your TXT file to begin reading.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Water Resistance:** This device is not water-resistant. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device for at least 1.5 hours.
Cannot connect via Bluetooth.	Bluetooth is off on player or receiving device; device not in pairing mode; interference.	Ensure Bluetooth is enabled on both devices and they are in pairing mode. Move closer to the device. Restart both devices.
No sound from FM Radio.	Earphones not connected or not functioning as antenna.	Ensure wired earphones are securely plugged into the 3.5mm jack.
Files not recognized.	Unsupported file format; corrupted file.	Verify file format (MP3, WMA, FLAC, APE, WAV for audio; TXT for E-book). Try re-transferring the file.
Device freezes or is unresponsive.	Software glitch.	Press and hold the power button for 10-15 seconds to force a restart. If issue persists, ensure battery is charged and try again.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Kingbox
Model	X55 (SP-X55-EY-32GB-CA)
Internal Storage	32 GB
Expandable Memory	Up to 128 GB (Micro SD card not included)
Bluetooth Version	4.1
Screen Size	1.5 Inches
Battery Life (Music Playback)	Approx. 20 hours
Battery Life (Bluetooth Mode)	Approx. 8 hours
Battery Life (Recording)	Approx. 21 hours
Battery Life (Radio)	Approx. 6 hours
Charging Time	Approx. 1.5 hours (5V, 0.5-1A)
Supported Audio Formats	MP3, WMA (NO DRM), FLAC, APE, WAV
Supported Text Format	TXT
Special Features	Voice Recorder, FM Radio, Pedometer, Clip-on Design
Compatible Devices	Laptop, Earphone, Personal Computer
Dimensions	12 x 8.6 x 3.8 cm (Parcel Dimensions)
Weight	120 g (Parcel Weight)

WARRANTY AND SUPPORT

Kingbox products come with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

For technical support, warranty claims, or any questions regarding your Kingbox X55 MP3 Player, please contact Kingbox customer service.

- **Customer Service:** Refer to the contact information provided with your product packaging or visit the official Kingbox website.
- Please have your model number (SP-X55-EY-32GB-CA) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question