

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cirbic](#) /

› [Cirbic Talking Watch for Visually Impaired, Model 33c - User Manual](#)

## Cirbic 33c

# Cirbic Talking Watch for Visually Impaired, Model 33c - User Manual

BRAND: CIRBIC

Model: 33c

## Introduction

This manual provides detailed instructions for the operation and maintenance of your Cirbic Talking Watch, Model 33c. This watch is specifically designed to assist individuals with visual impairments by audibly announcing the time and date. Please read this manual thoroughly to ensure proper use and to maximize the benefits of your new watch.

## Product Features

- Clear, audible time announcement.
- Audible date announcement (month, day, day of week).
- Easy-to-read analog display with large numbers.
- Simple button operation for time and date announcements.
- Durable metal casing and comfortable leather strap.
- Quartz movement for accurate timekeeping.

## Package Contents

- 1 x Cirbic Talking Watch (Model 33c)
- 1 x User Manual

## Setup

Your Cirbic Talking Watch comes with a pre-installed LR44 battery. Before first use, ensure any plastic battery tab is removed if present. The watch hands may need to be set manually, and the spoken time and date will need to be synchronized.

1. **Initial Battery Check:** The watch uses one LR44 battery. If the watch is not speaking or the analog hands are not moving, the battery may need to be activated or replaced.
2. **Setting Analog Time:** Pull out the crown (the small knob on the side) and rotate it to set the analog hands to the correct time. Push the crown back in to start the watch movement.
3. **Synchronizing Spoken Time and Date:** Follow the instructions in the "Operating Instructions" section to set the spoken time and date to match the analog display and current calendar.



Figure 1: Front view of the Cirbic Talking Watch, Model 33c. The watch features a clear white dial with large black numbers and a black leather strap.

## Operating Instructions

The Cirbic Talking Watch has two buttons on the side, in addition to the crown for setting the analog time.

These buttons control the audible functions.

1. **Announce Time:** Press the top button once to hear the current time announced audibly.
2. **Announce Date:** Press the top button twice (within 3 seconds) to hear the current date announced (e.g., "Today is Monday, October 11th").
3. **Setting Spoken Time:**
  - Locate the recessed button (often requiring a small pointed object like a toothpick or pen tip) usually below the crown.
  - Press and hold this recessed button until you hear a beep or a voice prompt indicating "Set Hour".
  - Use the top button to advance the hour. The watch will announce each hour as it changes. Pay attention to AM/PM.
  - Press the recessed button again to move to "Set Minute".
  - Use the top button to advance the minute. The watch will announce each minute.
  - Press the recessed button a third time to exit time setting mode.
4. **Setting Spoken Date:**
  - After setting the time, or by pressing the recessed button repeatedly, you will hear prompts for "Set Year", "Set Month", "Set Day".
  - For each setting (Year, Month, Day), use the top button to advance to the correct value. The watch will announce the current selection.
  - Press the recessed button to confirm each setting and move to the next.
  - Once all date components are set, press the recessed button one last time to exit date setting mode.



Figure 2: The Cirbic Talking Watch shown next to a standard pencil for size reference. This image helps visualize the watch's dimensions.

### Video: Talking Watch Sound Sample and Setting Demonstration

Your browser does not support the video tag.

This video demonstrates the audible time and date announcement features of the Cirbic Talking Watch, Model 33c. It also shows the process of setting the spoken time and date using the side buttons and a pointed tool for the recessed button. The voice is clear and provides prompts during the setting process.

## Maintenance

- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is water-resistant, meaning it can withstand splashes or brief immersion. It is not suitable for swimming or showering.
- **Battery Replacement:** The watch uses one LR44 battery. When the voice becomes faint or the watch stops functioning, the battery needs replacement. Battery replacement can be challenging due to the watch's design, often requiring specialized tools to open the back casing. It is recommended to seek professional assistance for battery replacement if you are not experienced.

- **Storage:** When not in use for extended periods, store the watch in a dry, cool place away from direct sunlight.

## Troubleshooting

---

**Problem: The watch does not speak, or the voice is very faint.**

**Solution:** The battery may be low or depleted. Replace the LR44 battery. Ensure the battery is inserted with the correct polarity. If the issue persists after battery replacement, contact customer support.

**Problem: The analog time does not match the spoken time.**

**Solution:** The analog hands and the spoken time are set independently. First, set the analog hands using the crown. Then, follow the "Setting Spoken Time" instructions in the Operating Instructions section to synchronize the spoken time with the analog display.

**Problem: Difficulty setting the time or date using the recessed button.**

**Solution:** The recessed button requires a small, pointed object (like a toothpick, pen tip, or paperclip) to activate. Ensure you are pressing it firmly enough to register the input. Listen carefully for the voice prompts to guide you through the setting process.

**Problem: The watch is too large or heavy for the user.**

**Solution:** The Cirbic Talking Watch has a standard adult size. If the size or weight is unsuitable, consider alternative models or consult with the retailer for options. The leather strap is adjustable.

## Specifications

---

<b>Brand Name</b>	Cirbic
<b>Model Name/Number</b>	33c
<b>Display Type</b>	Analog
<b>Watch Movement Type</b>	Quartz
<b>Power Source</b>	Battery Powered (1 x LR44 required)
<b>Case Material Type</b>	Metal
<b>Band Material Type</b>	Leather
<b>Band Color</b>	Black
<b>Dial Color</b>	White
<b>Case Diameter</b>	45 Millimeters
<b>Case Thickness</b>	15 Millimeters
<b>Water Resistance Level</b>	Water Resistant
<b>Item Weight</b>	0.08 Kilograms (approx. 2.82 ounces)

## Warranty and Support

---

For warranty information or technical support regarding your Cirbic Talking Watch, Model 33c, please refer to the product packaging or contact Cirbic customer service directly. Keep your purchase receipt as proof

of purchase for any warranty claims.