



[Manuals.plus](#) /

> [ReadyWired](#) /

> ReadyWired Power Cable Cord for RCA TV Models L26WD26D, L26HD35D, L32WD26D, L32HD35A, L32HD35D - Instruction Manual

ReadyWired Power Cable for RCA TV Models L26WD26D, L26HD35D, L32WD26D, L32HD35A, L32HD35D

ReadyWired Power Cable Cord Instruction Manual

For RCA TV Models: L26WD26D, L26HD35D, L32WD26D, L32HD35A, L32HD35D

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your ReadyWired Power Cable Cord. Please read this manual thoroughly before installation and retain it for future reference. This power cable is designed to provide reliable power to compatible RCA TV models.

SAFETY INFORMATION

Observe the following safety precautions to prevent damage to the product or injury to yourself:

- Ensure the power cable is compatible with your device's power requirements before connecting.
- Do not use the power cable if it is damaged, frayed, or has exposed wires.
- Avoid placing the cable in high-traffic areas where it could be tripped over or damaged.
- Do not overload electrical outlets.
- Keep the cable away from water, heat sources, and direct sunlight.
- Always grasp the plug, not the cord, when disconnecting from an outlet or device.

SETUP

Follow these steps to connect your ReadyWired Power Cable Cord:

1. **Verify Compatibility:** Ensure your RCA TV model (L26WD26D, L26HD35D, L32WD26D, L32HD35A, L32HD35D) is listed as compatible with this power cable.
2. **Unplug Existing Cable (if any):** If replacing an old power cable, safely disconnect it from both the TV and the wall outlet.
3. **Connect to TV:** Insert the device-end connector of the ReadyWired power cable firmly into the power input port on your RCA TV. Ensure a snug fit.
4. **Connect to Power Outlet:** Plug the wall-end connector of the power cable into a standard, grounded electrical wall outlet.

5. **Power On:** Once connected, you can power on your RCA TV.



Image: The ReadyWired Power Cable Cord, featuring a standard two-prong plug for wall outlets and a figure-8 (C7) connector for compatible RCA televisions.

OPERATING INSTRUCTIONS

The ReadyWired Power Cable Cord is a passive component designed for simple plug-and-play operation. Once correctly connected to your compatible RCA TV and a power outlet, it will supply the necessary electrical power to your television. No further operational steps are required for the cable itself.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power cable:

- **Cleaning:** Disconnect the cable from both the TV and the power outlet before cleaning. Wipe the cable and connectors with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the cable in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply.
- **Inspection:** Periodically inspect the cable for any signs of damage, such as cuts, fraying, or discoloration. If any damage is observed, discontinue use immediately and replace the cable.

TROUBLESHOOTING

If you encounter issues, refer to the following table:

Problem	Possible Cause	Solution
TV does not power on.	Cable not fully connected.	Ensure both ends of the power cable are securely plugged into the TV and the wall outlet.
TV does not power on.	Wall outlet is not active.	Test the wall outlet with another device or try a different outlet. Check circuit breaker.
TV does not power on.	Power cable is damaged.	Inspect the cable for visible damage. If damaged, replace the cable immediately.

Problem	Possible Cause	Solution
Loose connection.	Incorrect cable type or worn connectors.	Ensure the cable is the correct type for your TV. If connectors are worn, replace the cable.

SPECIFICATIONS

Product Type	Power Cable Cord
Brand	ReadyWired
Compatibility	RCA TV Models: L26WD26D, L26HD35D, L32WD26D, L32HD35A, L32HD35D
Connector Type (Device)	Figure-8 (C7)
Connector Type (Wall)	2-Prong US Standard
ASIN	B07S9LP1GR
Date First Available	September 29, 2016

WARRANTY AND SUPPORT

ReadyWired products are manufactured to high-quality standards. For specific warranty information or technical support, please refer to the packaging or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

