



[Manuals.plus](#) /

› [tectake](#) /

› TecTake 800105 Garden Gazebo Tent User Manual

**tectake 400933**

# TecTake 800105 Garden Gazebo Tent User Manual

Model: 400933

## INTRODUCTION

---

Thank you for choosing the TecTake 800105 Garden Gazebo Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your gazebo. Please read these instructions carefully before use and retain them for future reference.



Image: Fully assembled TecTake 800105 garden gazebo tent in blue with three side panels featuring arched windows, set up on a green lawn.

## SAFETY INSTRUCTIONS

---

- Always assemble the gazebo with at least two people.
- Ensure all connections are secure and the gazebo is properly anchored to the ground using the provided ropes and pegs.
- Do not use the gazebo in strong winds, heavy rain, or snow. Disassemble and store it in adverse weather conditions to prevent damage.
- Keep away from open flames and heat sources. The fabric is not fireproof.
- Regularly check all components for wear and tear. Replace damaged parts immediately.
- This gazebo is intended for temporary outdoor use only.

## PACKAGE CONTENTS

---

Before assembly, verify that all parts are present and undamaged:

- 1 x Gazebo Frame (metal tubes)
- 1 x Roof Cover (polyethylene tarp)
- 3 x Removable Side Panels with Windows
- Ropes and Ground Pegs for anchoring
- Connectors and Fasteners
- 1 x Assembly Manual (this document)

## SETUP GUIDE

---

Follow these steps for proper assembly:

1. **Unpack and Sort Components:** Lay out all metal tubes, connectors, fabric parts, ropes, and pegs. Familiarize yourself with each component.
2. **Assemble the Roof Frame:** Connect the shorter metal tubes to form the roof structure using the plastic connectors. Ensure all connections are firm.



Image: The metal frame structure of the TecTake 800105 gazebo tent without the fabric cover or side panels, showing the four corner poles and roof supports.

3. **Attach the Roof Cover:** Carefully place the polyethylene roof cover over the assembled roof frame. Ensure it is centered and evenly distributed.
4. **Assemble the Leg Poles:** Attach the longer metal tubes to the roof frame corners to form the legs of the gazebo.



Image: Detailed view of the roof frame connector, a velcro strap securing the fabric to a pole, and a pole base with a ground anchor point.

5. **Raise the Gazebo:** With assistance, carefully lift the gazebo frame into an upright position.
6. **Secure the Fabric:** Use the integrated hook-and-loop fasteners (velcro straps) to secure the roof cover and side panels to the frame poles.
7. **Attach Side Panels:** If desired, attach the three removable side panels. These typically attach with hook-and-loop fasteners or ties to the frame.
8. **Anchor the Gazebo:** Use the provided ropes and ground pegs to firmly anchor each leg and corner of the gazebo to the ground. This is crucial for stability.



Image: White ropes for tensioning and metal ground pegs for securing the gazebo, with a close-up of a rope tied to a peg in the grass.

## OPERATING INSTRUCTIONS

---

The TecTake 800105 Garden Gazebo Tent is designed for temporary outdoor use, providing shelter from sun and light rain. It is suitable for family gatherings, garden parties, camping, and other outdoor events.

- **Sun Protection:** The polyethylene roof offers shade and protection from direct sunlight.
- **Rain Protection:** The material provides protection against light rain. In heavy rain, water may accumulate, and the gazebo should be taken down.
- **Side Panels:** The three removable side panels with windows can be attached or removed as needed for privacy, additional wind protection, or an open feel.

## MAINTENANCE AND CARE

---

- **Cleaning:** Clean the fabric cover and side panels with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- **Frame Care:** Wipe down the metal frame with a damp cloth to remove dirt. Ensure the frame is dry to

prevent rust.

- **Storage:** When not in use, disassemble the gazebo and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. This will prolong the product's lifespan.
- **Inspection:** Periodically inspect the fabric for tears or damage and the frame for bends or rust. Address any issues promptly.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or collapses in wind.	Insufficient anchoring; strong winds.	Ensure all ropes are taut and pegs are firmly in the ground. Disassemble in strong winds. Consider additional weights for legs in calm conditions.
Water pooling on the roof.	Heavy rain; improper tensioning of roof cover.	Ensure roof cover is taut and properly secured. Disassemble in heavy rain to prevent damage.
Fabric tears or seams come undone.	Excessive tension during assembly; sharp objects; material fatigue.	Handle fabric carefully during assembly. Avoid over-tightening. Repair small tears with appropriate fabric repair kits.
Difficulty connecting frame tubes.	Misalignment; debris in connectors.	Ensure tubes are correctly oriented. Clear any debris from connectors. Apply gentle pressure, do not force.

## SPECIFICATIONS

Feature	Detail
Brand	tectake
Model Number	400933
Material	Polyethylene (tarp), Metal (frame)
Color	Blue
Overall Dimensions (L x W x H)	3 m x 3 m x 2.5 m (approx. 9.8 ft x 9.8 ft x 8.2 ft)
Tube Diameter	Approx. 2 cm (0.8 inches)
Item Weight	Approx. 5.2 kg (11.5 lbs)
Assembly Required	Yes

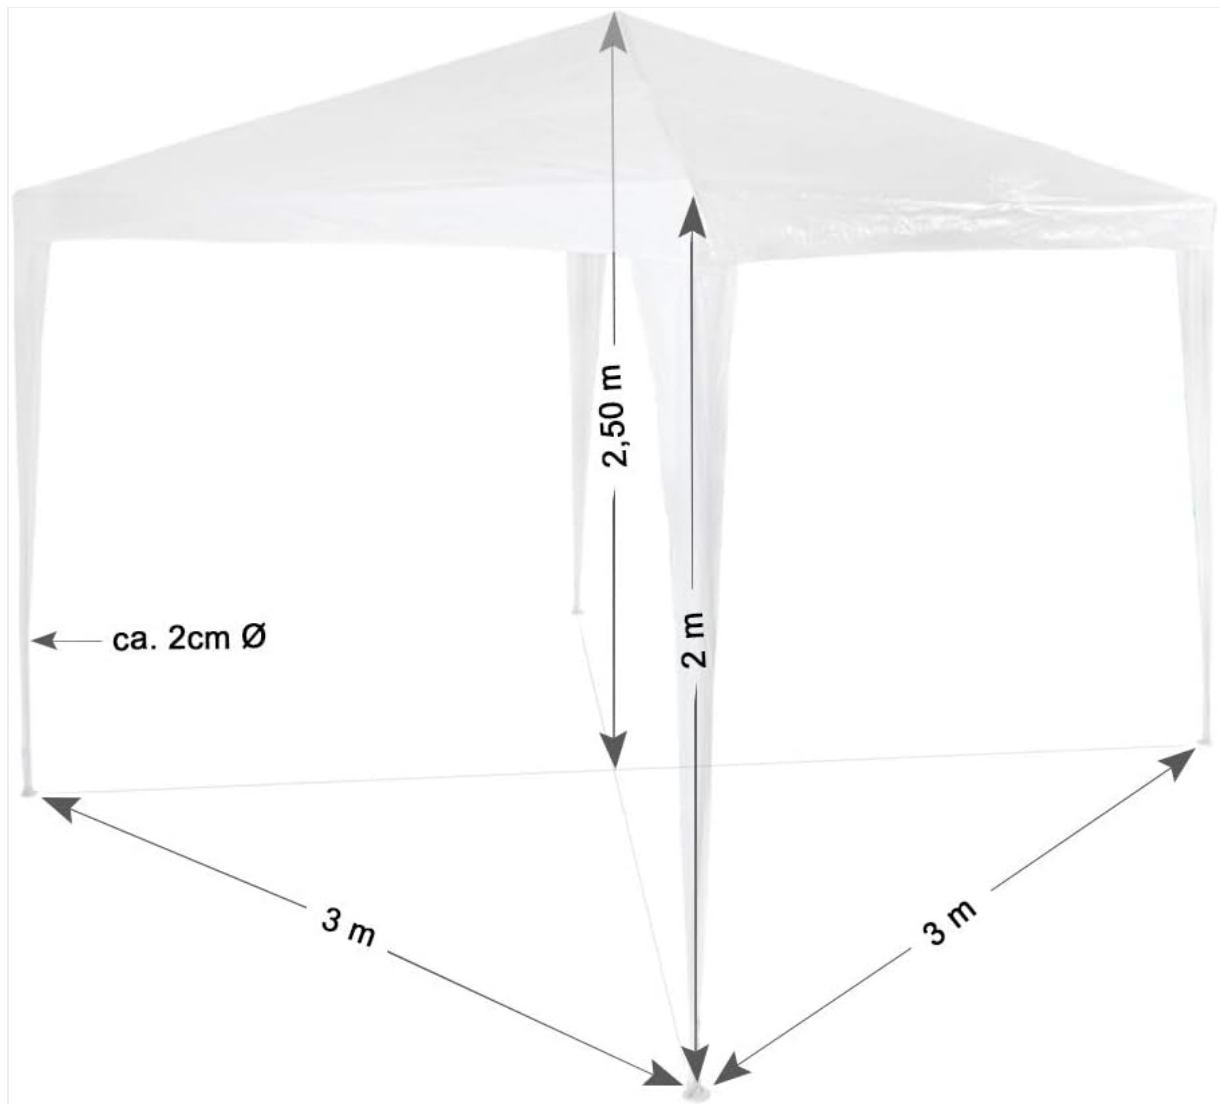


Image: Diagram illustrating the dimensions of the TecTake 800105 gazebo tent.

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the official TecTake documentation or contact your retailer. An official user manual in PDF format is available for download:

[Download Official User Manual  
\(PDF\)](#)