

Manuals.plus /

› TOSHIBA /

› TOSHIBA 43LF711U20 43-inch Smart 4K UHD with Dolby Vision TV - Fire TV User Manual

TOSHIBA 43LF711U20

TOSHIBA 43LF711U20 43-inch Smart 4K UHD with Dolby Vision TV - Fire TV User Manual

MODEL: 43LF711U20

Introduction

Welcome to the user manual for your new TOSHIBA 43LF711U20 43-inch Smart 4K UHD with Dolby Vision TV. This television features the Fire TV experience built-in, offering a seamless integration of live over-the-air TV and your favorite streaming content on the home screen. With true-to-life 4K Ultra HD picture quality and access to a vast library of movies and TV shows, Toshiba delivers a superior TV experience. The included Voice Remote with Alexa allows for easy navigation, app launching, title searching, music playback, input switching, and smart home device control using voice commands. This TV is designed for smart and simple operation; just plug it in, connect to Wi-Fi, and enjoy. Automatic over-the-air software updates ensure your TV continuously gets smarter with new Alexa skills and features.



Image: Front view of the TOSHIBA 43LF711U20 43-inch Smart 4K UHD with Dolby Vision TV, displaying the Fire TV interface with various streaming app icons.

What's in the Box

Please check that all the following items are included in your package:

- TOSHIBA 43LF711U20 43-inch Smart 4K UHD TV
- Voice Remote with Alexa (2 AAA batteries included)
- TV Stand (2 pieces)
- Power Cord
- Quick Setup Guide (this manual)

Setup

1. Attaching the TV Stand

1. Carefully place the TV face-down on a soft, clean surface to prevent scratches.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stands using the screws provided in the package. Ensure they are firmly attached.



Image: Angled view of the TOSHIBA 43LF711U20 TV, showing the attached stand.

2. Connecting Cables

- **Power:** Connect the power cord to the AC IN port on the back of the TV and then to a wall outlet.
- **HDMI Devices:** For external devices like Blu-ray players, game consoles, or cable boxes, connect an HDMI cable from the device to any of the HDMI IN ports on the TV.
- **Antenna/Cable:** To watch live over-the-air TV, connect an HD antenna (sold separately) to the ANT/CABLE IN port.
- **Network:** For a wired internet connection, connect an Ethernet cable from your router to the LAN port. Alternatively, you will connect to Wi-Fi during initial setup.



Image: Close-up of the rear input panel of the TOSHIBA 43LF711U20 TV, showing LAN, ANT/CABLE IN, and AV IN ports.



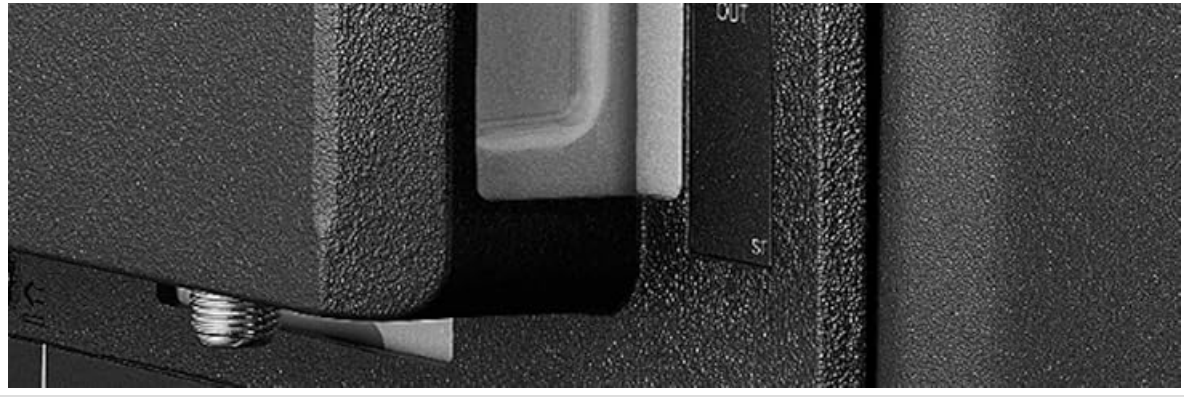


Image: Close-up of the side input panel of the TOSHIBA 43LF711U20 TV, showing USB, HDMI, Digital Audio Out, and Audio Out ports.

3. Initial Power-On and Fire TV Setup

1. Plug the TV into a power outlet.
2. Press the Power button on the remote control.
3. Follow the on-screen instructions to complete the initial setup, which includes:
 - Selecting your language.
 - Connecting to your Wi-Fi network (if not using a wired connection).
 - Signing in with your Amazon account or creating a new one.
 - Scanning for channels (if an antenna is connected).

Operating Your TV

Basic TV Functions

- **Power On/Off:** Press the **Power** button on the remote.
- **Input Selection:** Press the **Input** button to cycle through connected devices (HDMI 1, HDMI 2, TV, etc.).
- **Volume Control:** Use the **Volume Up (+)** and **Volume Down (-)** buttons.
- **Mute:** Press the **Mute** button to silence the audio.

Using the Fire TV Interface

The Fire TV home screen provides easy access to live TV, streaming apps, and connected devices. Use the navigation ring on your remote to move through menus and select items.

- **Home Screen:** Press the **Home** button to return to the main Fire TV interface.
- **Apps & Channels:** Navigate to the 'Your Apps & Channels' row to find and launch installed applications like Netflix, Prime Video, Hulu, and Disney+.
- **Live TV:** If an antenna is connected, access live over-the-air channels directly from the home screen or the Live TV menu.

Voice Remote with Alexa

Your TV comes with a Voice Remote featuring Alexa, allowing you to control your TV and smart home devices with your voice.







Image: The Voice Remote with Alexa for the TOSHIBA 43LF711U20 TV, showing buttons for power, voice control, navigation, volume, and dedicated app buttons for Prime Video, Netflix, and HBO.

- **Activate Alexa:** Press and hold the **Microphone** button on the remote.
- **Voice Commands:** While holding the button, speak clearly into the remote. Examples include:
 - "Alexa, open Netflix."
 - "Alexa, search for action movies."
 - "Alexa, switch to HDMI 2."
 - "Alexa, turn off the TV."
- **Dedicated App Buttons:** Use the dedicated buttons for Prime Video, Netflix, and HBO to quickly launch these popular streaming services.

Maintenance

To ensure the longevity and optimal performance of your TV, follow these maintenance guidelines:

- **Screen Cleaning:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution (never spray directly onto the screen).
- **Cabinet Cleaning:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners, waxes, or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked. Allow adequate space around the TV for proper airflow.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, discontinue use and contact customer support.

Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet.
No picture, but sound is present	Check the input source. Press the Input button on the remote to select the correct source (e.g., HDMI 1, TV).
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Check audio settings for external devices.
Remote control not working	Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor. Re-pair the remote if necessary (refer to Fire TV remote pairing instructions).
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting your router and TV.
Picture quality issues (e.g., blurry, distorted)	Check the resolution settings of your connected device. Ensure cables are securely connected. For antenna, try repositioning the antenna or rescanning channels.

Specifications

Feature	Detail
Brand Name	TOSHIBA
Item Model Number	43LF711U20
Screen Size	43 Inches
Display Technology	LED
Resolution	4K (3840 x 2160)
Refresh Rate	60 Hz
Aspect Ratio	16:9
Product Dimensions	9.33 x 38.11 x 23.86 inches
Item Weight	18.3 pounds
Color Name	Black
Speaker Type	Built-In
Wattage	8 watts
Batteries Required	2 AAA (included for remote)
Connectivity Technology	HDMI, NFC (for certain features)
Supported Internet Services	Netflix, Pandora, Amazon Instant Video, Hulu Plus (and more via Fire TV)

Warranty and Support

For detailed warranty information, please refer to the warranty card included with your product or visit the official TOSHIBA support website. If you require technical assistance or have questions not covered in this manual, please contact TOSHIBA customer support. Keep your purchase receipt and product serial number handy when contacting support.